

---

**Tools required:**

 
- 1 x drill with assorted drill bits
- 1 x cross head screwdriver
- 1 x pen / pencil

No specialist knowledge or DIY experience is required to fit our blinds, but note that certain parts of this process are much easier if you have another person with you to help you install.


## Installing the hooks

1


**Top-fix  
(recess fitting)**

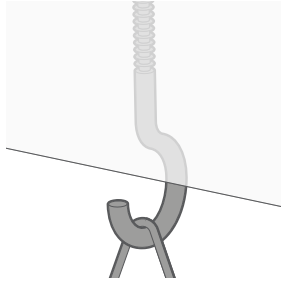


**Face-fix  
(exact fitting)**

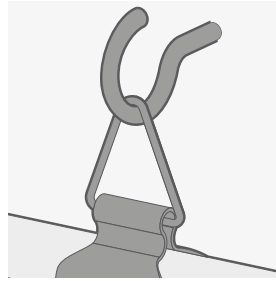 

 
The hooks can be installed in 2 different ways - they can be top-fixed into the lintel of the recess, or face-fixed into the wall. Top-fixing is recommended if you're fitting the blind inside the recess. If you are fitting the blind onto the wall above the recess then you will face-fix the hooks.

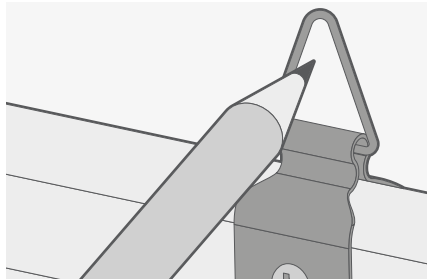

 Start by marking out the positions for the hooks - an easy way to do this is to use the blind as a guide. Hold the blind in the position you'd like to fit it and use your pen or pencil to make a mark through each of the hangers on the top bar.

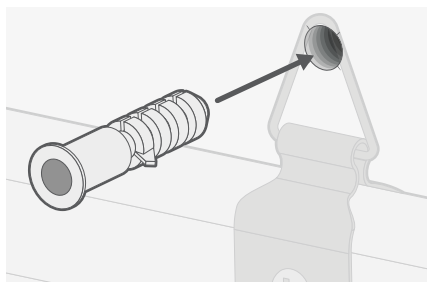

 
Using a drillbit that matches the diameter of the supplied wall plugs, drill a hole at each mark and insert a wall plug into each.

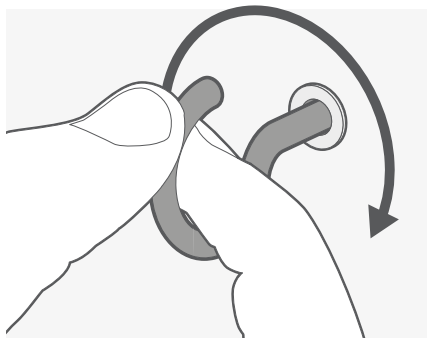


Twist a hook into each of the plugs. You can do this by hand.

**Installing and operating the blind**

 
**2**

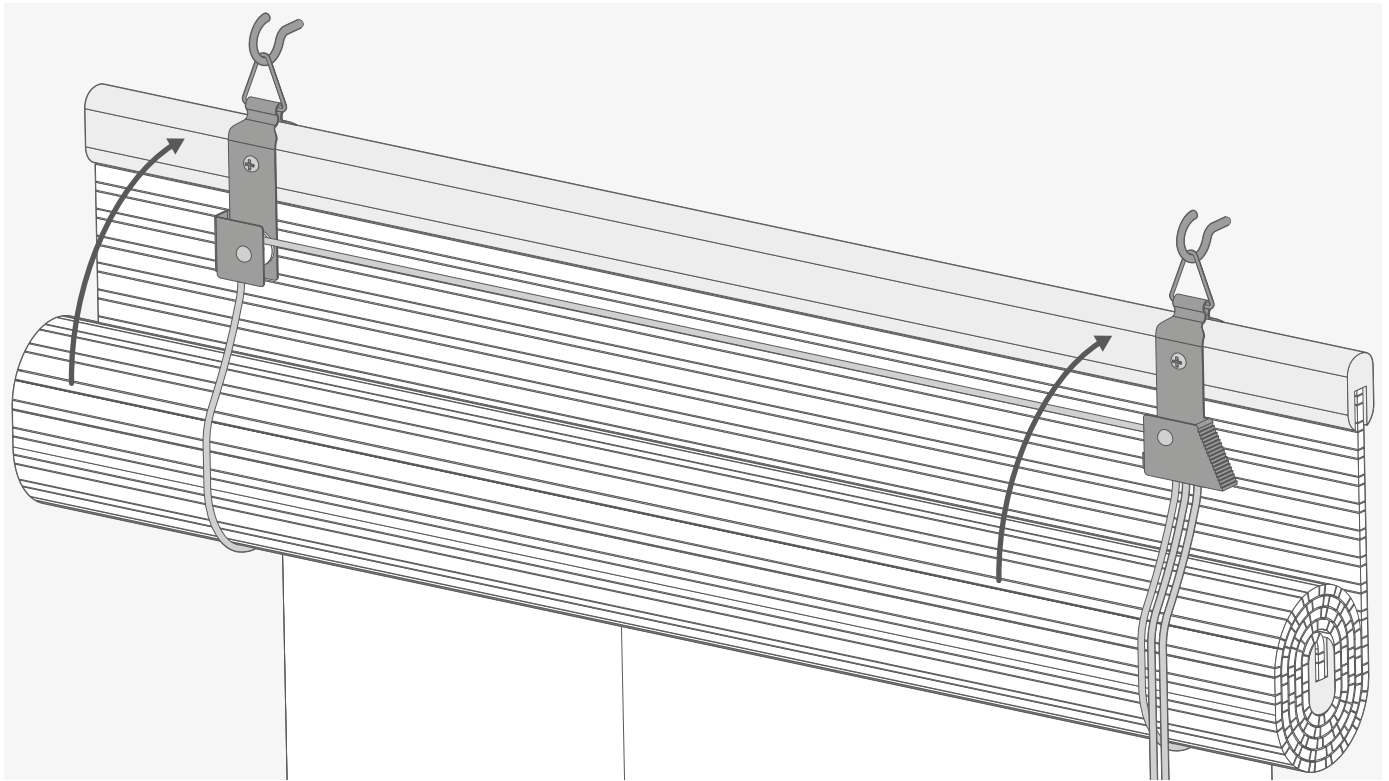

 
Installing the blind is as easy as lifting it up and hooking the hangers onto your hooks.

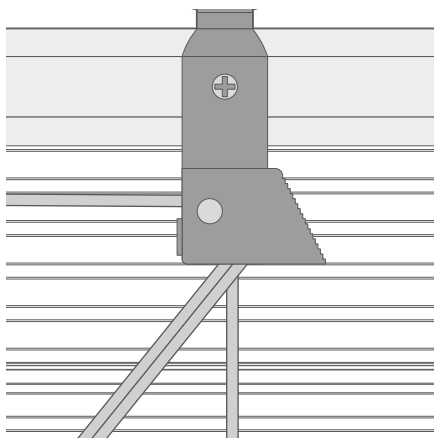

**Unlock**

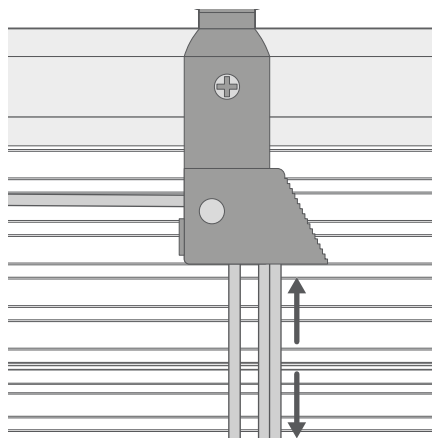 

**Pull cord to raise / lower**

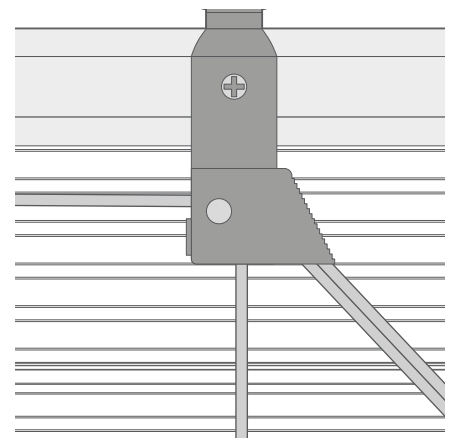 

**Lock**

Using the blind is just as easy as installing it. A simple mechanism grips the cord to lock the blind in position when raised.

Unlock this mechanism by pulling the cord to the left, then pull or release the cord straight up or down, to raise or lower the blind.

When the blind is at the desired height, pull the cord to the right and release it to engage the lock.

 
## Child safety

3


The blind is provided with a safety cleat, to wrap the lift cord around when the blind is not in use, especially when the blind is raised.

The top of the blind must be installed at a height of at least 150cm from the floor.

The safety cleat should be installed on the wall as close to the top of the blind as you can comfortably reach.

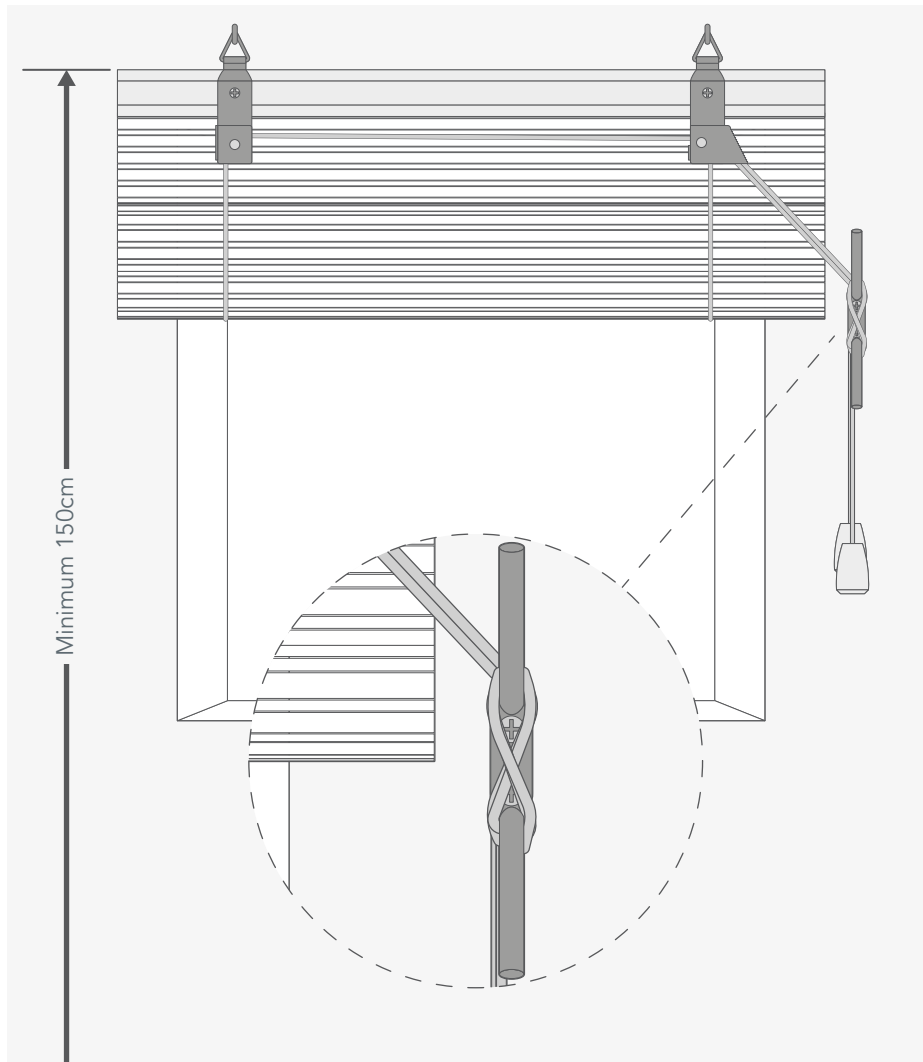


 
Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product.

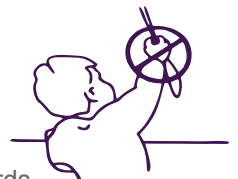

To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck.

Move beds, cots and furniture away from window covering cords.

  Do not tie cords together. Make sure cords do not twist and create a loop.

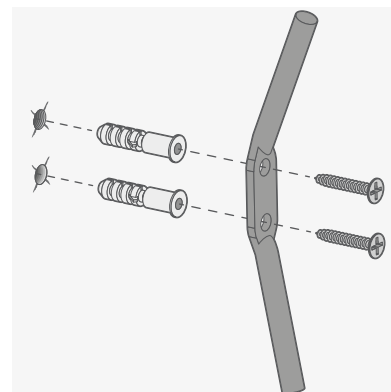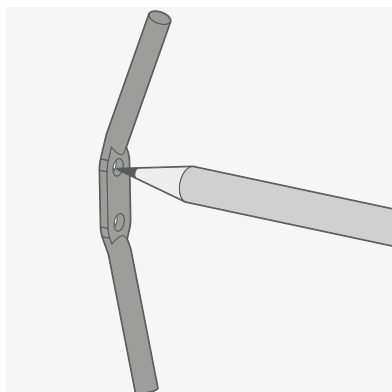

Hold the cleat in the desired position and mark the screw holes with a pencil. Using a drillbit the same diameter as the wall plugs provided, drill a hole at each mark. Then, insert the plugs and use the screws provided to secure the cleat against the wall.