



## Unpacking the blind and preparing the window

1

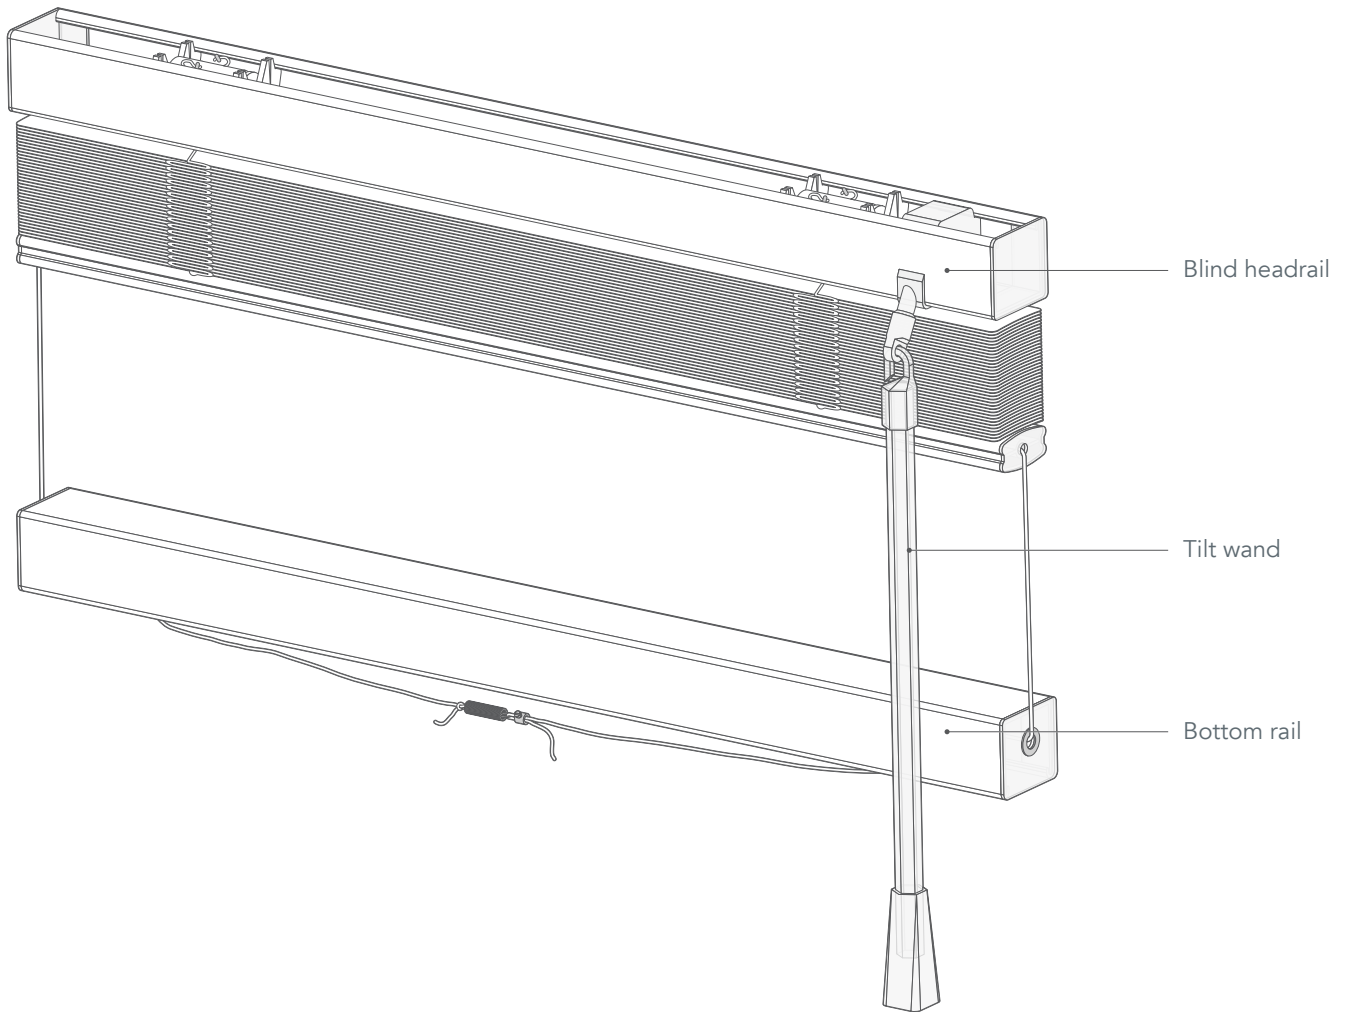


When you first unwrap the blind you'll find that it's already fully assembled, with the cords connected to both the blind and the bottom rail, and the tilt wand hooked on ready to use.

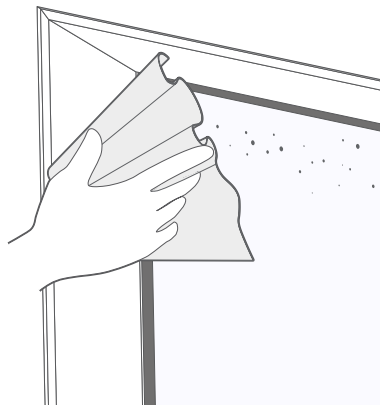


Prepare the windows you'll be fitting the blinds to by giving them a thorough clean, especially at the top and bottom. Give it some time afterward to make sure the glass is fully dry before fitting the blind. Sealed alcohol wipes will be provided with your blind, for this purpose.

**Fitting the blind**


**2**

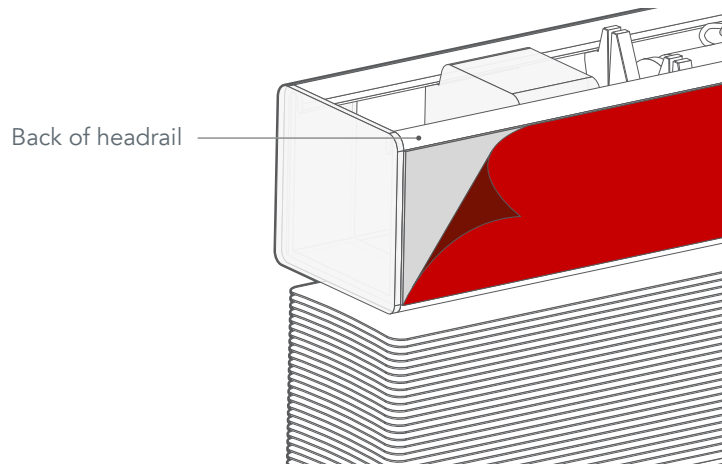


On the back of the headrail is an adhesive strip. Peel the cover from the strip, on the headrail only for now.

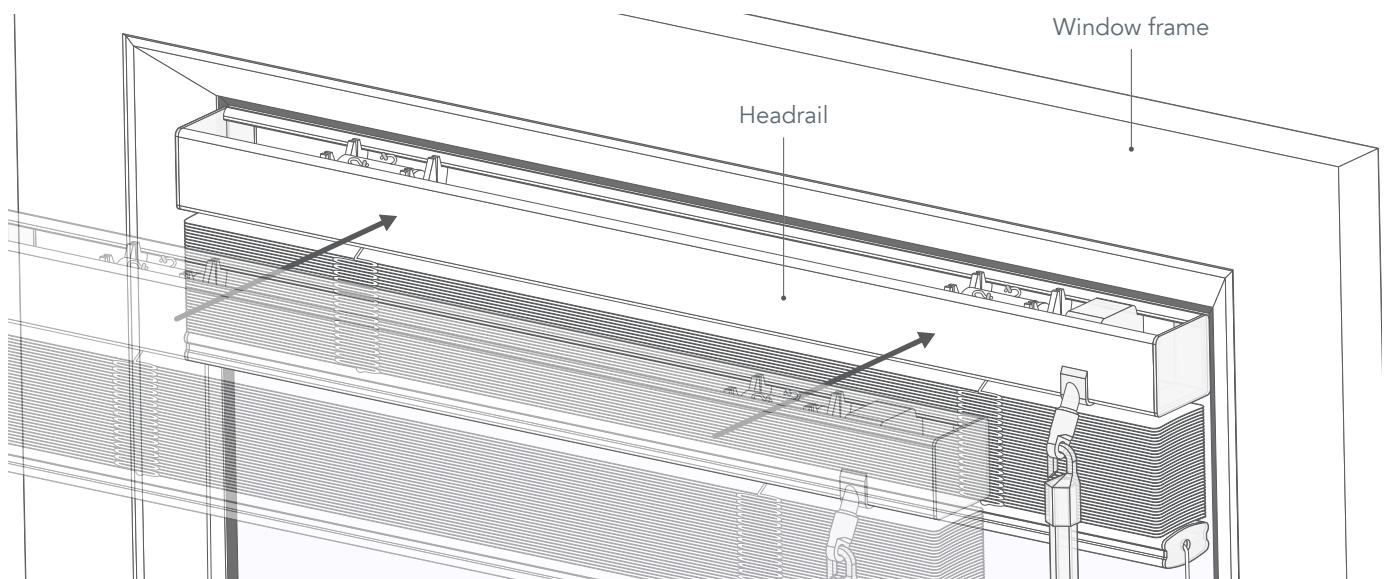

Carefully line up the headrail with the top of the visible glass. Make sure that the top of the rail is flush with the edge of the rubber, if the seal is visible, or the edge of the frame if it is not. Press the adhesive-backing to the glass and hold until it feels secure.

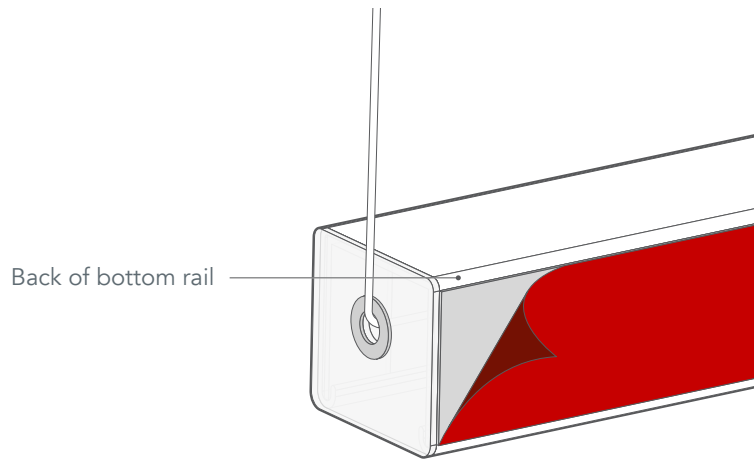

Peel the adhesive cover from the strip on the bottom rail.


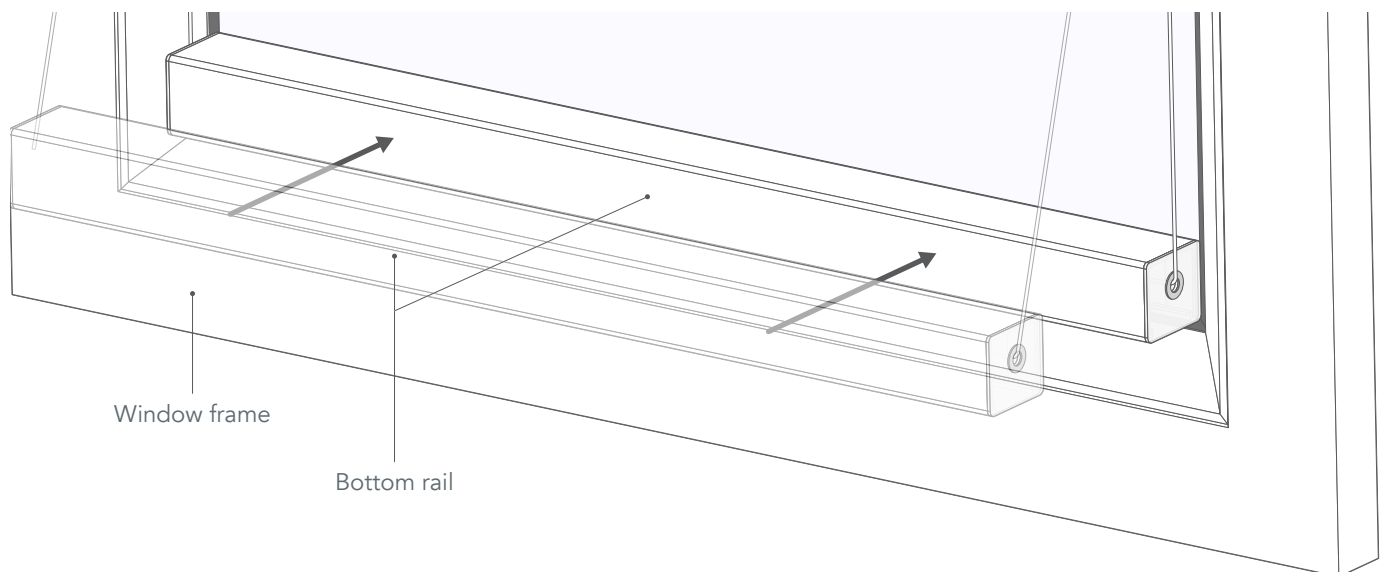


Pull the bottom rail out towards the bottom of the window, stretching out the cords. Just like the top rail, line up the bottom rail carefully with the edge of the visible glass and press it into place.

## Additional Information

### Adjusting the cord tension (optional)

If you find that the blind does not stay in position when fully raised and begins to slip down, this usually means that there isn't quite enough tension in the blind's cords to hold it up. Increasing the tension is easy to do and will usually resolve the problem.

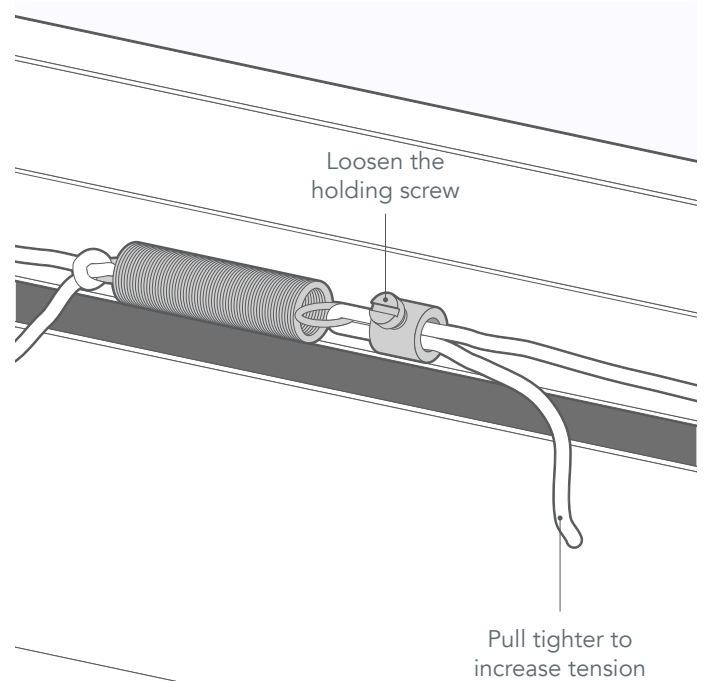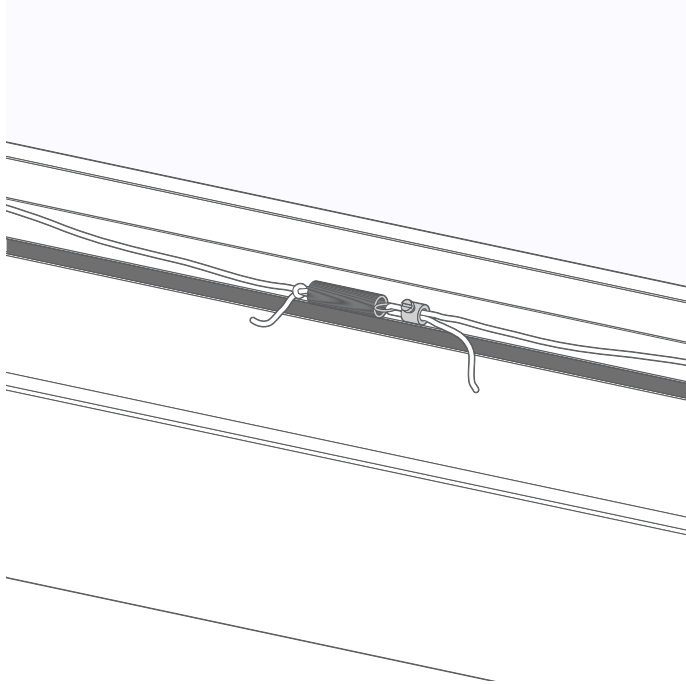

Pull out the cord from inside the bottom rail. One side will be tied to the spring, whilst the other is secured by a holding screw. Hold onto the cords that are secured by the screw, and loosen the screw so that the cords can move. Pull the end of the cord through (away from the spring) to increase the cord tension - only make a small adjustment to start, pulling through roughly 10mm of cord, then tighten the holding screw. Test the blind by fully raising it, to see if it stays in position. If it does then the tension is correct; if it does not, simply add another small amount of tension and try again. Repeat until the tension is correct, then tuck the cord and spring back behind the bottom rail when you're finished.