


Measuring for your new blinds is easier than you might think! All you have to do is follow our simple tips, double-check everything you do, and set aside some time to do it. Happy measuring!

This guide works for:

- EasiFIT Pleated blinds
- PerfectFIT Pleated blinds
- PerfectFIT Venetian blinds
- ClickFIT BiFold blinds

EasiFIT & ClickFIT blinds

EasiFIT blinds are specially designed for UPVC windows and doors with a rubber bead (and PVC and aluminium BiFolding doors, in the case of our ClickFIT blinds), and measuring for them couldn't be easier. All you need is a pen, a pad and a metal tape measure.

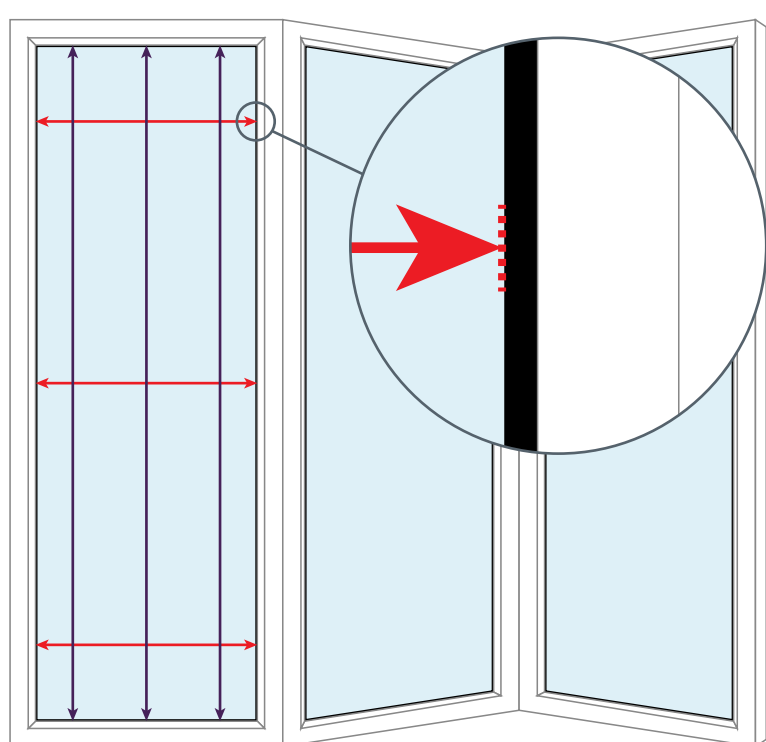

Top-Tip:

Don't forget to measure each window and door individually; don't assume that they're all the same size.


Simply measure the visible glass area of each window and door. Measure from the inside edges of the frame where the glass meets the rubber bead. **You shouldn't include any of the beading or rubber seals in your measurements.**

Measure the top, the middle and the bottom of the glass to the nearest mm and **note down the shortest measurement.**

Then simply repeat this step for the drop, measuring the left, the right and the centre. **Again, take a note of the shortest measurement.**



PerfectFIT blinds

PerfectFIT blinds are specially designed for UPVC windows and doors with a rubber bead, and measuring for them couldn't be easier. All you need is a pen, a pad and a metal tape measure.

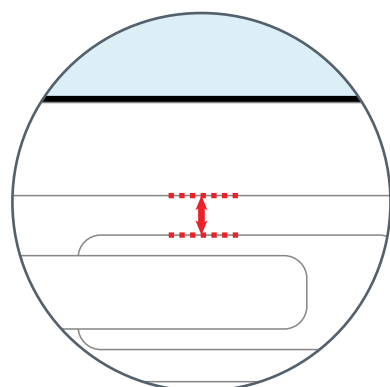


First, check the distance between the edge of the window beading and any obstructions, such as window handles. **This should be more than 6mm.** Don't worry if it isn't, there are ways around it so give us a call to place the order and we'll go through it with you.

Check also that the rubber beading **does not extend into the glass area by more than 6mm.**

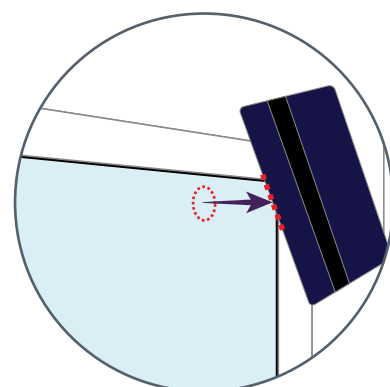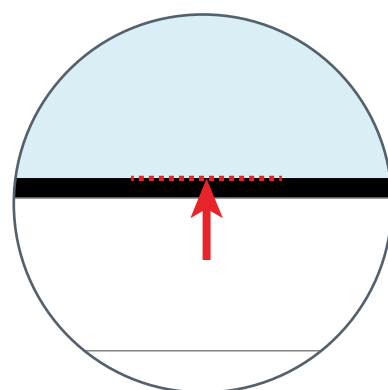

Next, **measure the depth of the window from glass to beading.** To do this, simply place a credit card over the corner of the frame and use a metal ruler to take the measurement. This will usually be between 18 and 24mm.

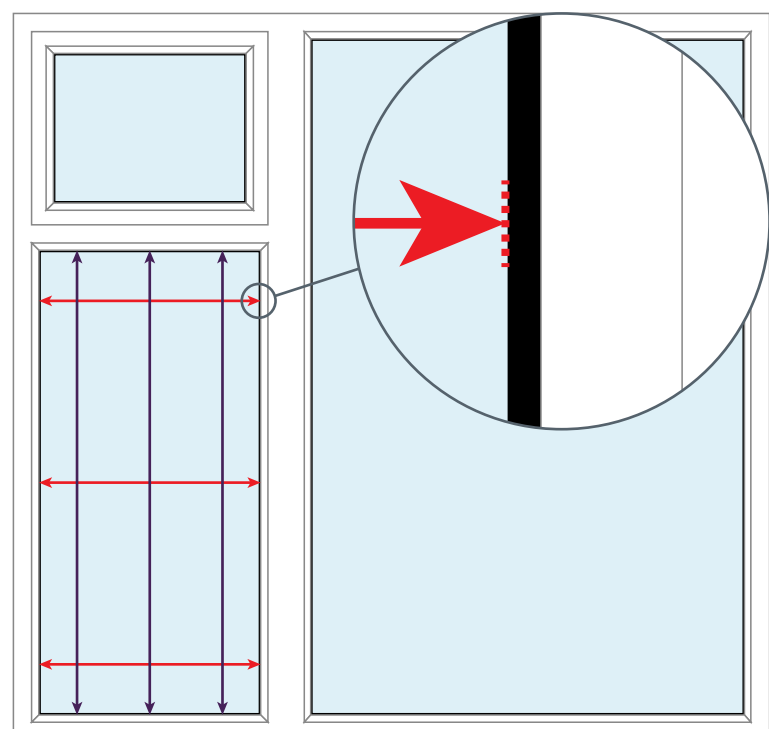

Then measure the visible glass area of each window and door. Measure from the inside edges of the frame where the glass meets the rubber bead. **You shouldn't include any of the beading or rubber seals in your measurements.** Measure the top, the middle and the bottom of the glass to the nearest mm and **note down the shortest measurement.**

Then simply repeat this step for the drop, measuring the left, the right and the centre. **Again, take a note of the shortest measurement.**

Top-Tip:

Don't forget to measure each window and door individually; don't assume that they're all the same size.