


Measuring for your new blinds is easier than you might think! All you have to do is follow our simple tips, double-check everything you do, and set aside some time to do it. Happy measuring!

Recess fitting


Measure the full width and height of the recess [the size of the hole if you like] and we will make the appropriate deductions to ensure a perfect fit. Please note that our ClickLock Venetian Blinds are only suitable for recess fitting, and for windows that open outwards.

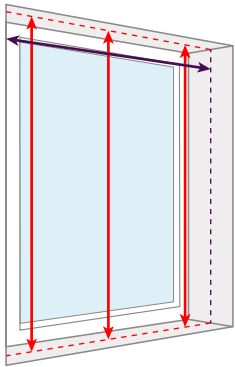

- **For the width**, measure from wall-to-wall inside the recess, at the top where the blind will be installed
- **For the drop**, measure the full height of the recess in 3 places, and use the smallest measurement to order
- **Don't make any deductions**, we'll deduct a small amount from the width and drop to ensure your blind fits perfectly
- **Use a metal tape measure**, cloth ones can stretch and give you inaccurate measurements


Top-Tip:

Check that your recess is deep enough to fit the blind into, also bearing in mind any obstructions such as handles.

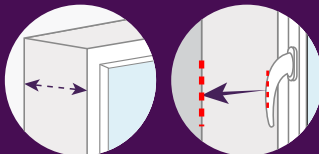

Required Depth

65mm

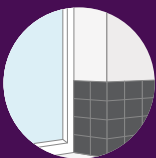

Top-Tip:

Note that if your recess has tiles part way up (a common feature in bathrooms especially) then our ClickLock Blinds will not be suitable. The same is true for recesses that contain skirting boards or picture rails.