



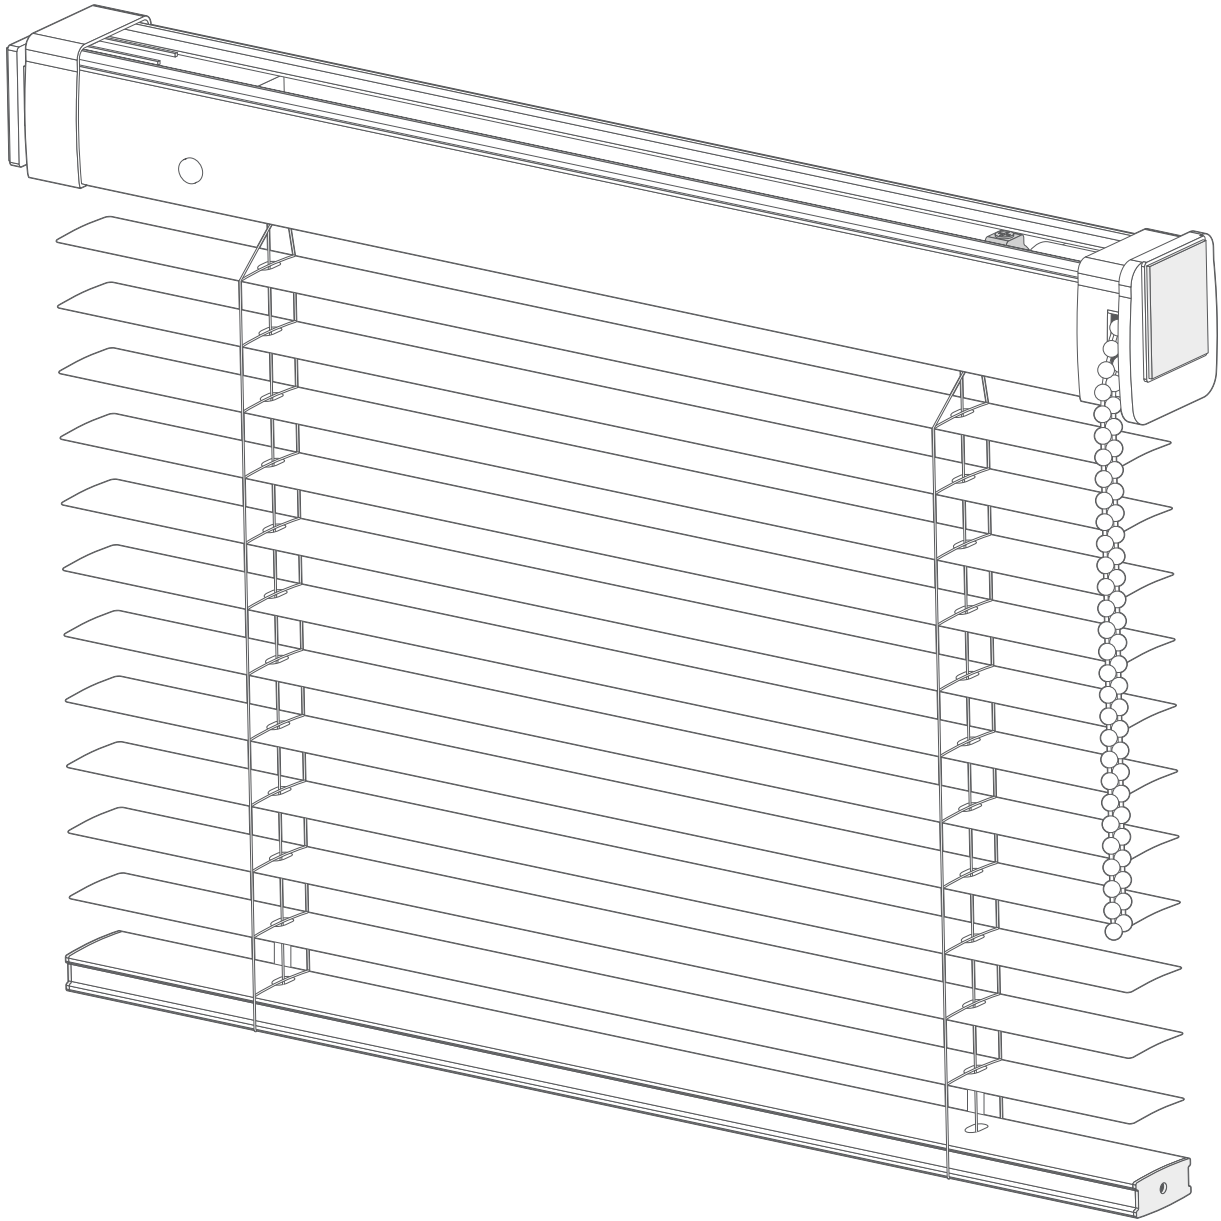


No specialist knowledge or DIY experience is required to fit our ClickLock Venetian Blinds, but note that certain parts of this process are much easier if you have another person with you to help you install.

Fitting the blind


1

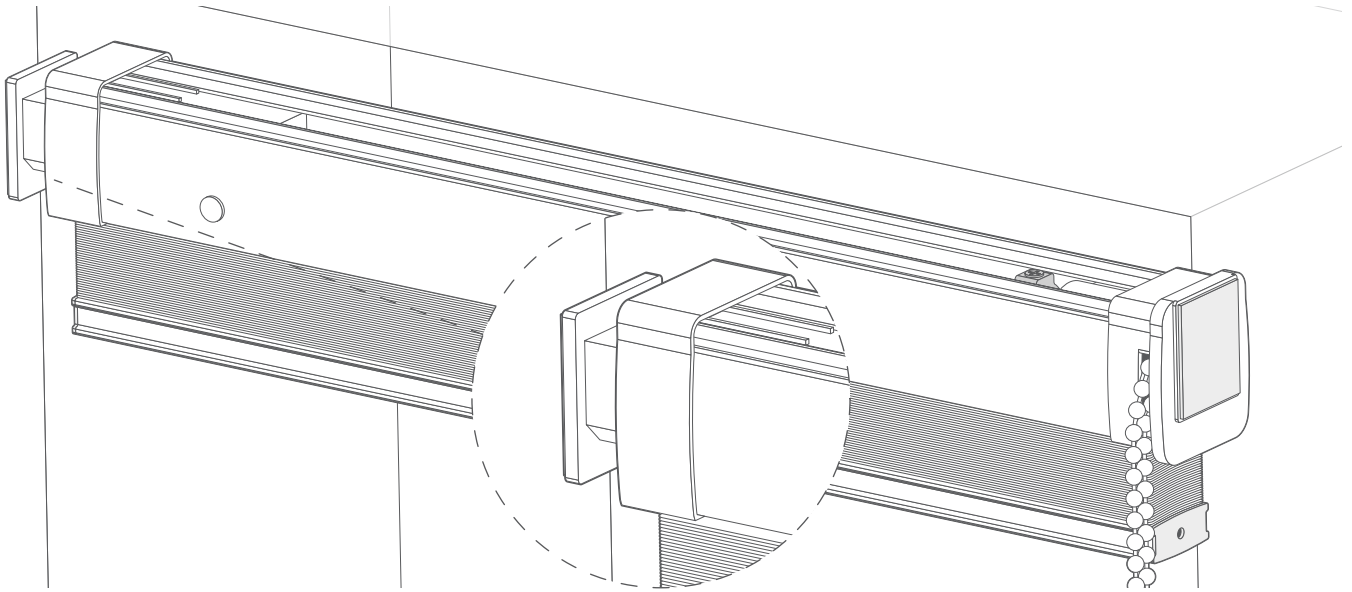

Hold the blind up to the top of the recess, with the depression pad touching the inside wall of the recess.

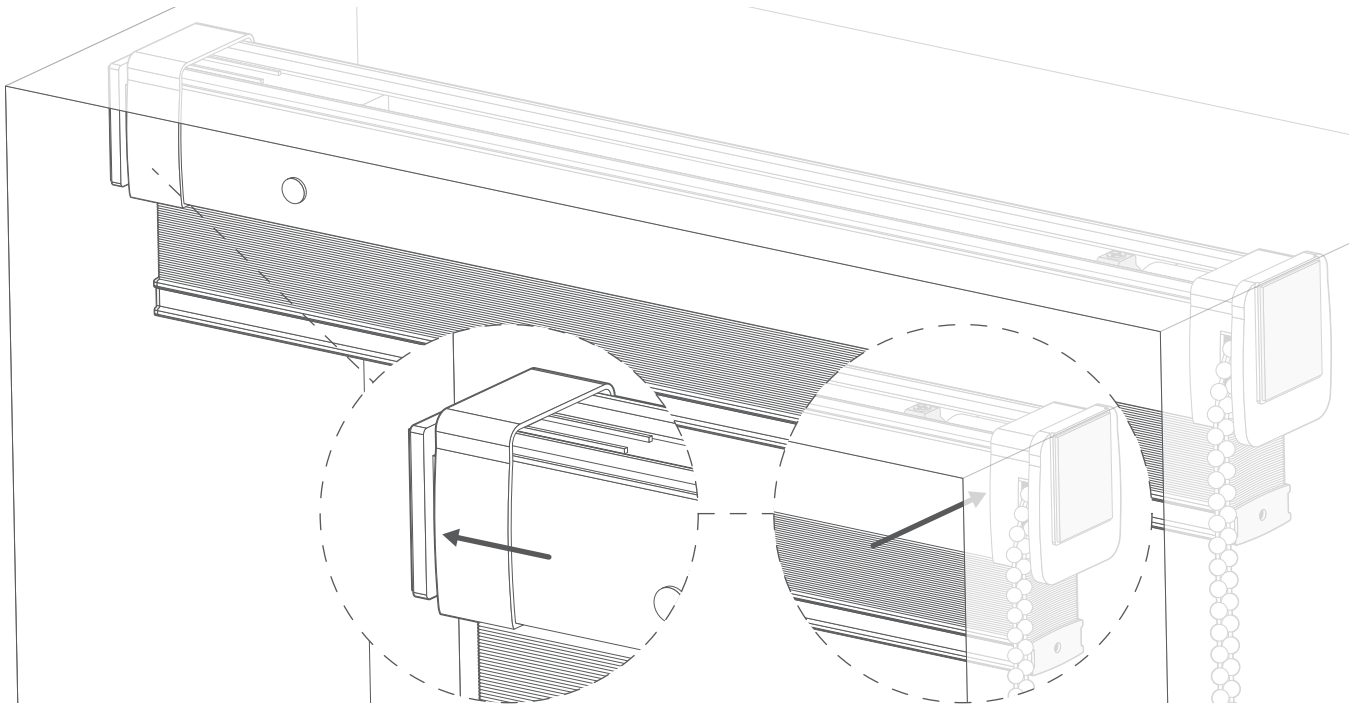


Push the blind against the wall so that the depression pad pushes in, and allows room to push the other end of the blind into the recess.

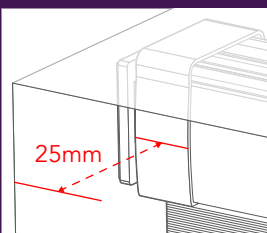


Top Tip

When you push the blind back into the recess, make sure that it's pushed back in far enough to accommodate the child safety device (further details later in this guide).


Push it back into the recess so that there is at least 25mm of space between the front of the blind, and the front of the recess.

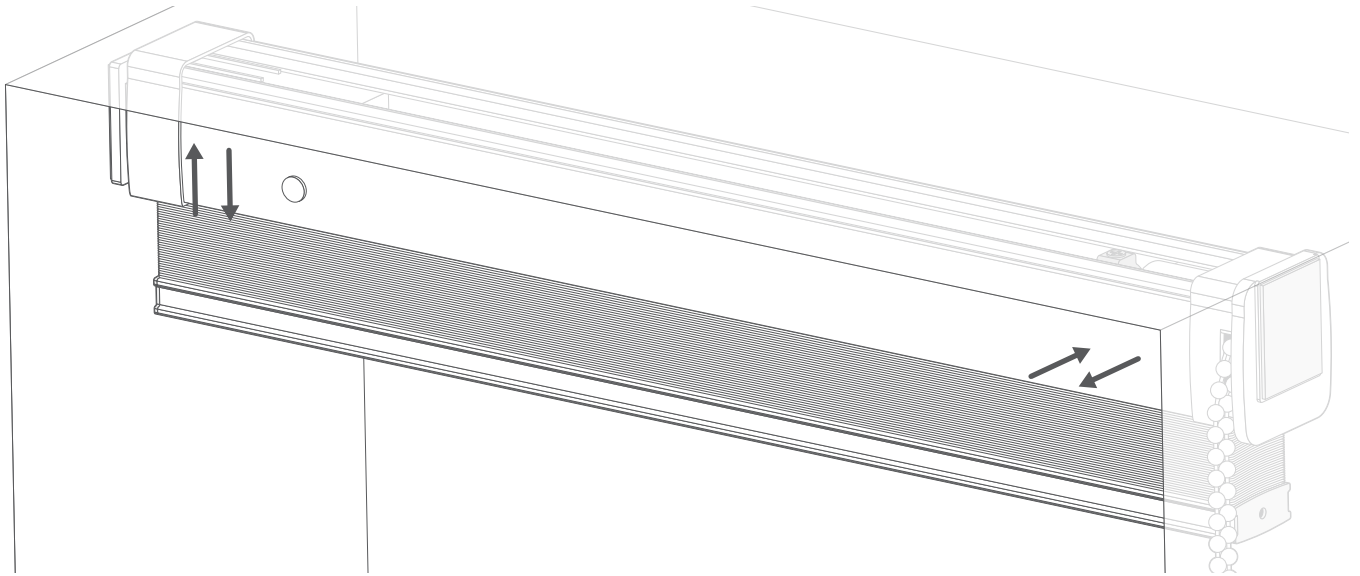

Take a moment to adjust the blind's position so that it's straight and level.

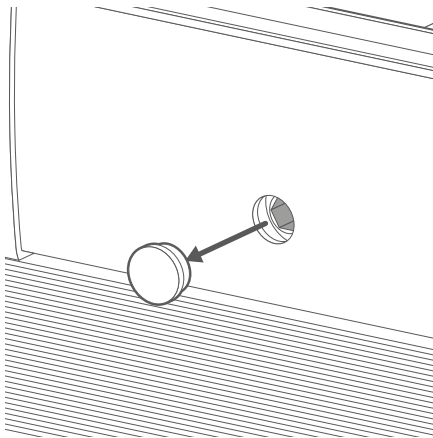

When you're happy with the blind's position, you can secure it in place. To do so, pop the stopper out of the tightening slot, close to the end of the headrail with the depression pad.

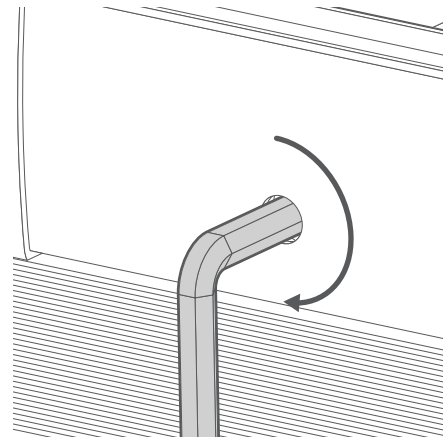

Use the Allen key provided to tighten the spring mechanism inside, turning it until the mechanism begins to click. Pop the stopper back into the slot once you're done.



Top Tip

If the depression pad is on the **left** side of the headrail, **turn the key clockwise** to tighten the mechanism.

If the depression pad is on the **right** side of the headrail, **turn the key anti-clockwise** to tighten.

Child Safety

Safety cleat

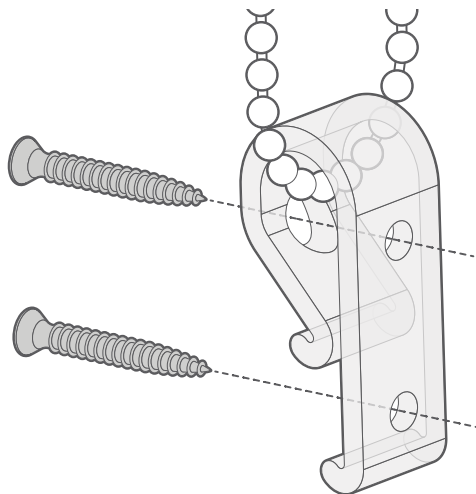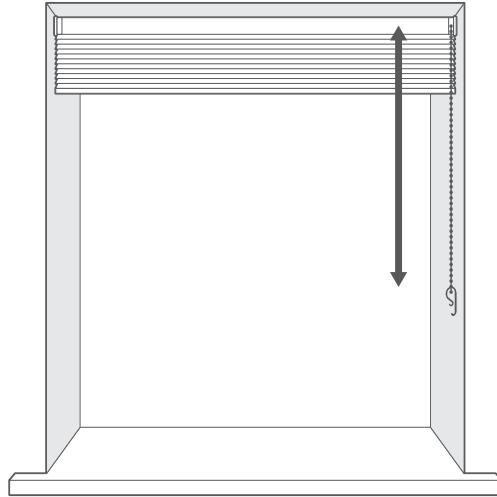

WARNING

Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product.



To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck.

Move beds, cots and furniture away from window covering cords.

Do not tie cords together. Make sure cords do not twist and create a loop.

The cord retaining device must be installed at the maximum distance possible from the control mechanism to prevent looped cords from becoming slack.

Place the retaining device on the wall and mark the position of the screw hole(s) with a pencil.

Attach the retaining device to the wall using the fixings provided.