


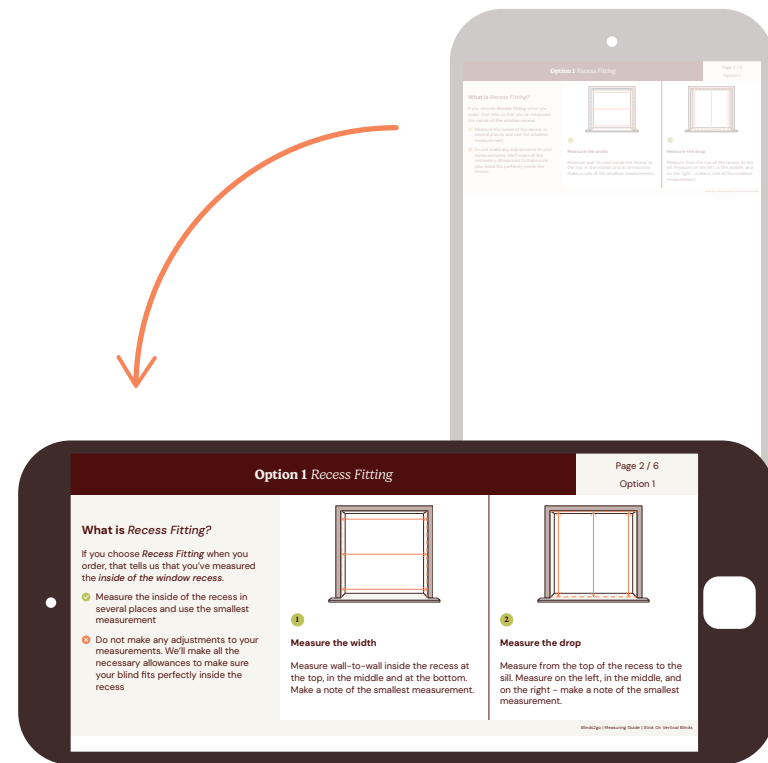

Turn your phone or tablet

Our guides are best viewed in landscape if you're viewing on your phone or tablet.

Designed for *DIY*


Our Stick On Vertical Blinds are designed to be installed by you, without specialist fitters, even if you don't have much DIY experience.

Please read each page of this guide carefully during installation, following along one step at a time.

Did you *upgrade*?

If you did not choose our Stick On no drill upgrade, use this link to find your guide:

Standard Fitting

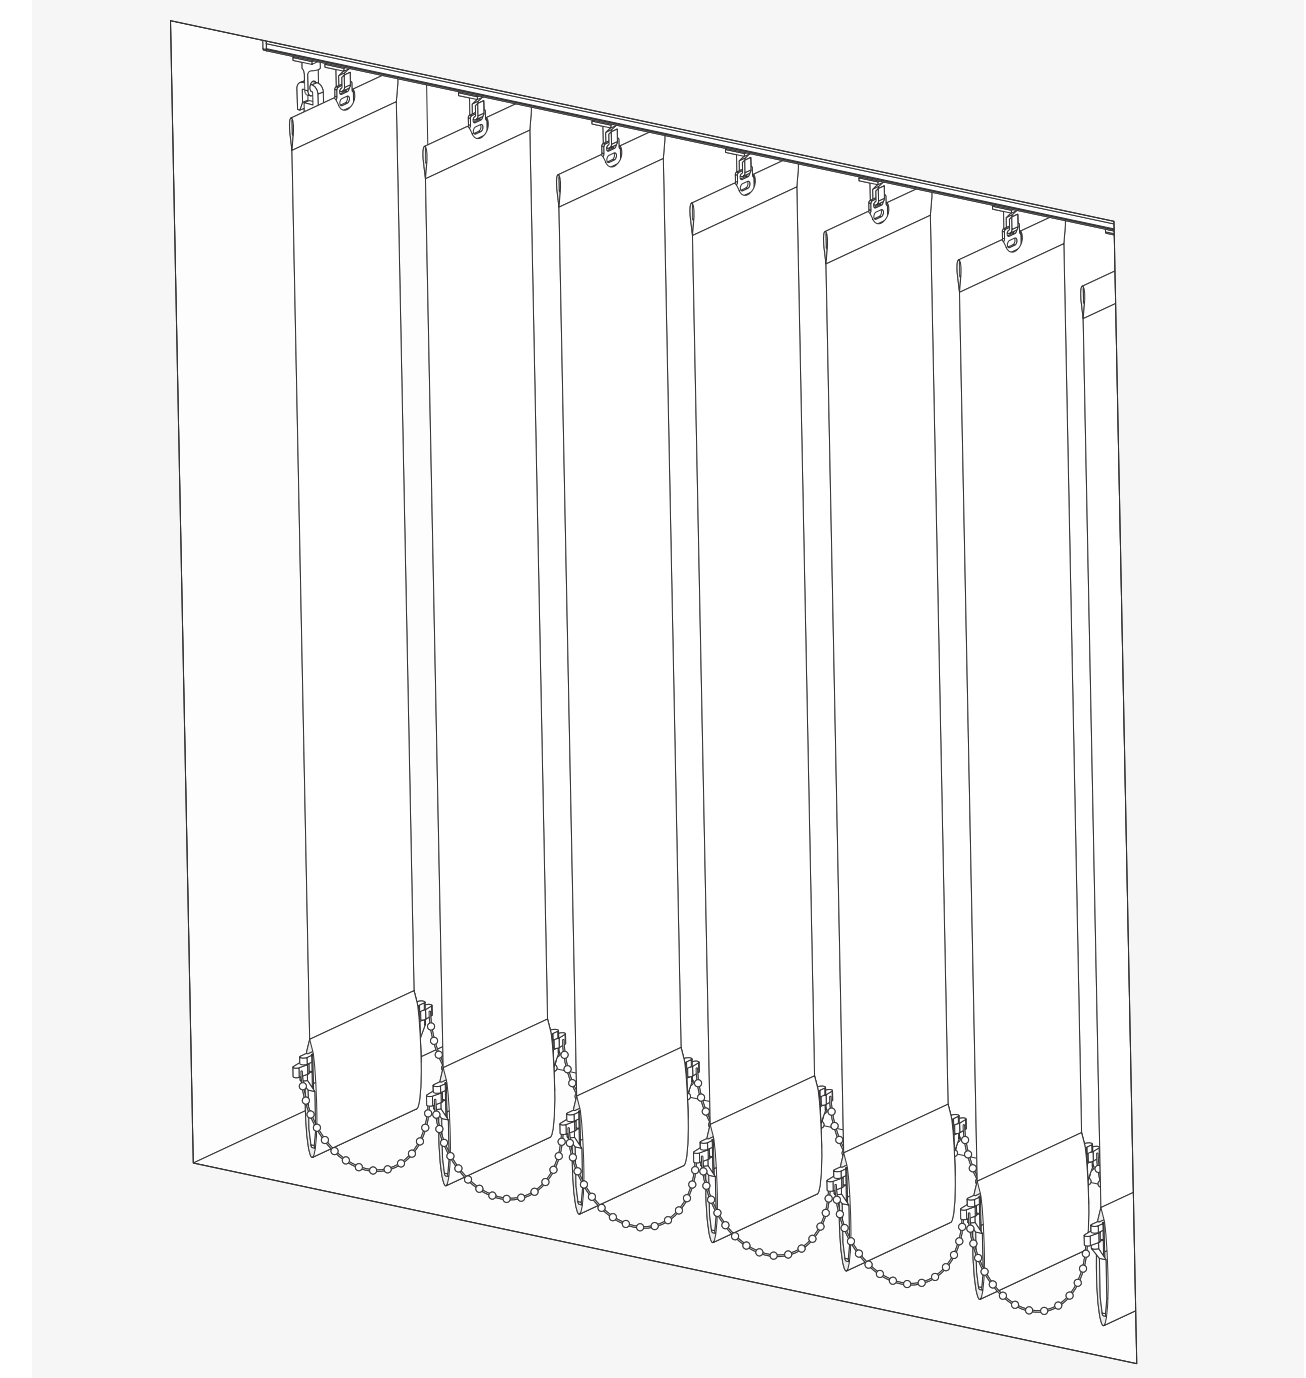


Section 1 *Parts*

Parts included *in your order*:

- 1 Stick on rail – *top-fix* *
- 2 Stick on rail – *face-fix* *
- 3 Headrail
- 4 Louvres
- 5 Louvre weights
- 5 Stabilising chain

* You will only receive one of these, based on your choice when you ordered.

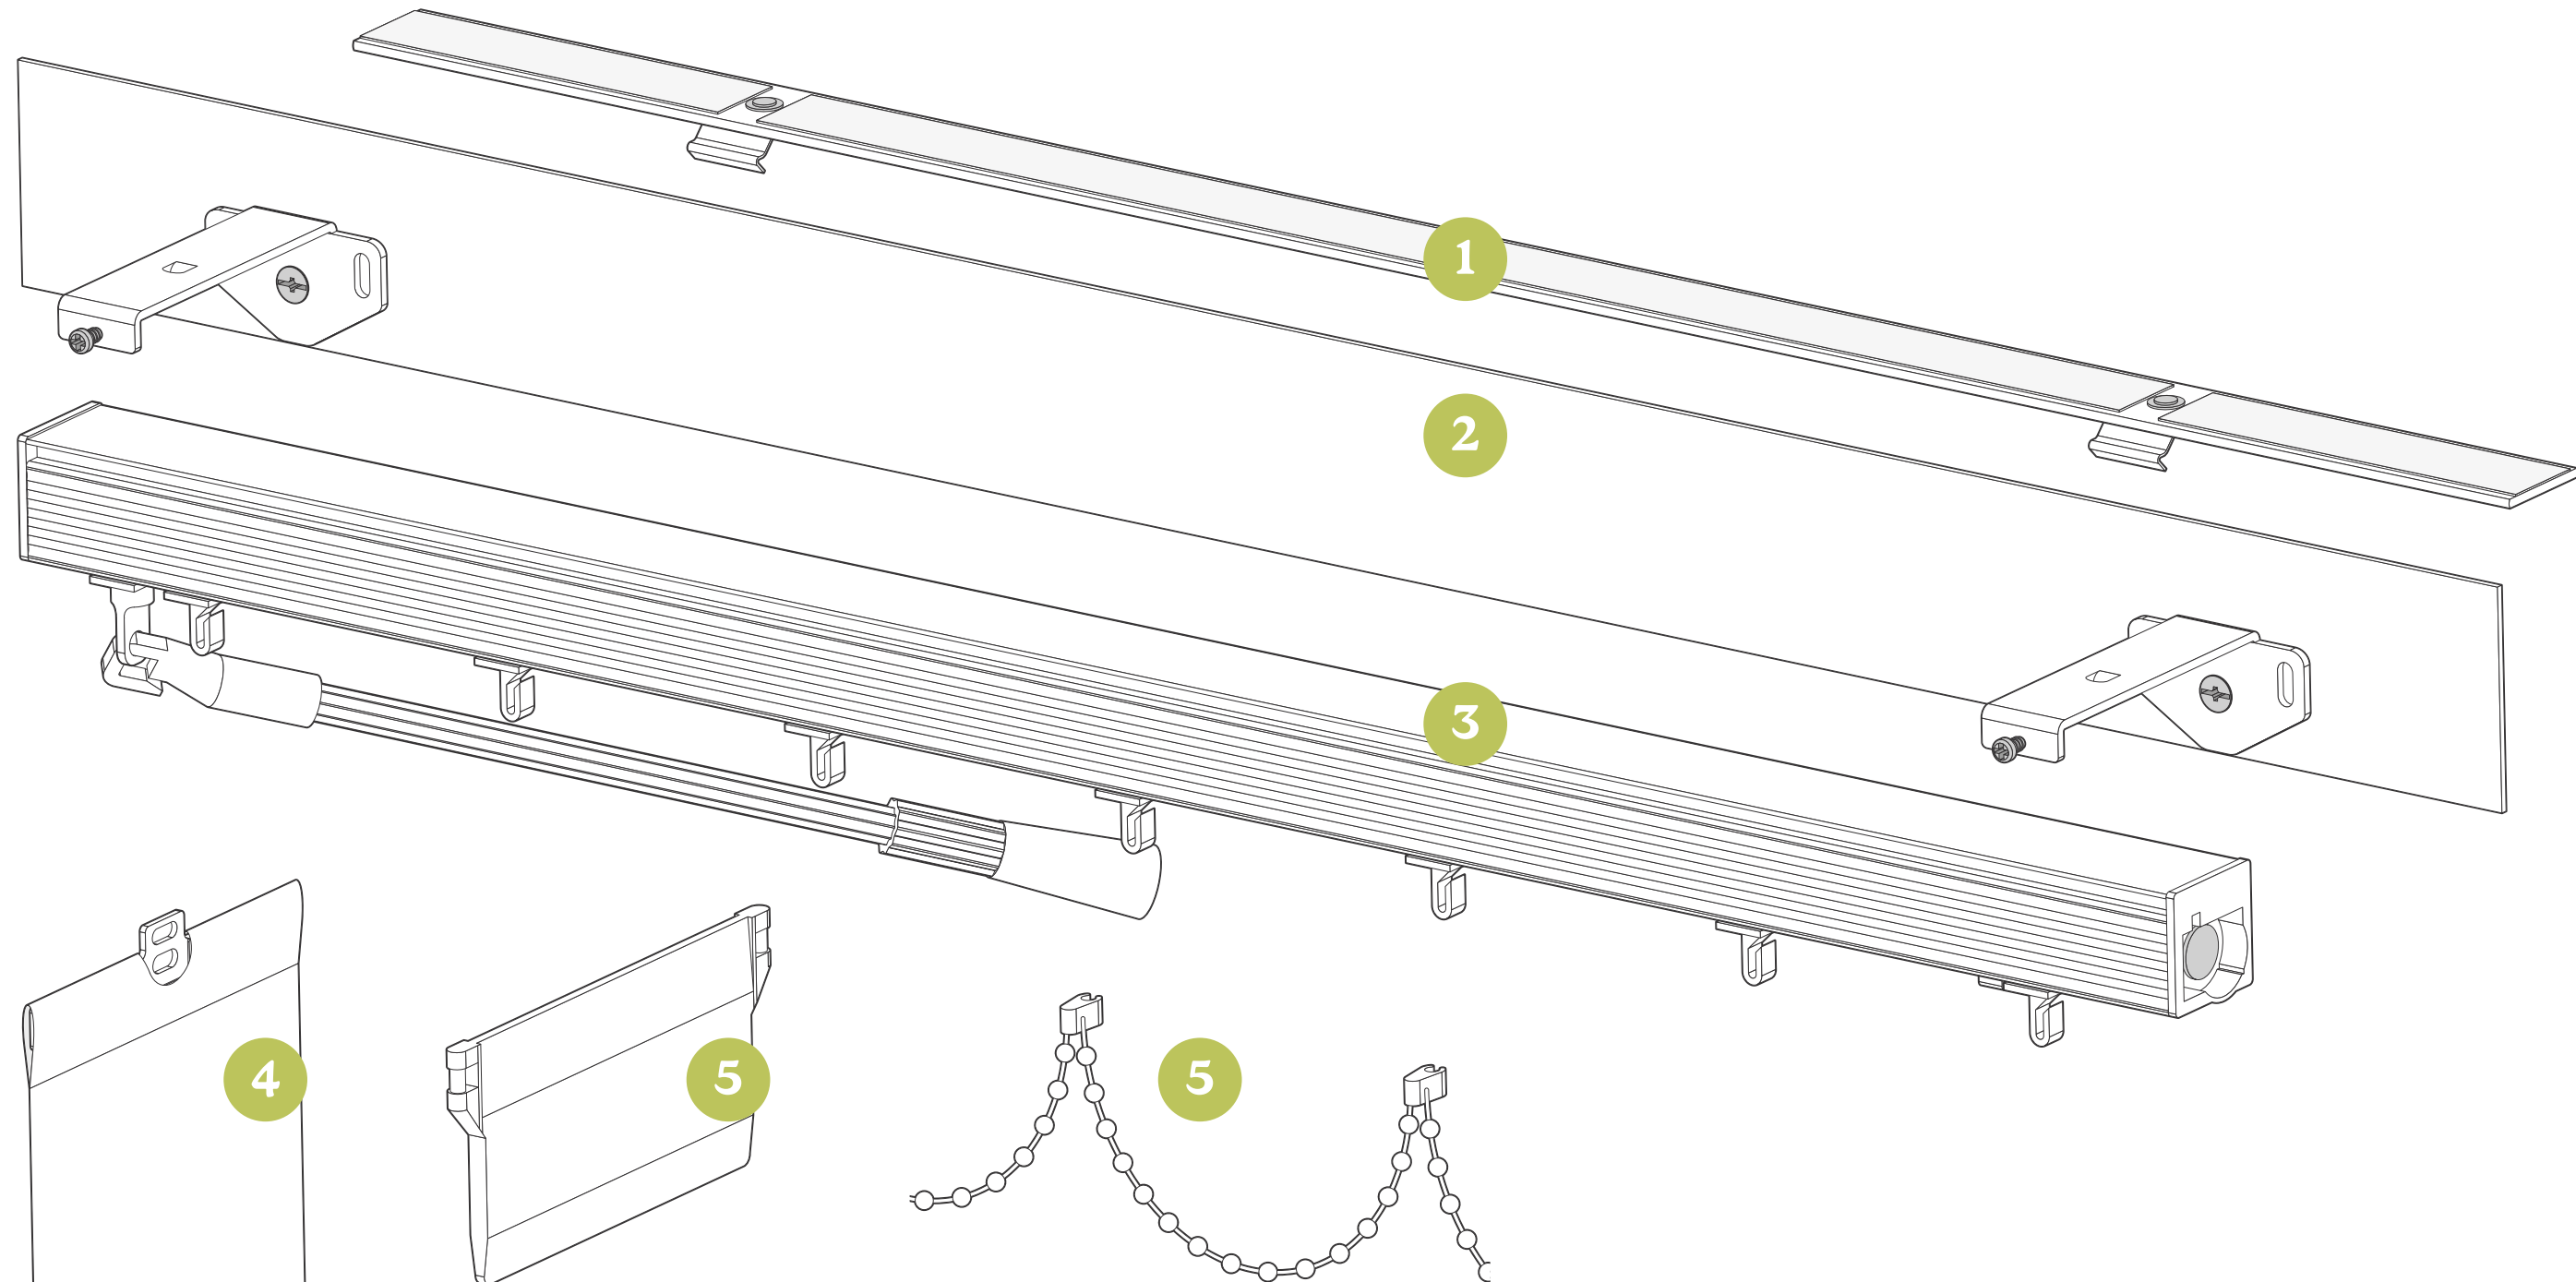


Section 2 *Installing the Brackets*

Page 3 / 17

Section 2

Parts required for this section:

Stick on rail


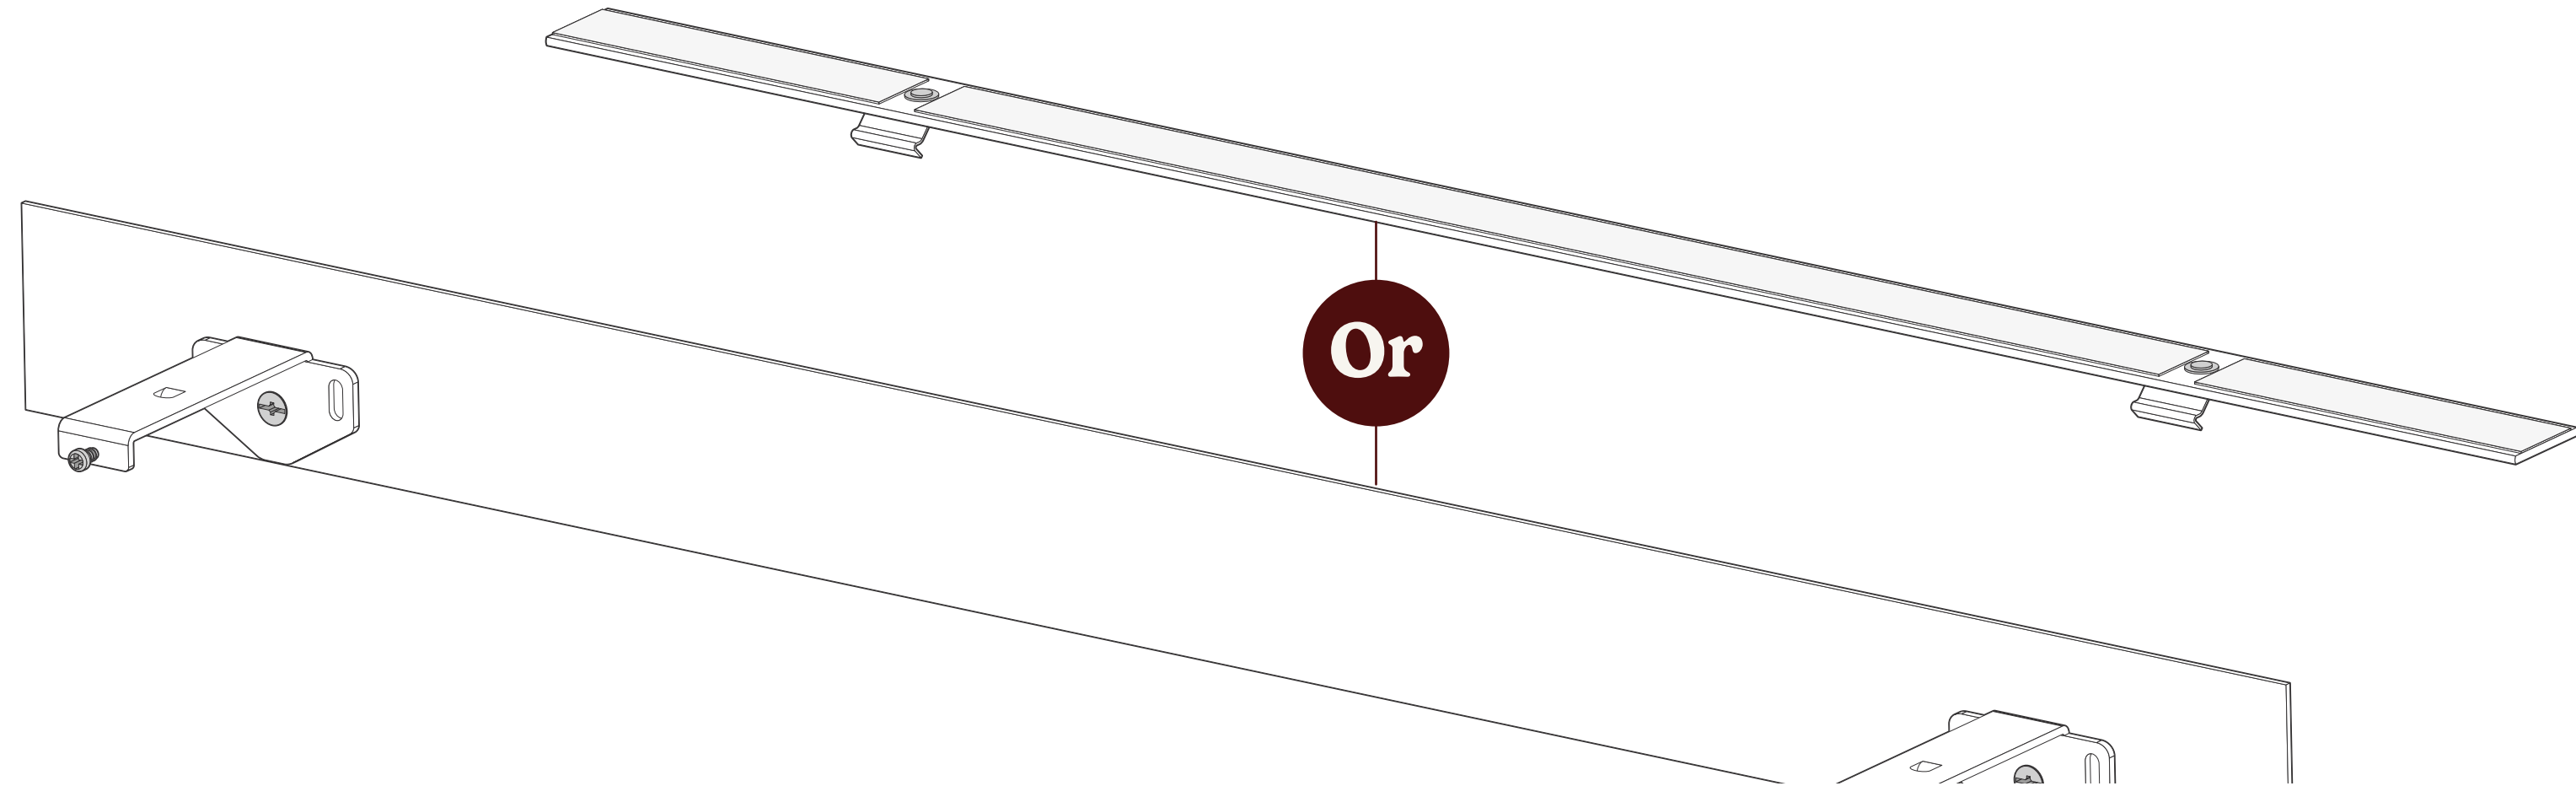


Make sure you clean the surface you'll be fitting the rail to before you continue. Remove any dust and dirt from the area, then thoroughly wipe the entire area with the alcohol wipes provided. Make sure the surface is fully dry before attaching the stick on rail.



Section 2 *Installing the Brackets - Top-Fixing*




If you're using face-fix brackets, you can skip this page.

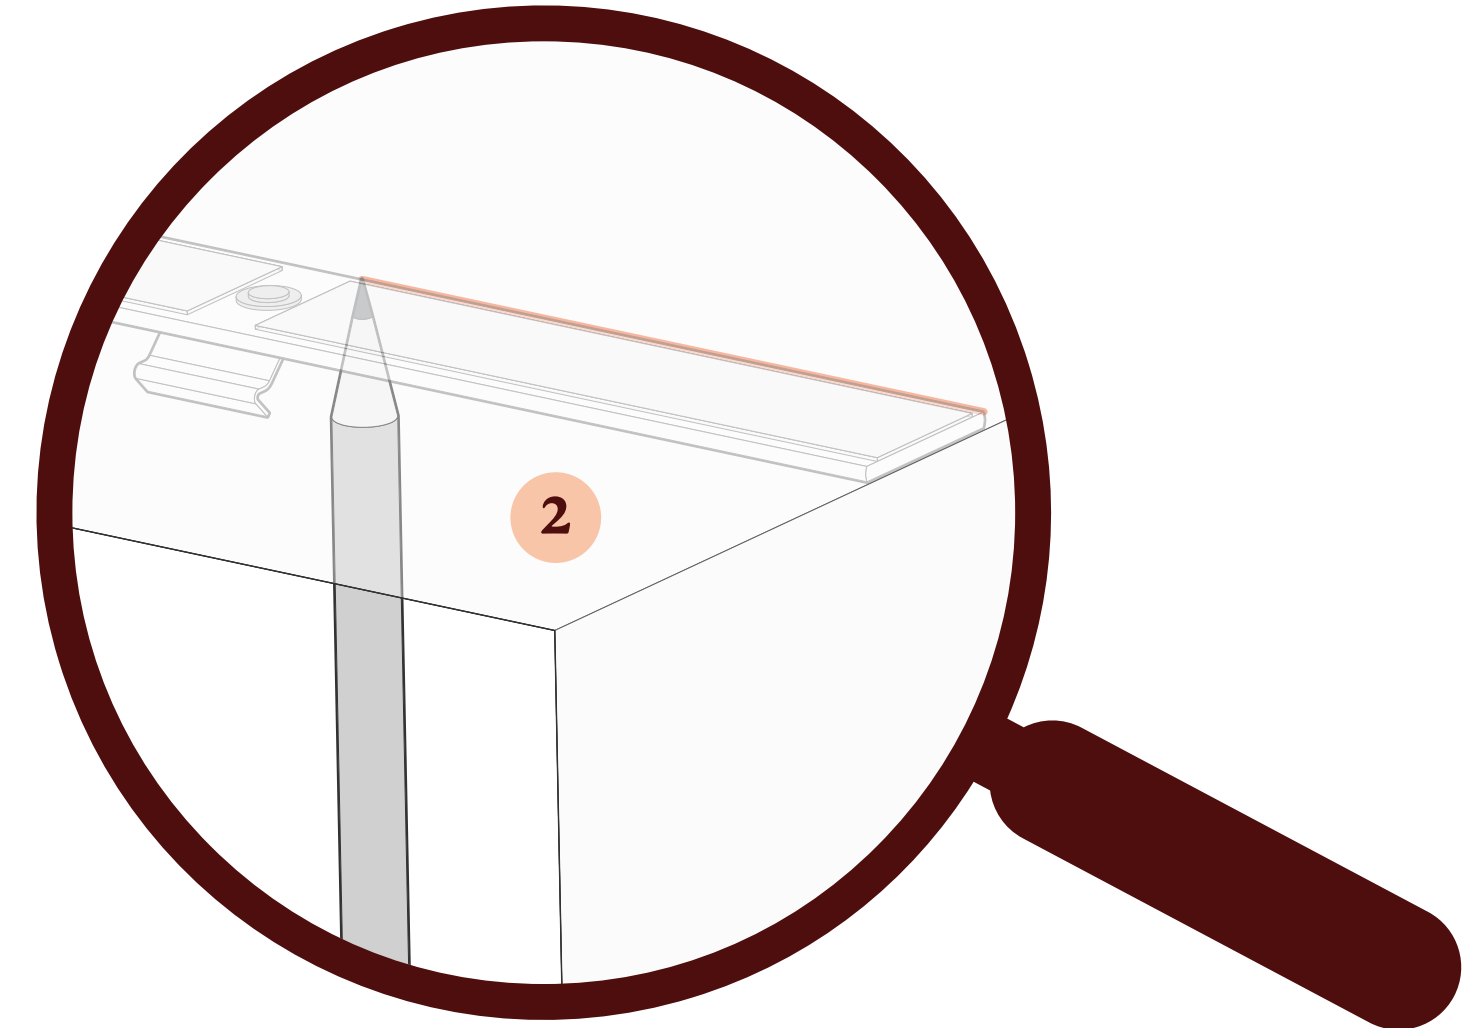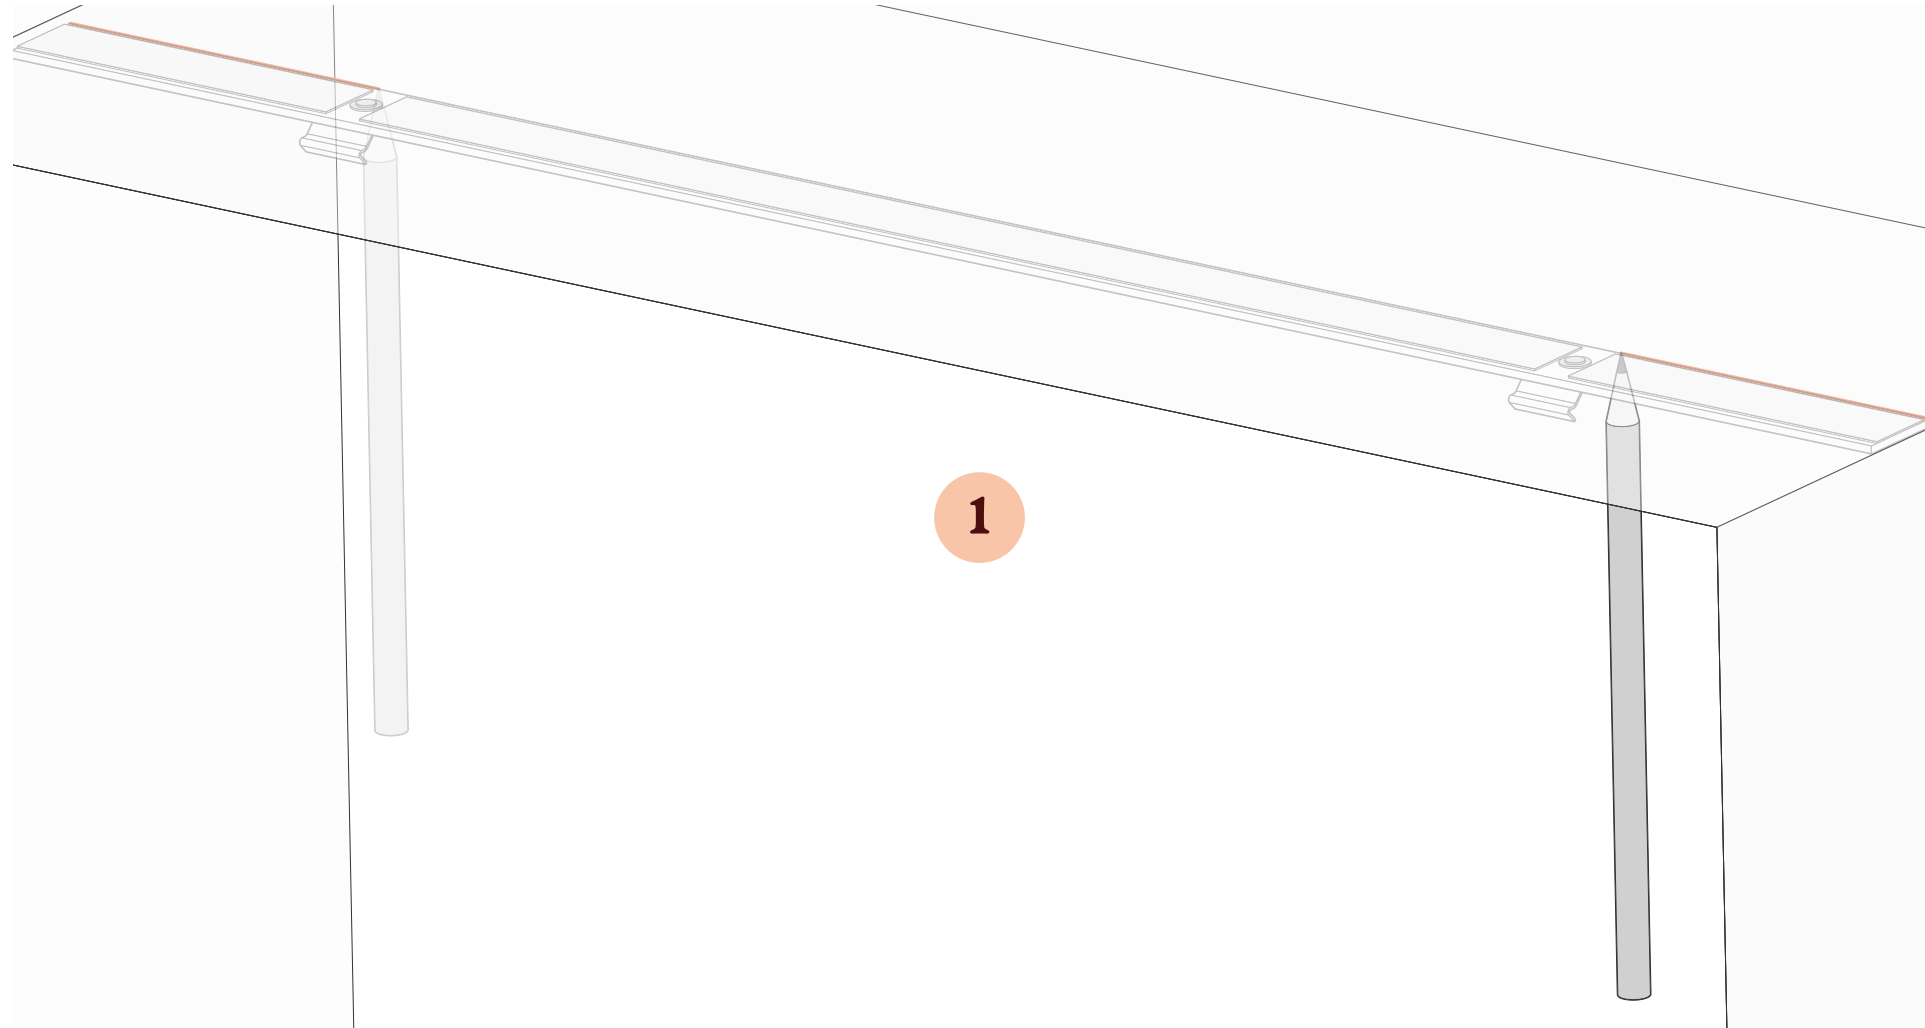

Before sticking anything, take a moment to make sure your rail will be straight. Hold it in the position you'll be fitting it, then use a pencil to mark its edges (1 / 2). You can use your marks to line the rail up precisely when it's time to stick it in place.

Section 2 *Installing the Brackets - Top-Fixing*


If you're using face-fix brackets, you can skip this page.

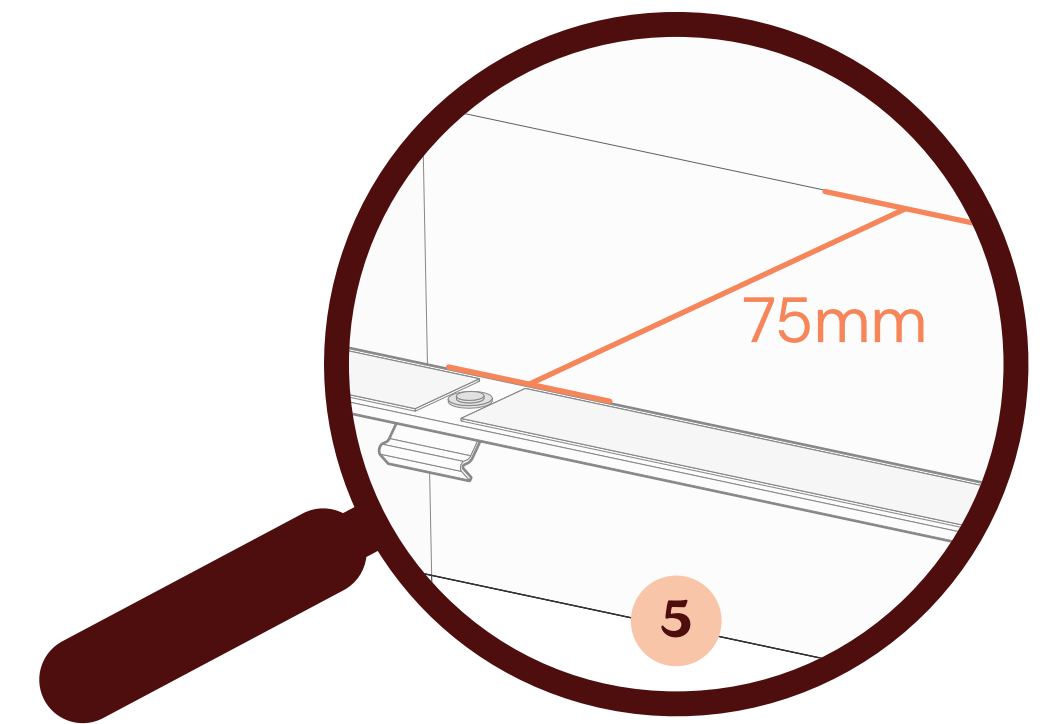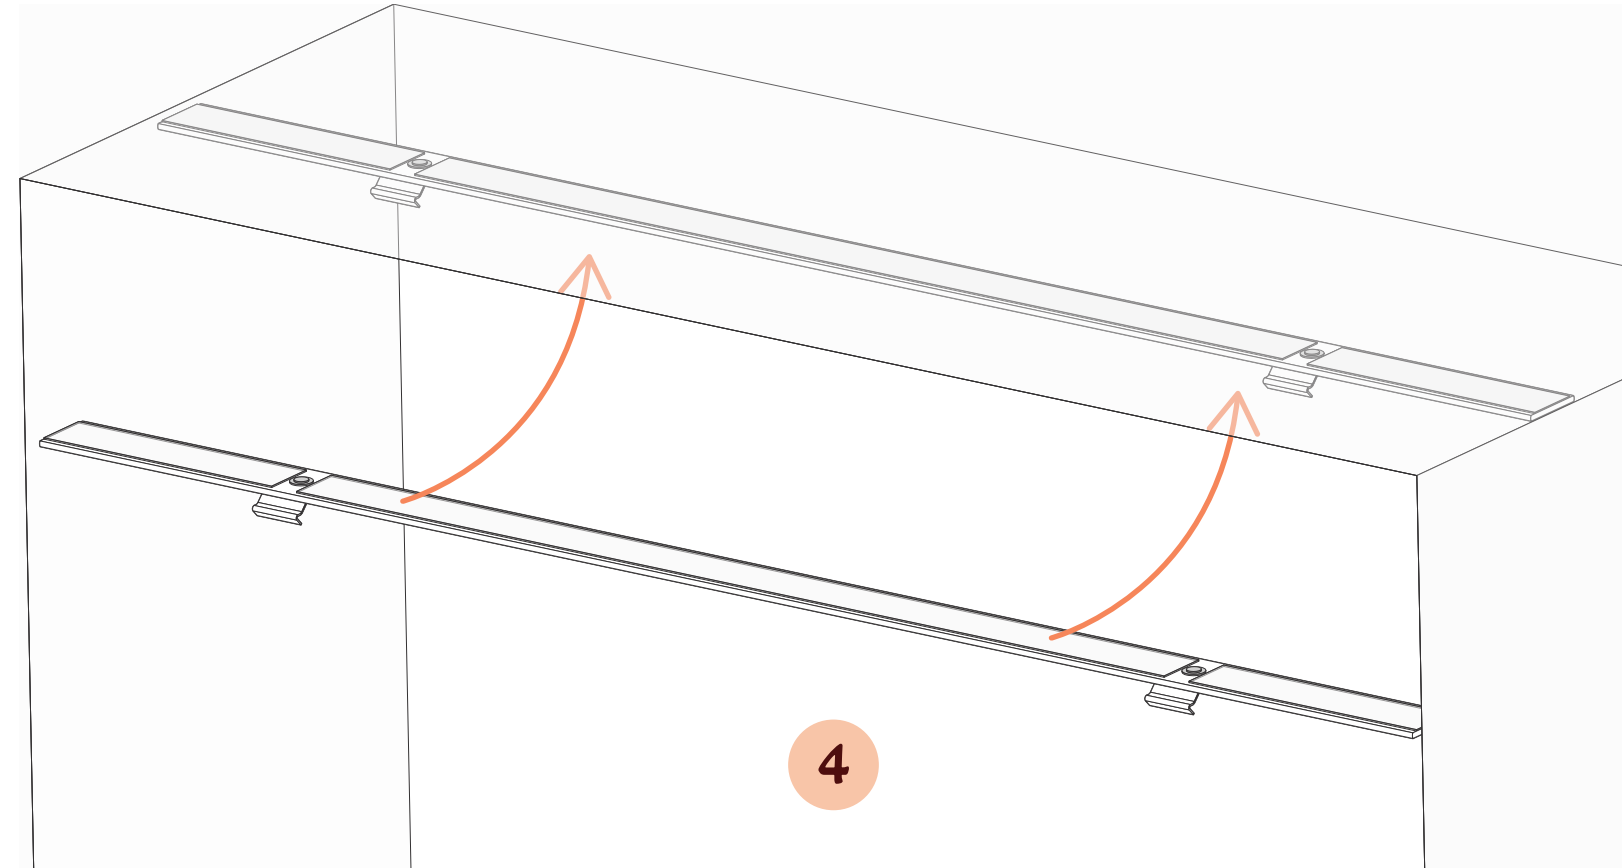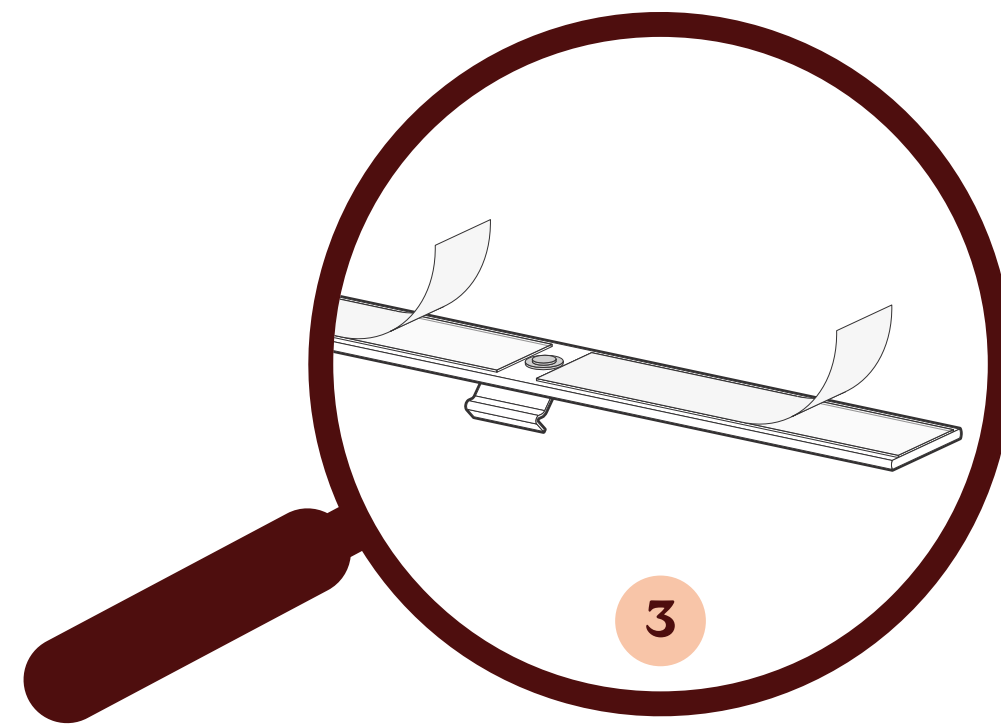

Peel the covers from the adhesive strips along the top of the Stick2Go rail (3). Raise the rail into the recess and carefully press into place, making sure the rail is straight (4). The brackets should be located at least 75mm from the back of the recess, or any obstructions that might catch the back of the blind (5). Make sure that the rail is making contact with the top of the recess all the way along. Hold in place for around 30 seconds to give it time to stick.


Section 2 *Installing the Brackets - Top-Fixing*

If you're using face-fix brackets, you can skip this page.

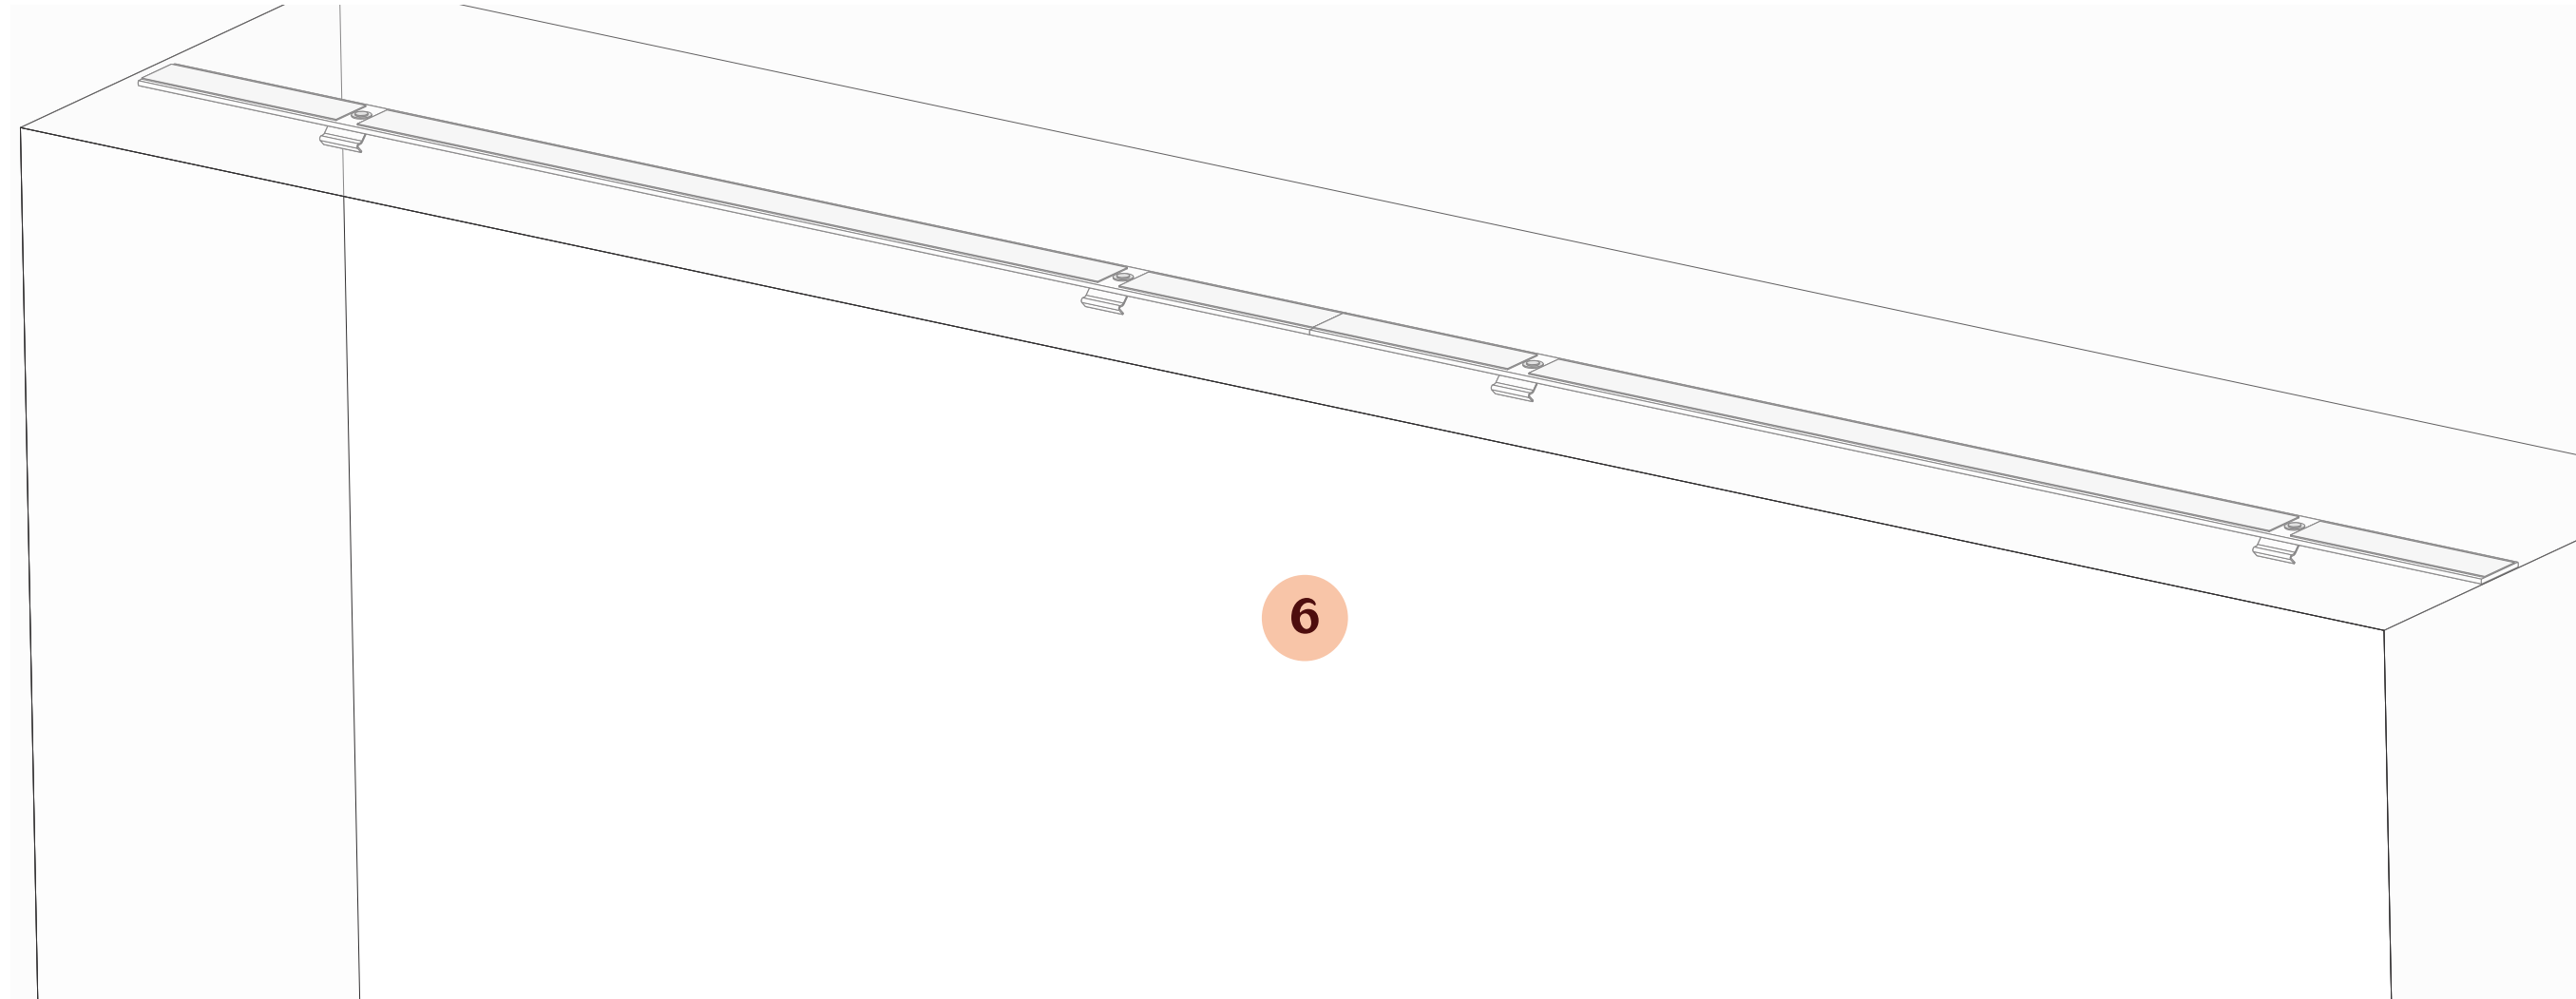

If you ordered a wider blind, you'll find that the width has been split into two and you've received 2 Stick2Go rails and 2 blind headrails. Installation is just as easy as a single rail, simply fit the 2 rails into the recess, facing the same way, butted up together (6 / 7).

Section 2 *Installing the Brackets - Face-Fixing*

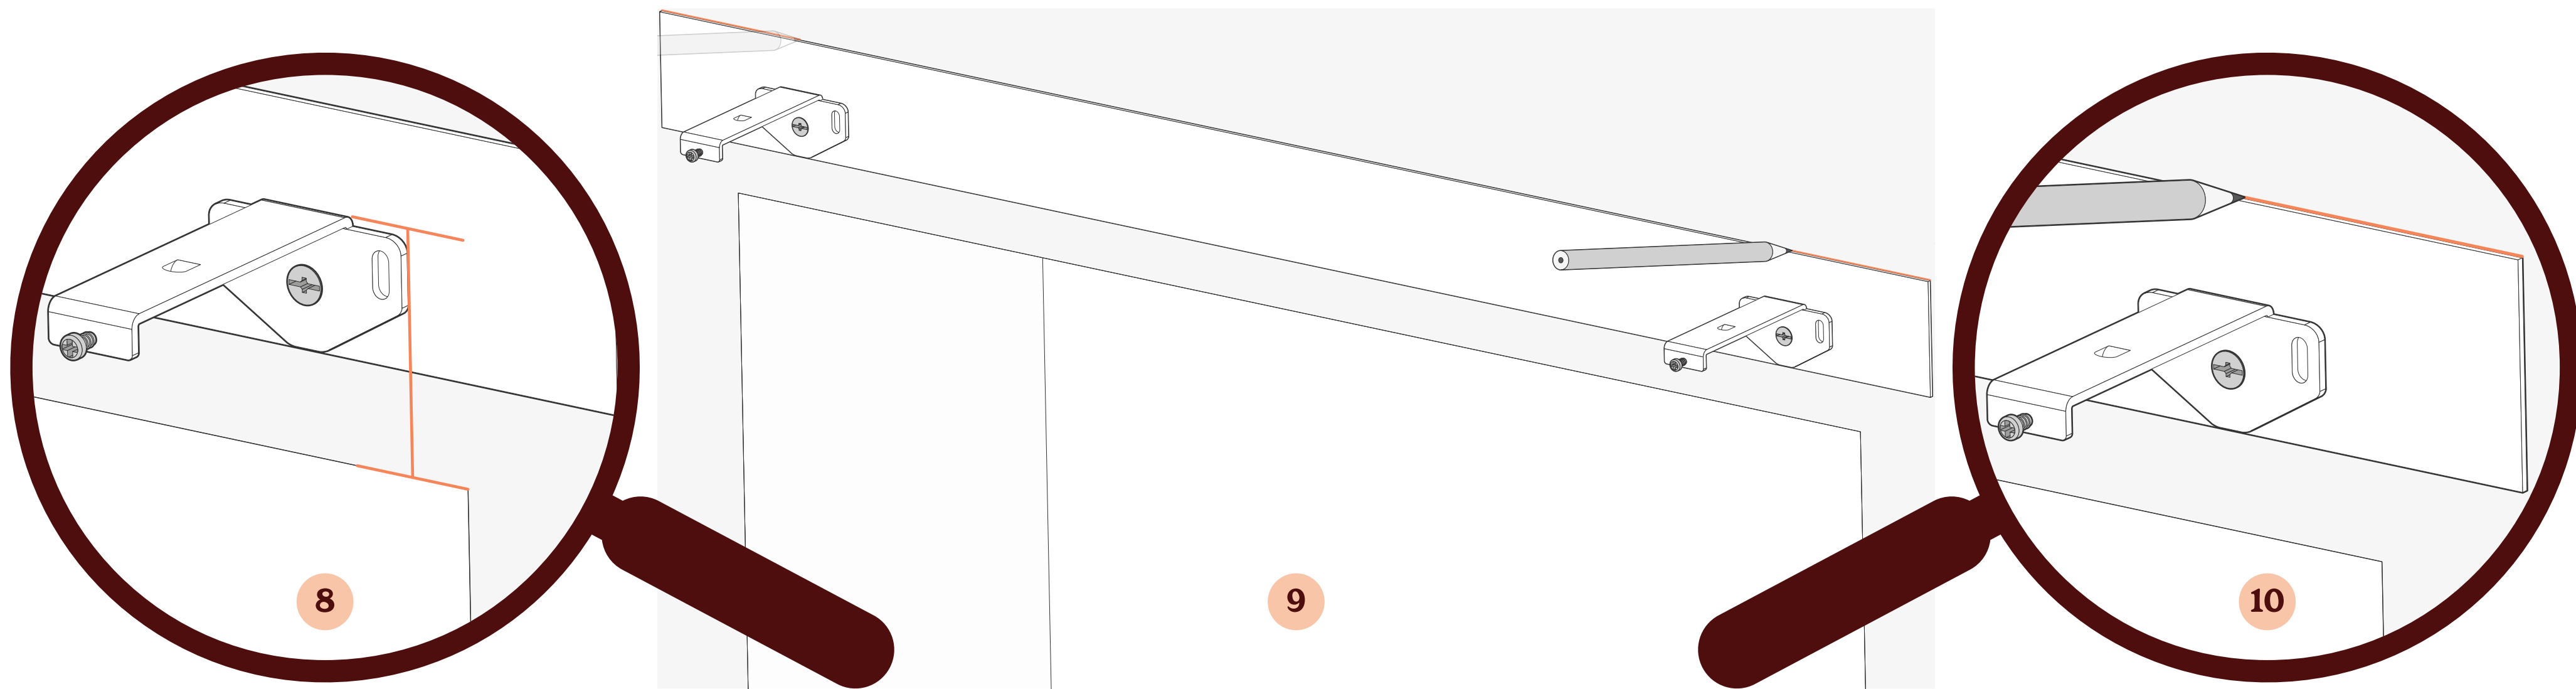


Before sticking anything, take a moment to make sure your rail will be straight. The top of the brackets should be level with where you took your drop measurement from before you ordered (8). Hold it in the position you'll be fitting it, then use a pencil to mark its edges (9 / 10). You can use your marks to line the rail up precisely when it's time to stick it in place.

Section 2 *Installing the Brackets - Face-Fixing*


Page 8 / 17

Section 2.5

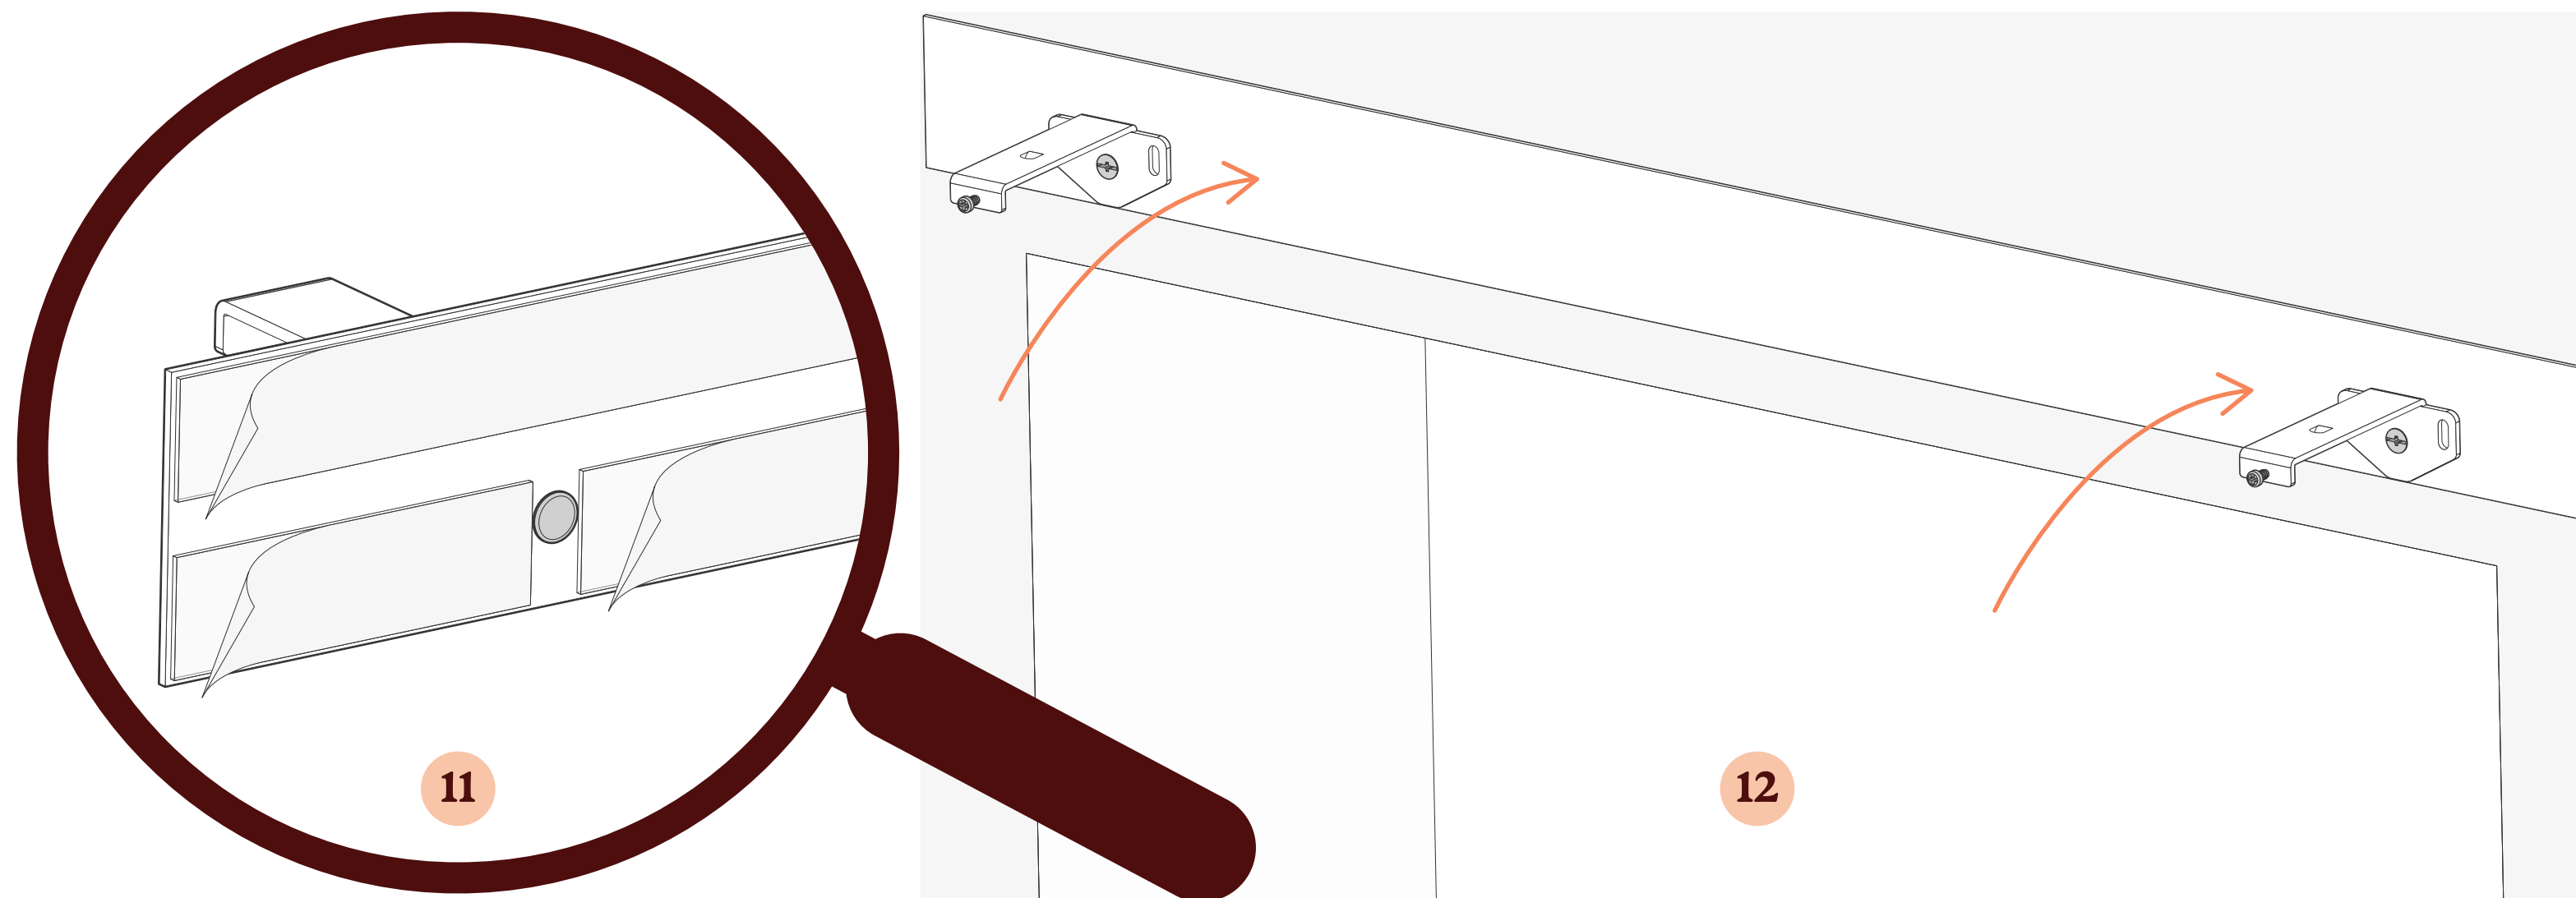


Peel the covers from the adhesive strips along the back of the Stick2Go rail (11). Raise the rail into position and carefully press into place, making sure the rail is straight (12). Make sure that the rail is making full contact with the wall all the way along. Hold in place for around 30 seconds to give it time to stick.

Section 2 *Installing the Brackets - Face-Fixing*

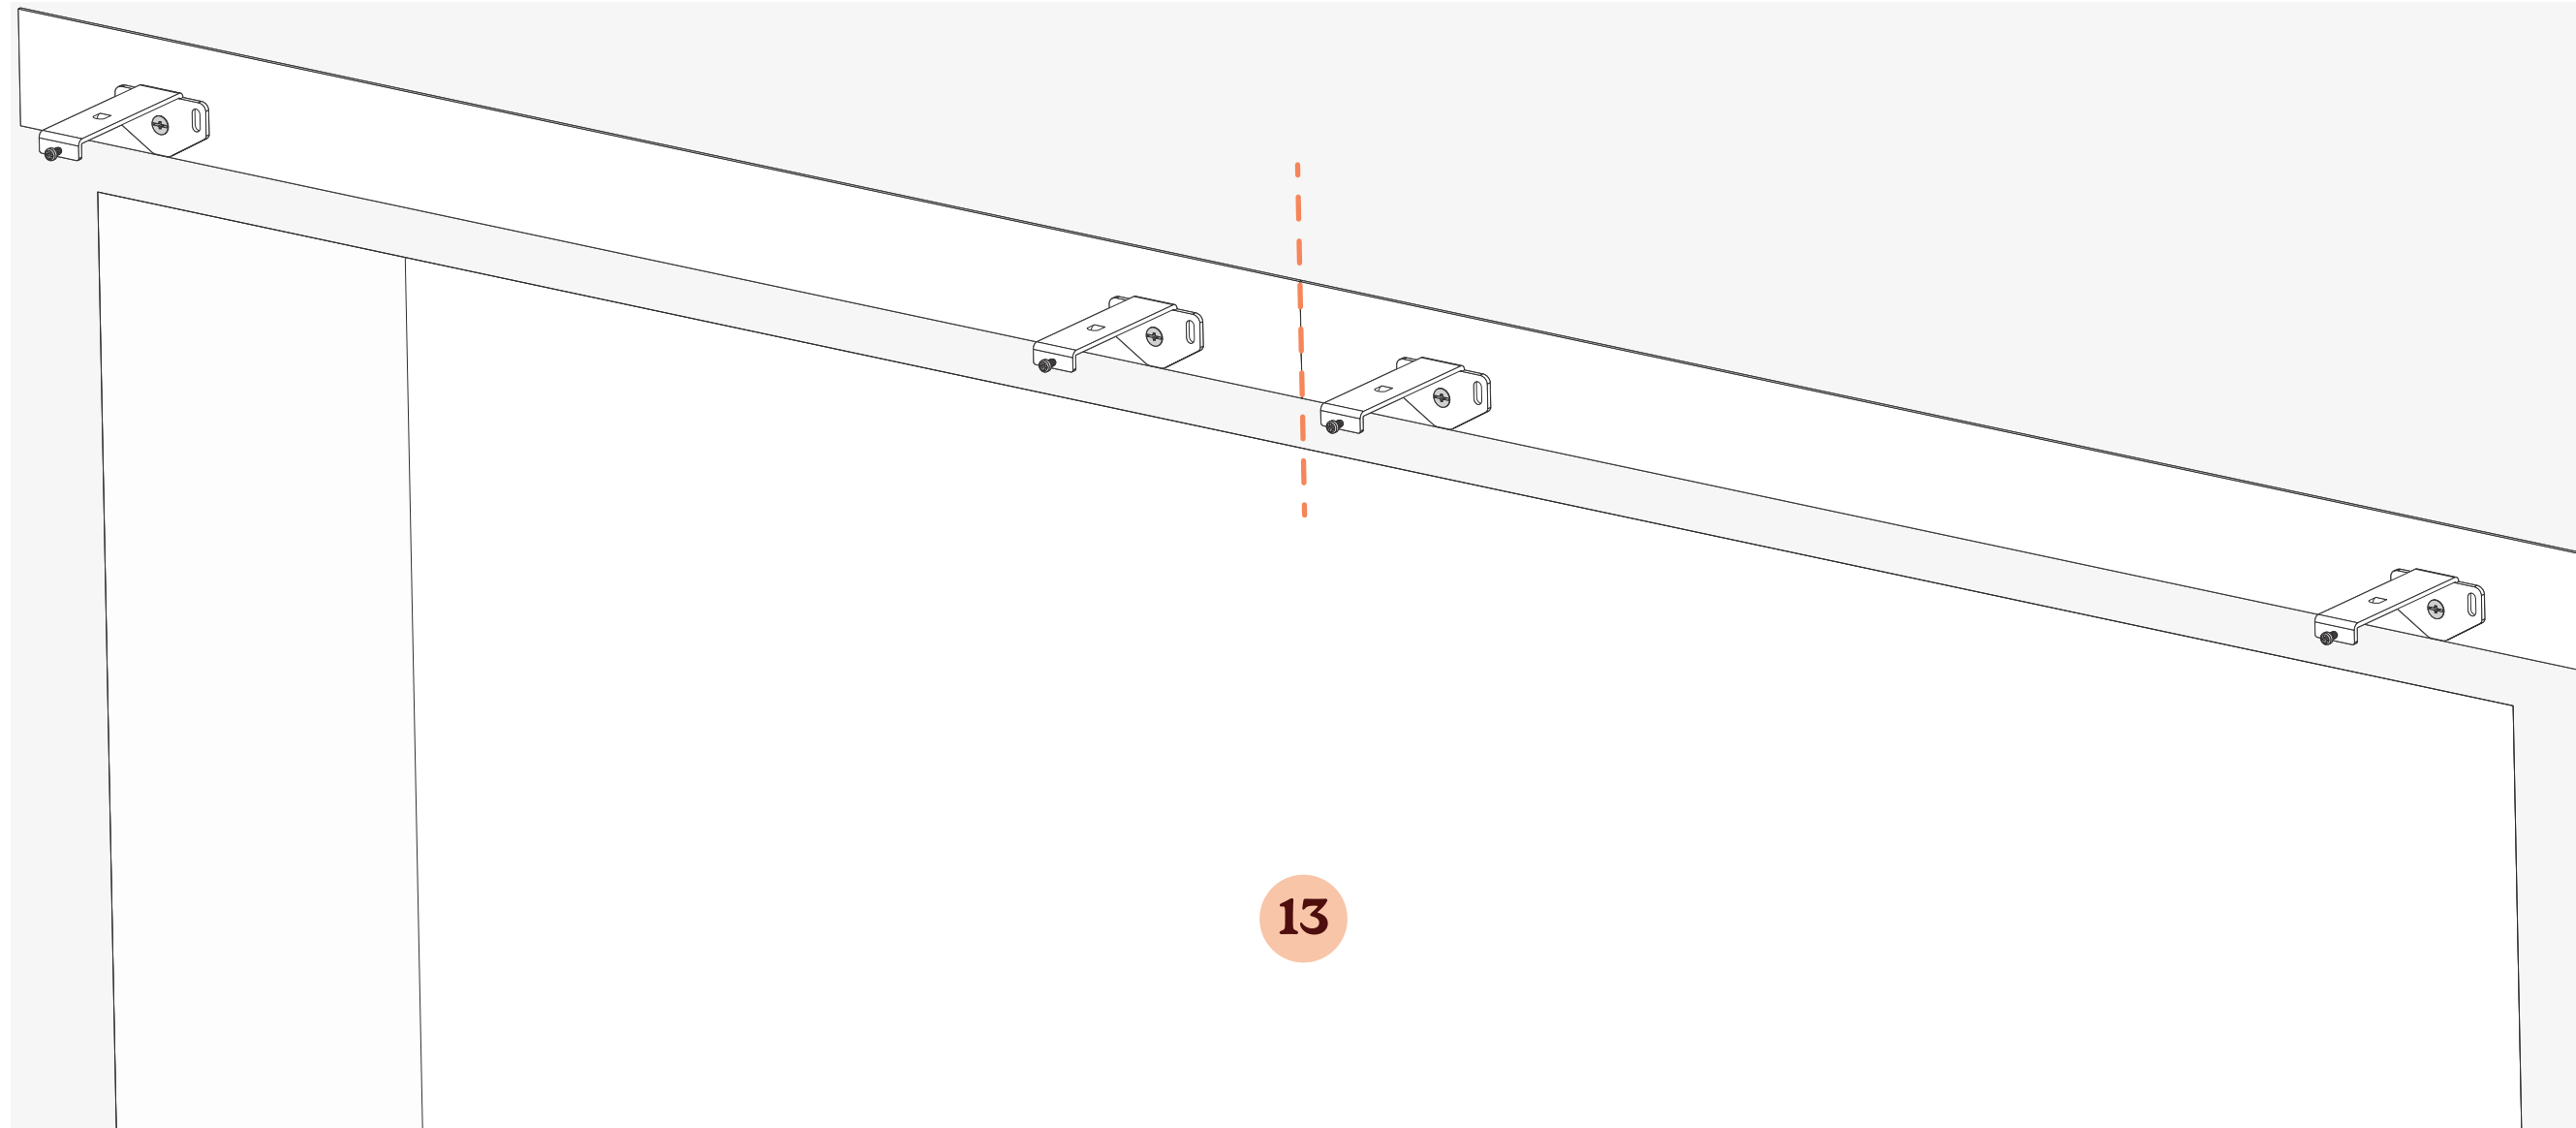


If you ordered a wider blind, you'll find that the width has been split into two and you've received 2 Stick2Go rails and 2 blind headrails. Installation is just as easy as a single rail, simply fit the 2 rails into the recess, facing the same way, butted up together (13).

Section 3 *Installing the Blind's Headrail*

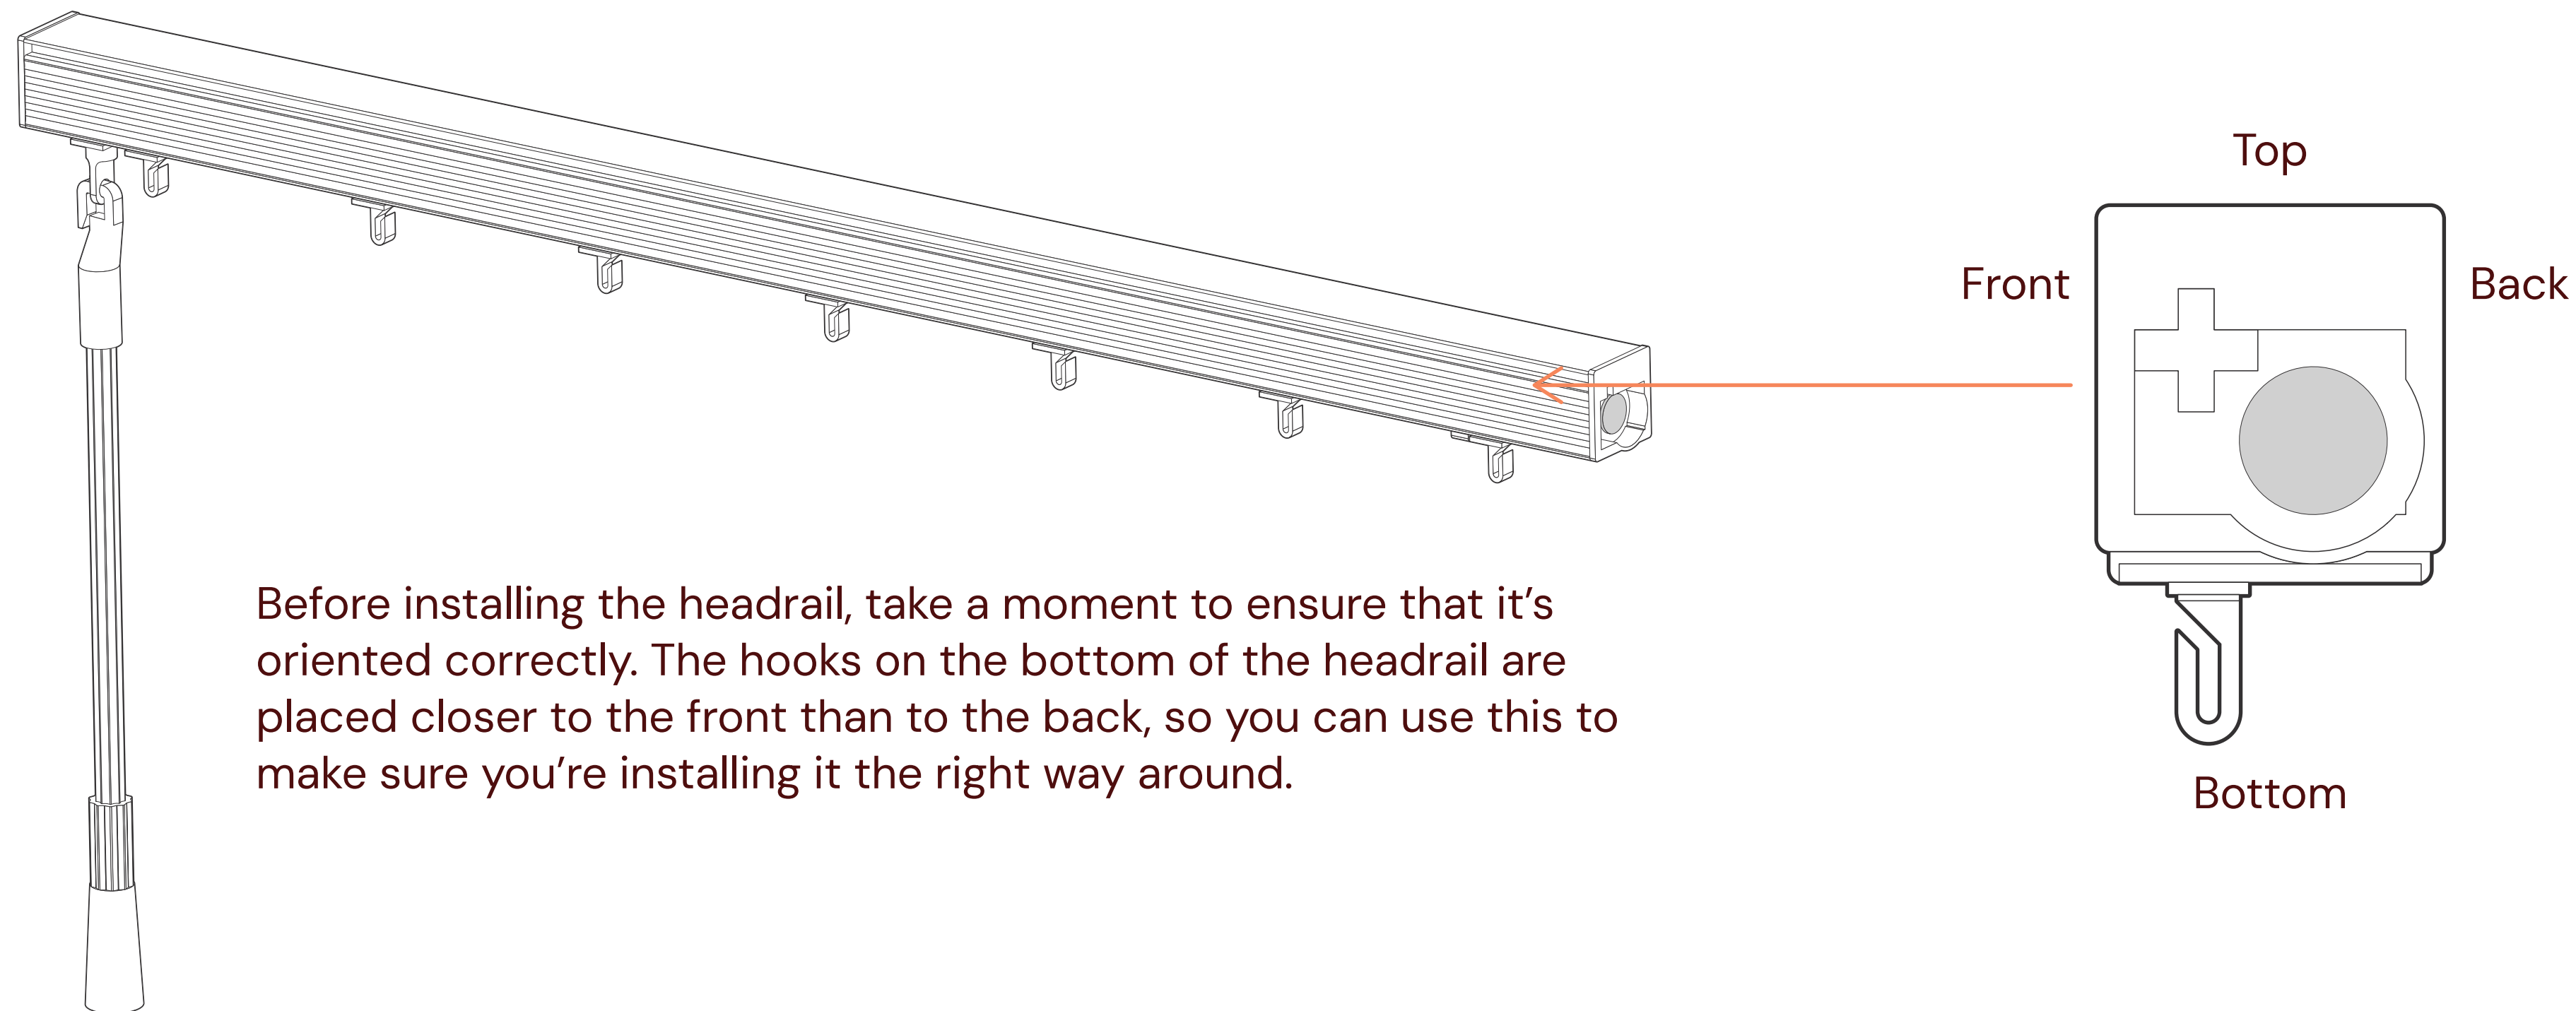


Section 3 *Installing the Blind's Headrail - Top-Fix Brackets*

If you're using face-fix brackets, you can skip this page.

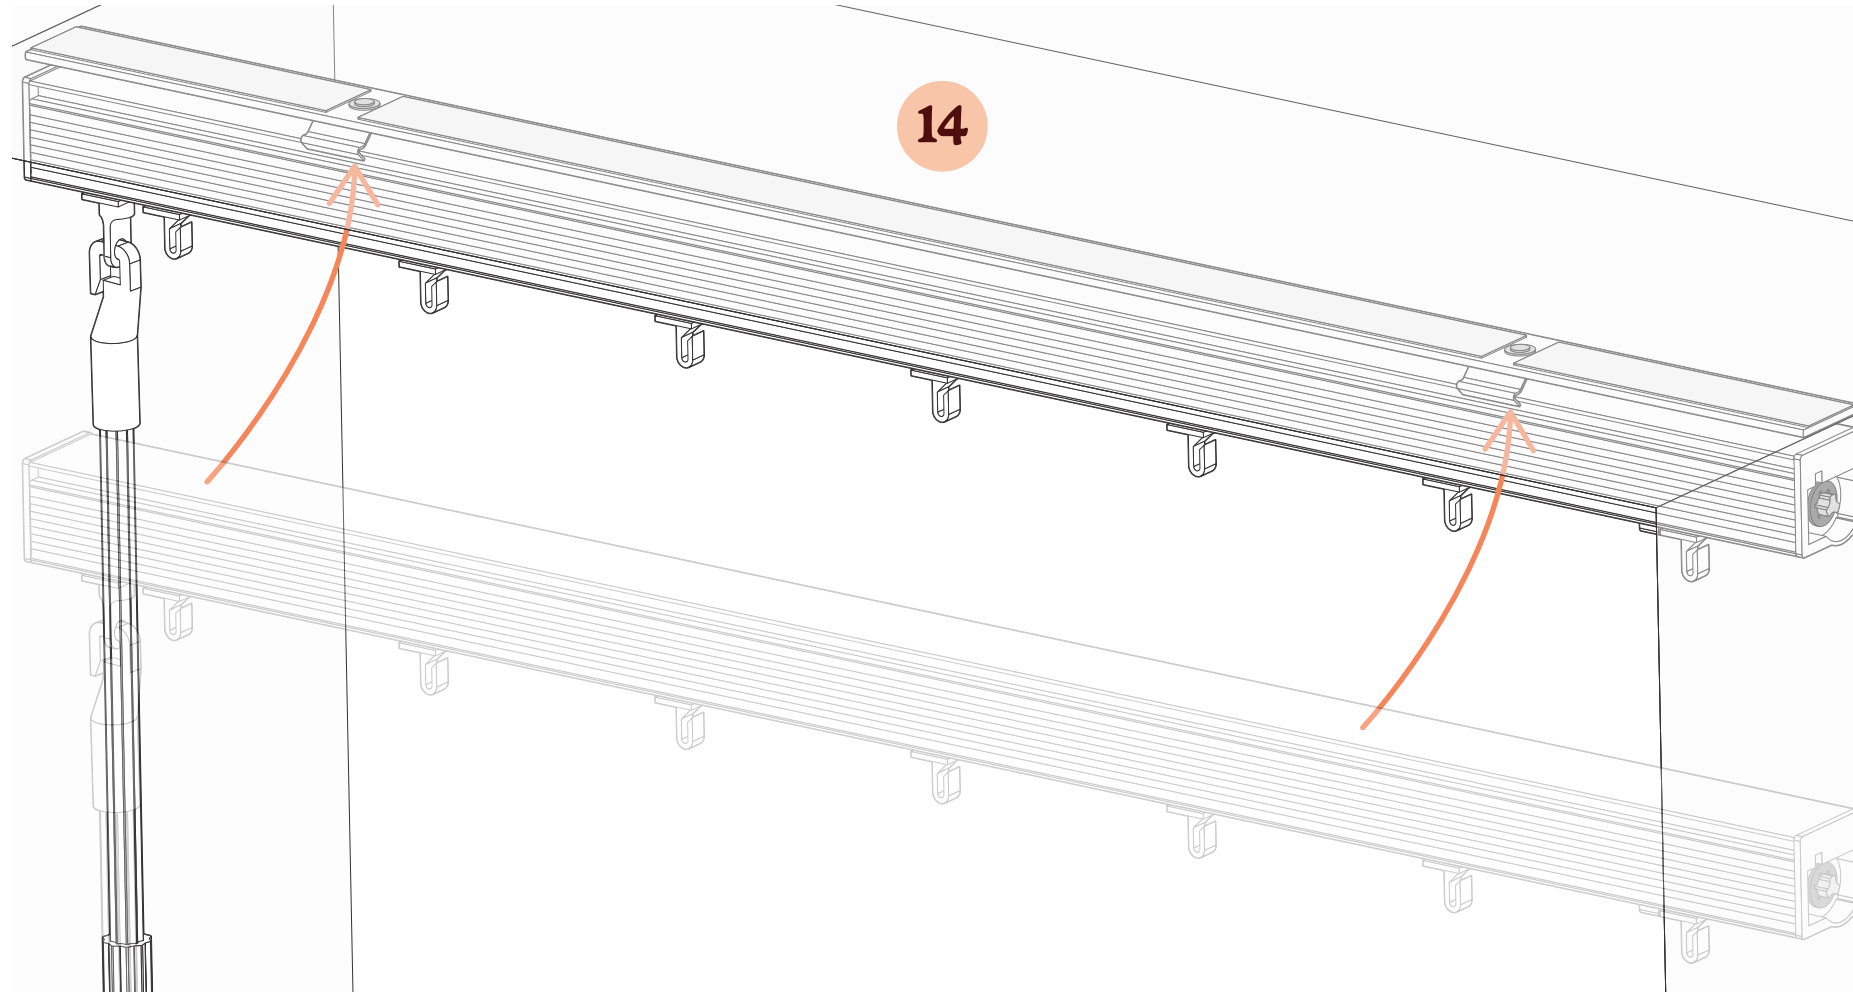




Hook the lip at the front of the blind's headrail into the front hook of the bracket, then push up against the brackets until the rail snaps into place (14 / 15).

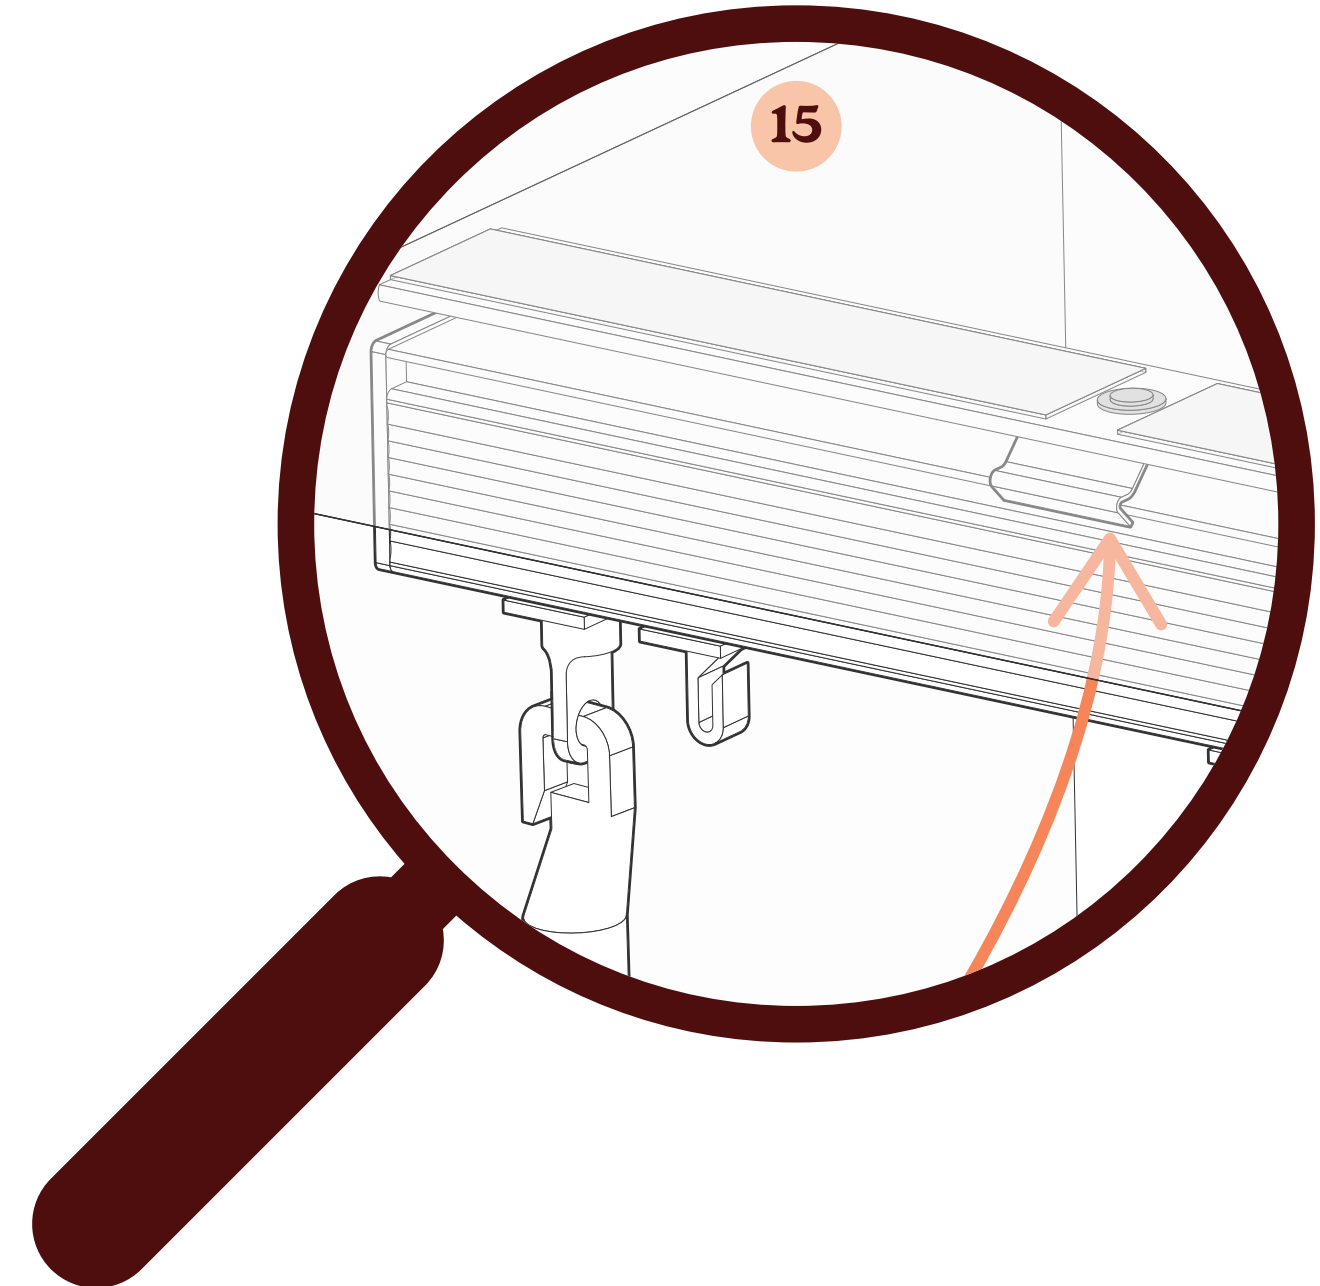

Section 3 *Installing the Blind's Headrail - Face-Fix Brackets*


Page 12 / 17

Section 3.2

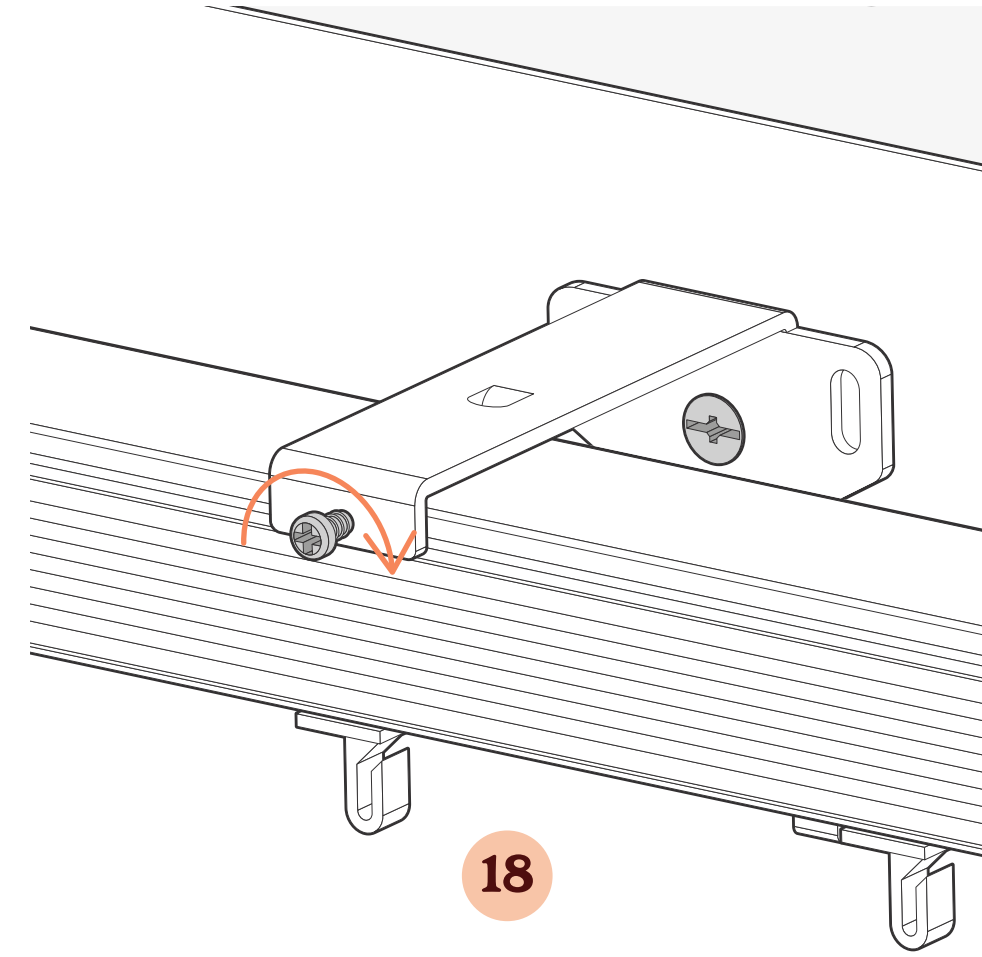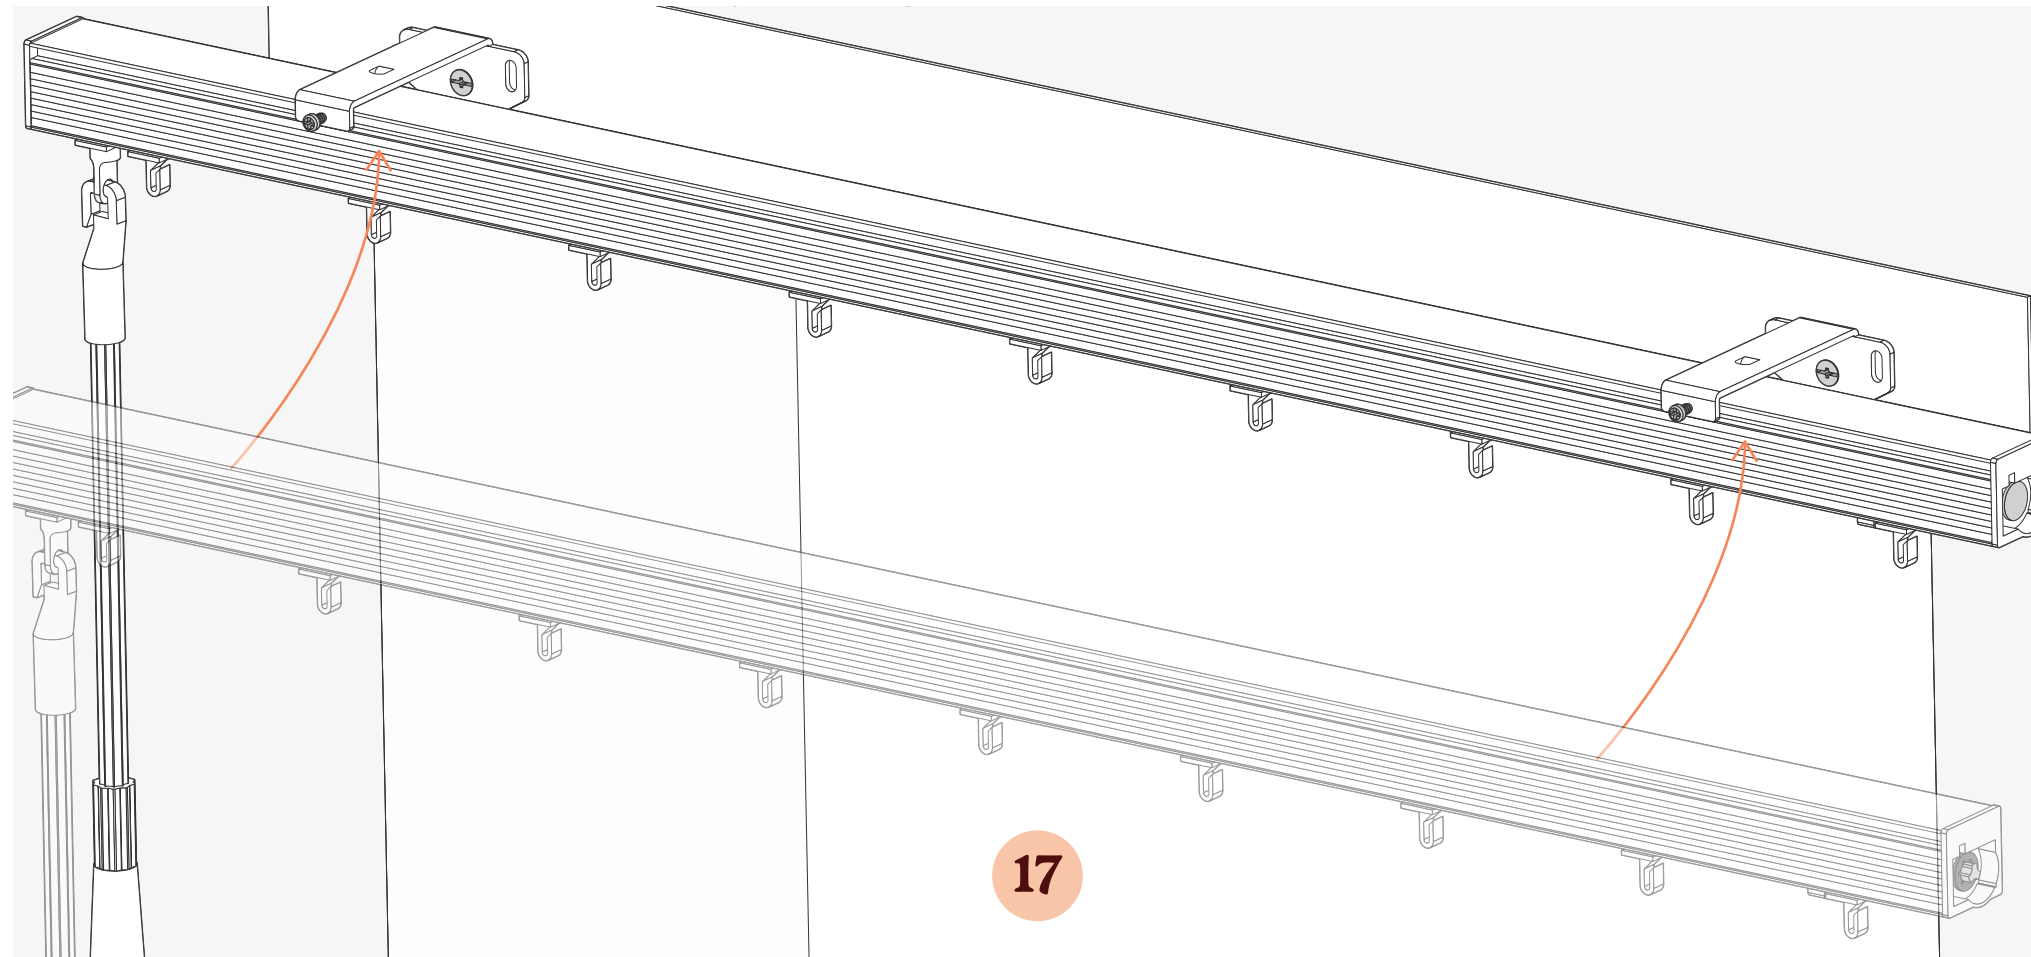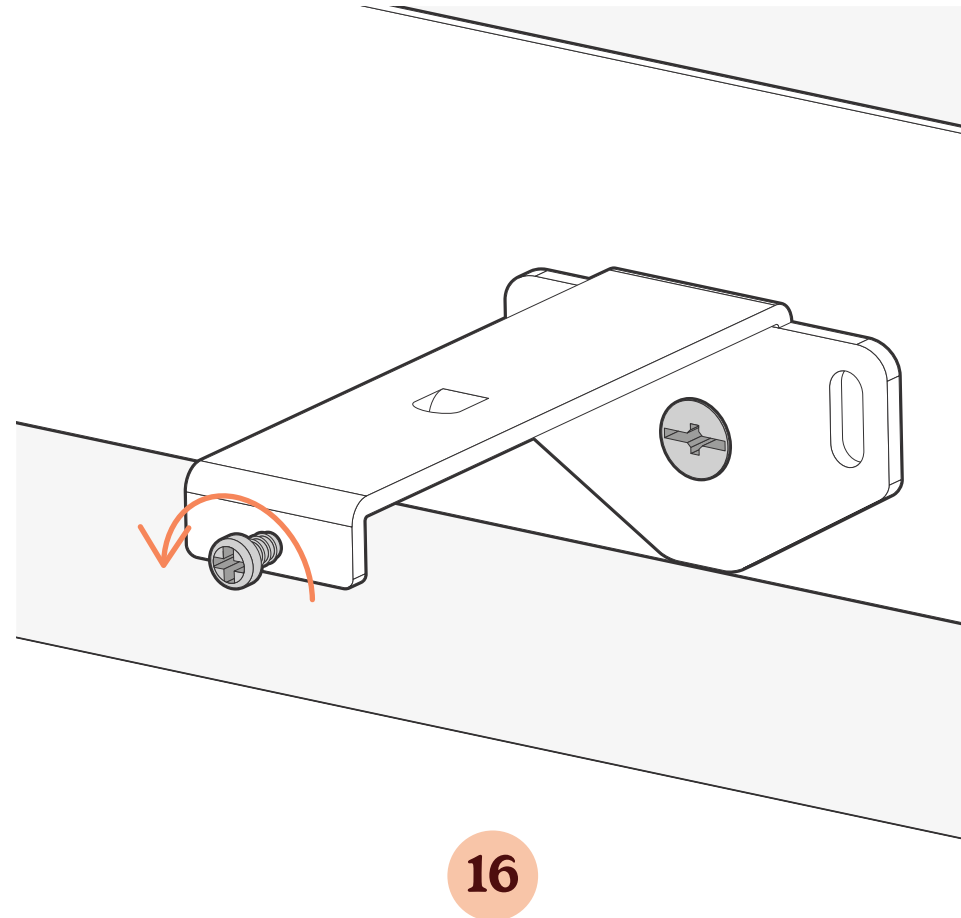

Loosen the screw in the front of each of the brackets, but don't remove it (16). Raise the headrail into the brackets (17), then hold it steady whilst you tighten the screws in the front of the brackets (18).


Section 3 *Installing the Blind's Headrail - Wider Blinds* - **Wider Blinds**

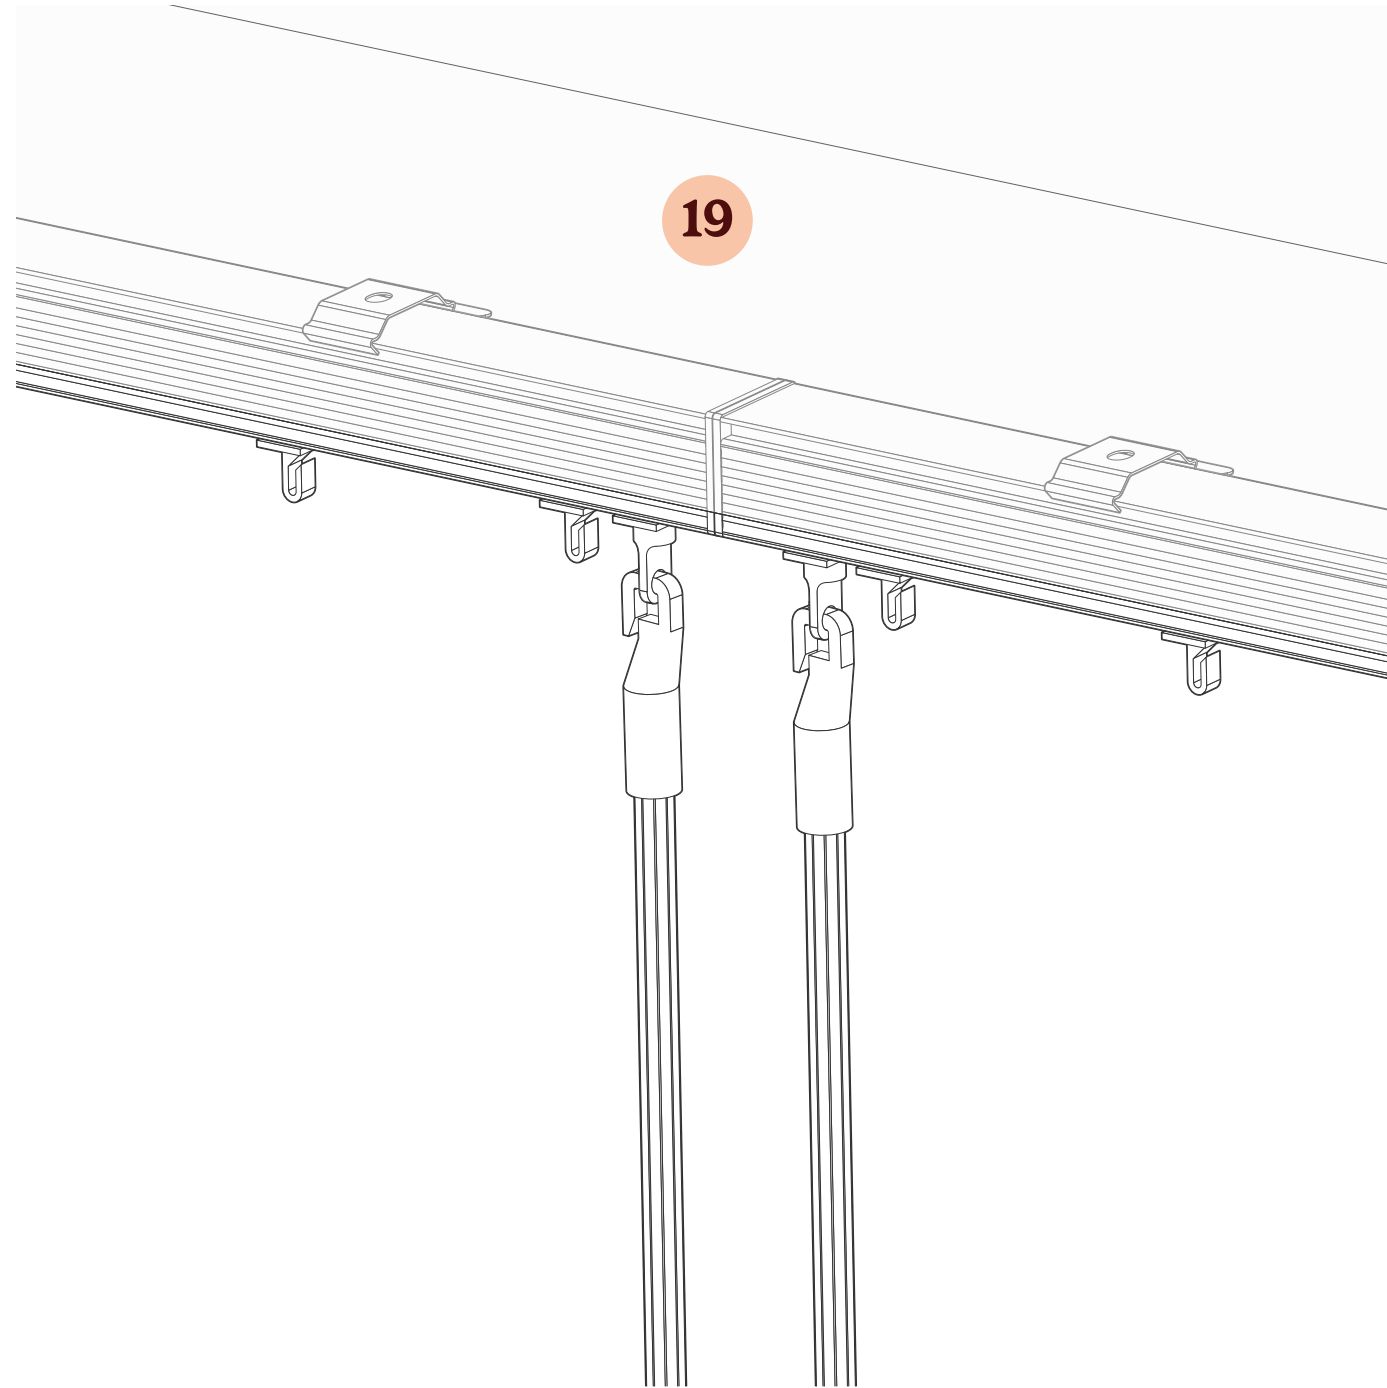

Wider blinds are supplied with 2 headrails, designed to fit flush beside each other.


They are fitted in exactly the same way as a single rail, but note that the control wands will sit beside each other in the centre of the window (19).

Section 4 *Installing the Louvres*

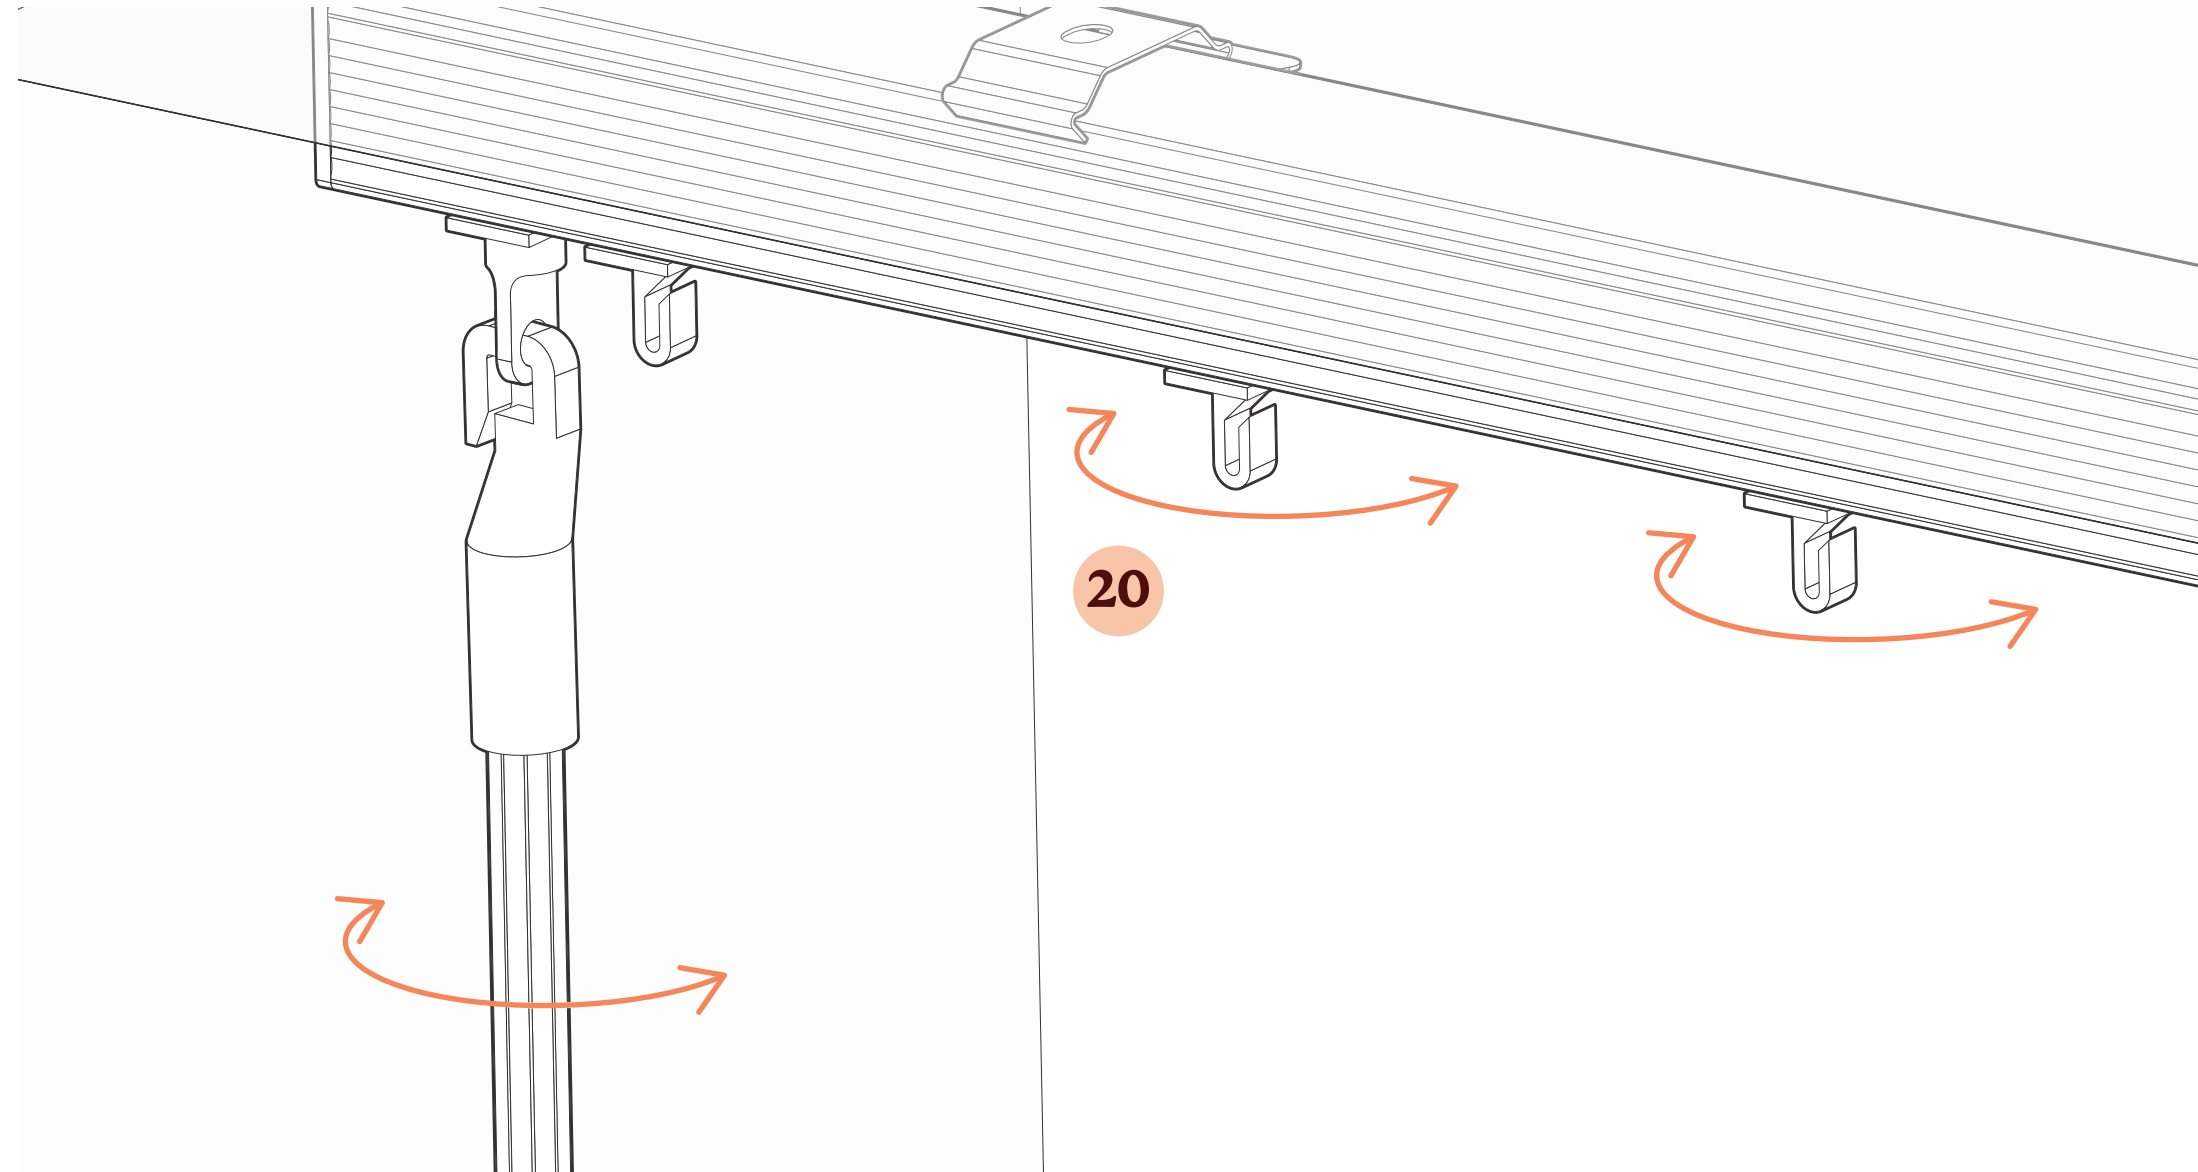


Before attaching the louvres, make sure the hooks in the headrail are all aligned. Twist the wand fully in one direction, then fully in the other, checking that all the hooks are turning smoothly as you do so (20). Then turn the hooks so that they're all facing to the side.

Section 4 *Installing the Louvres*

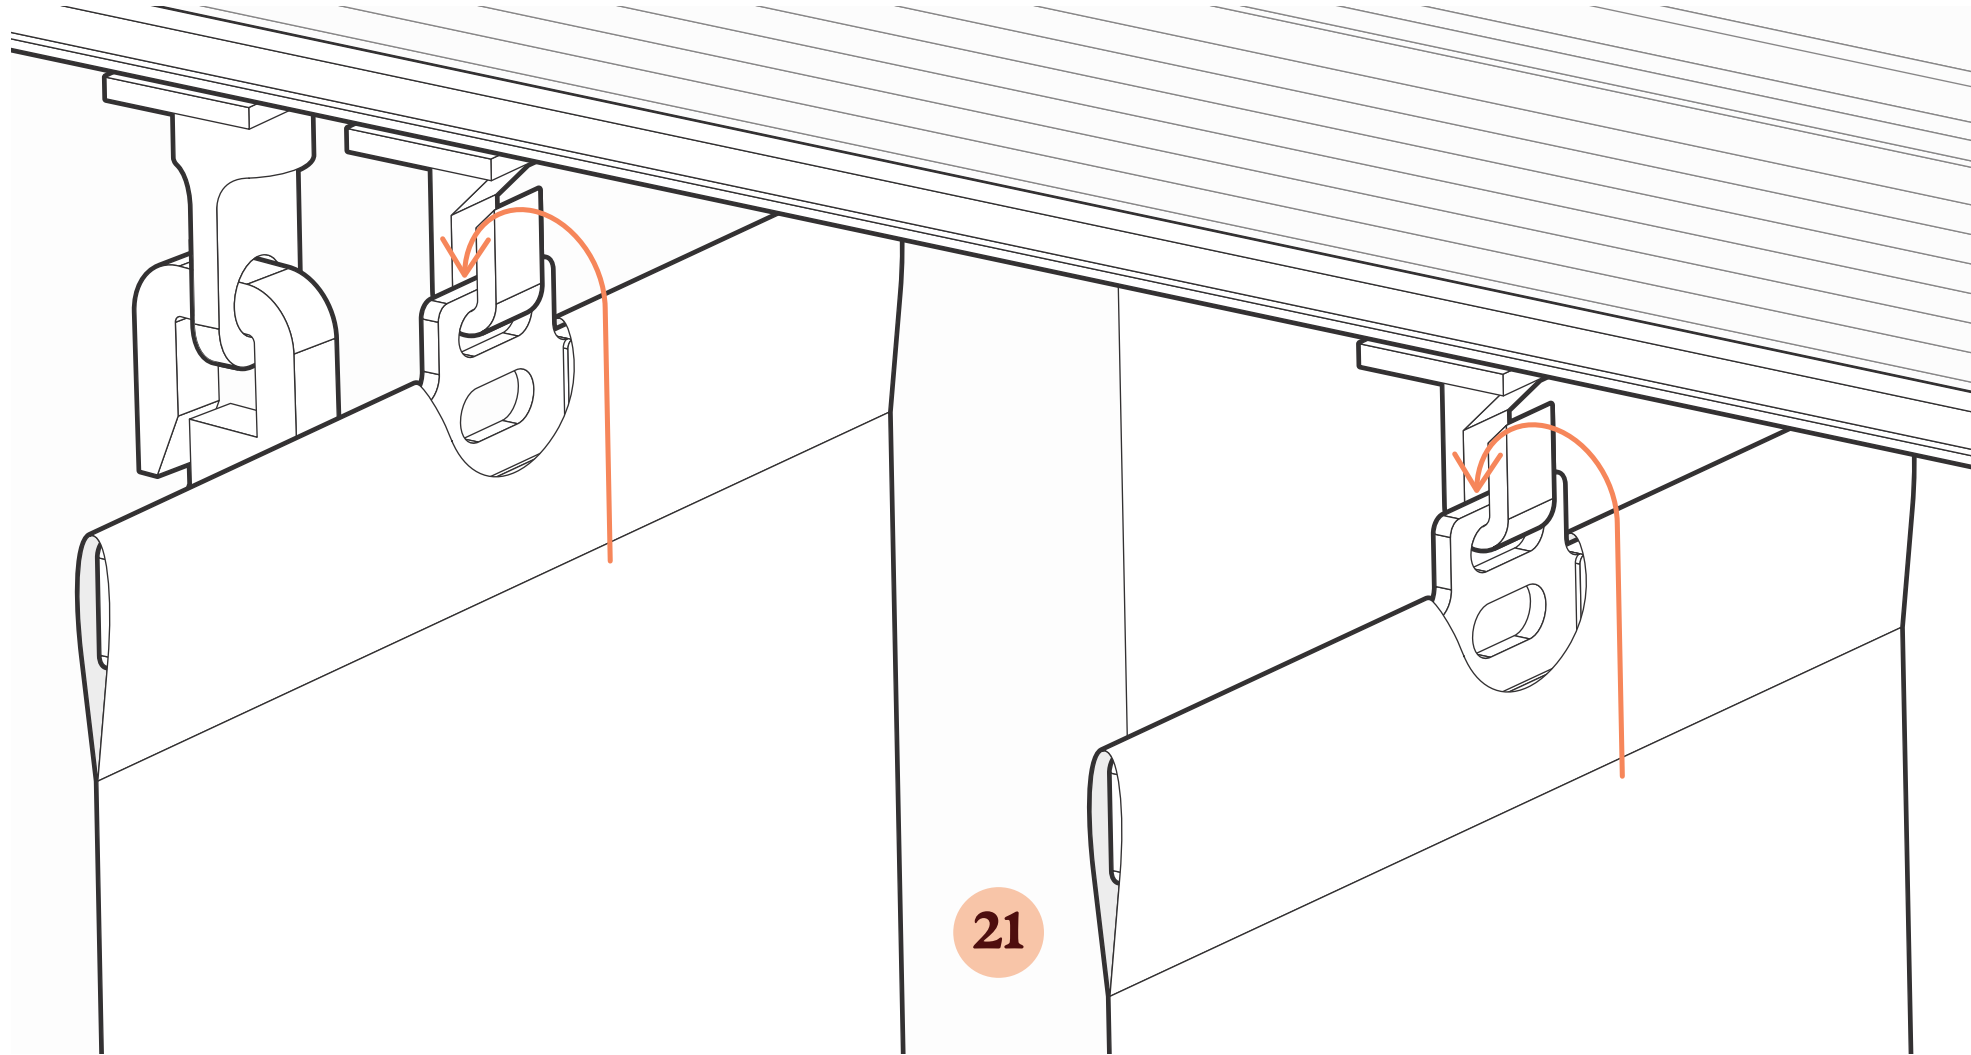

Hook the louvres onto the hooks into the headrail one by one, ensuring that they're all facing the same direction (21).

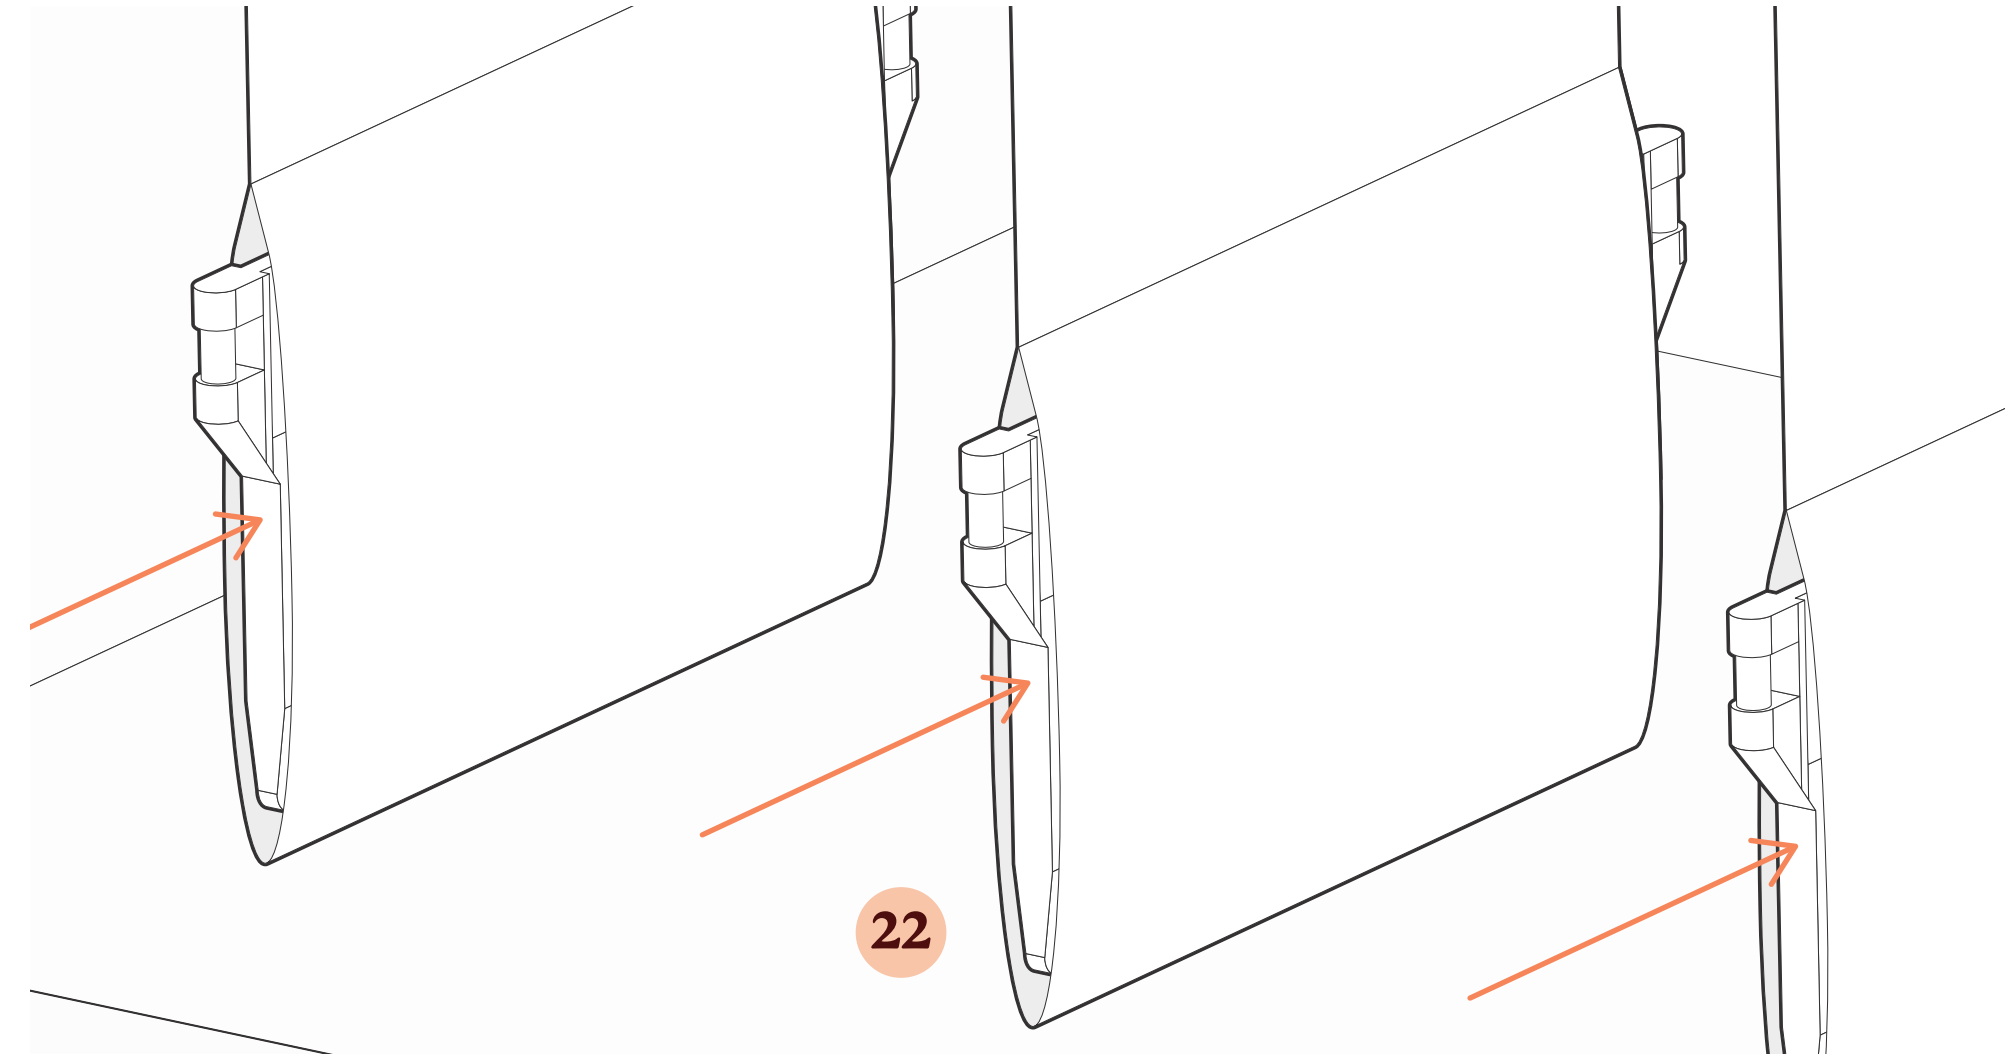


Slot the weights into the bottom pocket of each louvre (22).

Section 4 *Installing the Louvres*




Starting at one end, clip the stabilising chain onto the front of the weights (23). Do not cut or trim the chain until you have it clipped onto the front of every louvre.

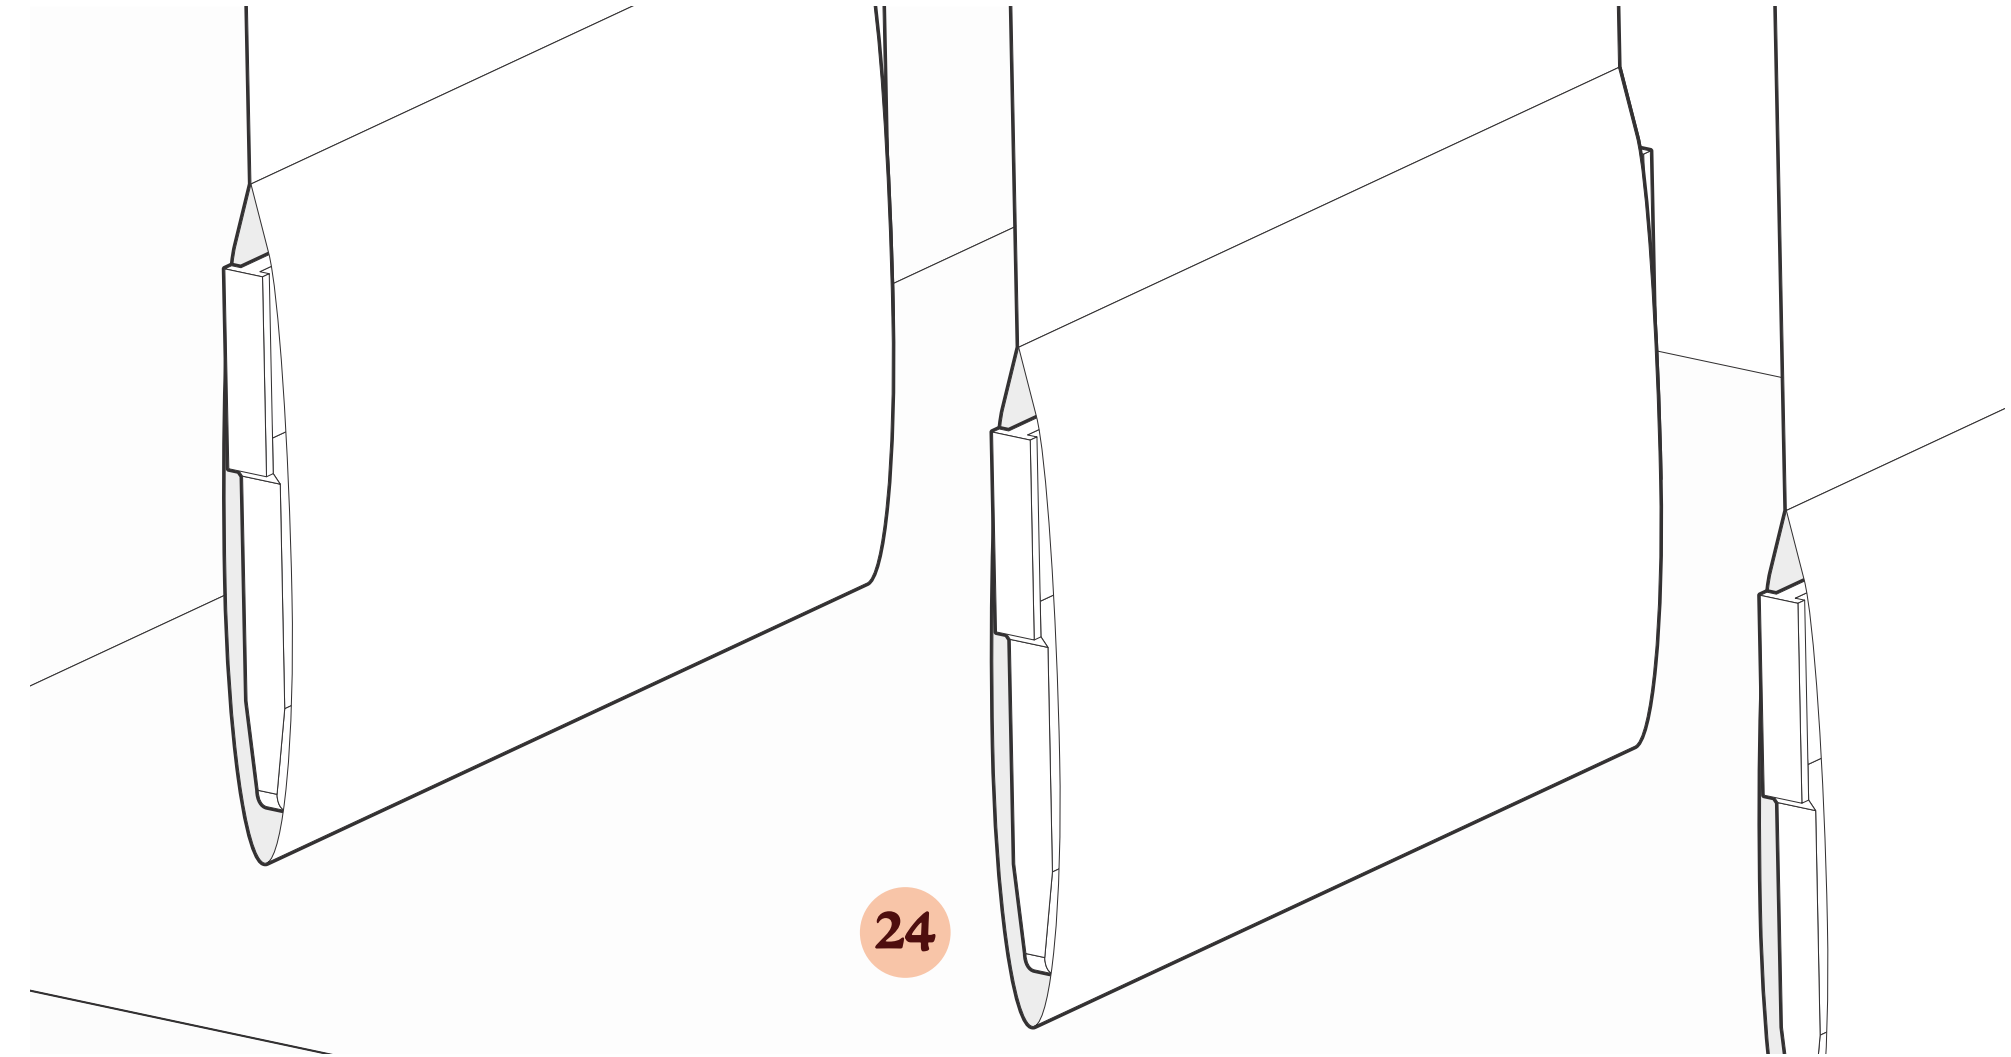


Note that if you have chainless weights then once the weights are inserted (24), you're all done.

Section 4 *Installing the Louvres*

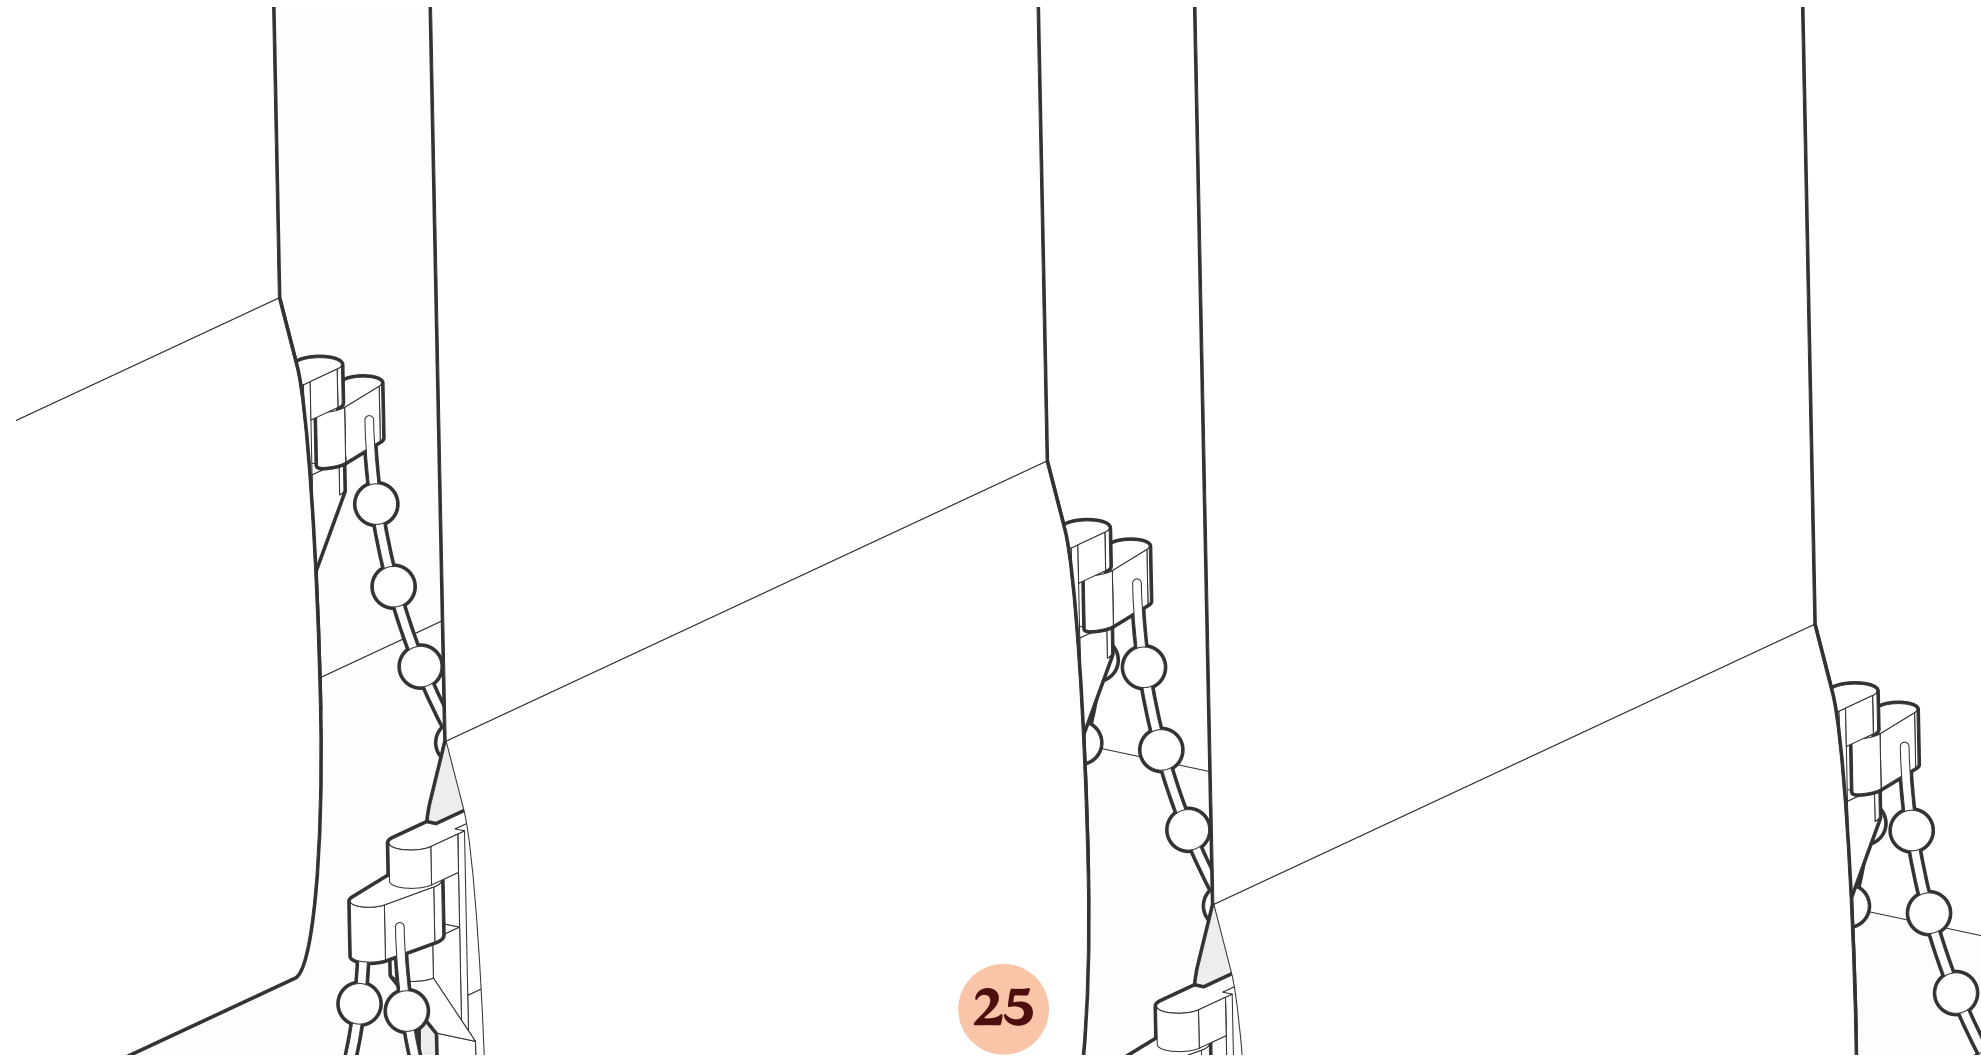

Once you've covered the front of the louvres, use a pair of scissors to cut off the remaining stabilising chain and clip it onto the back of the weights (25).

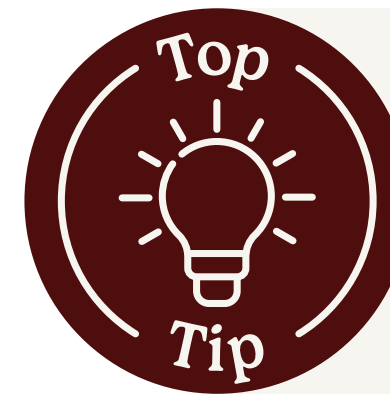

Please leave the blind in place for at least 30 minutes before using it. This gives the adhesive enough time to cure and prevents any slippage when using the blind.

And that's it! Your beautiful new Vertical Blind is fully installed and ready to enjoy...