


Turn your *phone or tablet*


Our guides are best viewed in landscape if you're viewing on your phone or tablet.

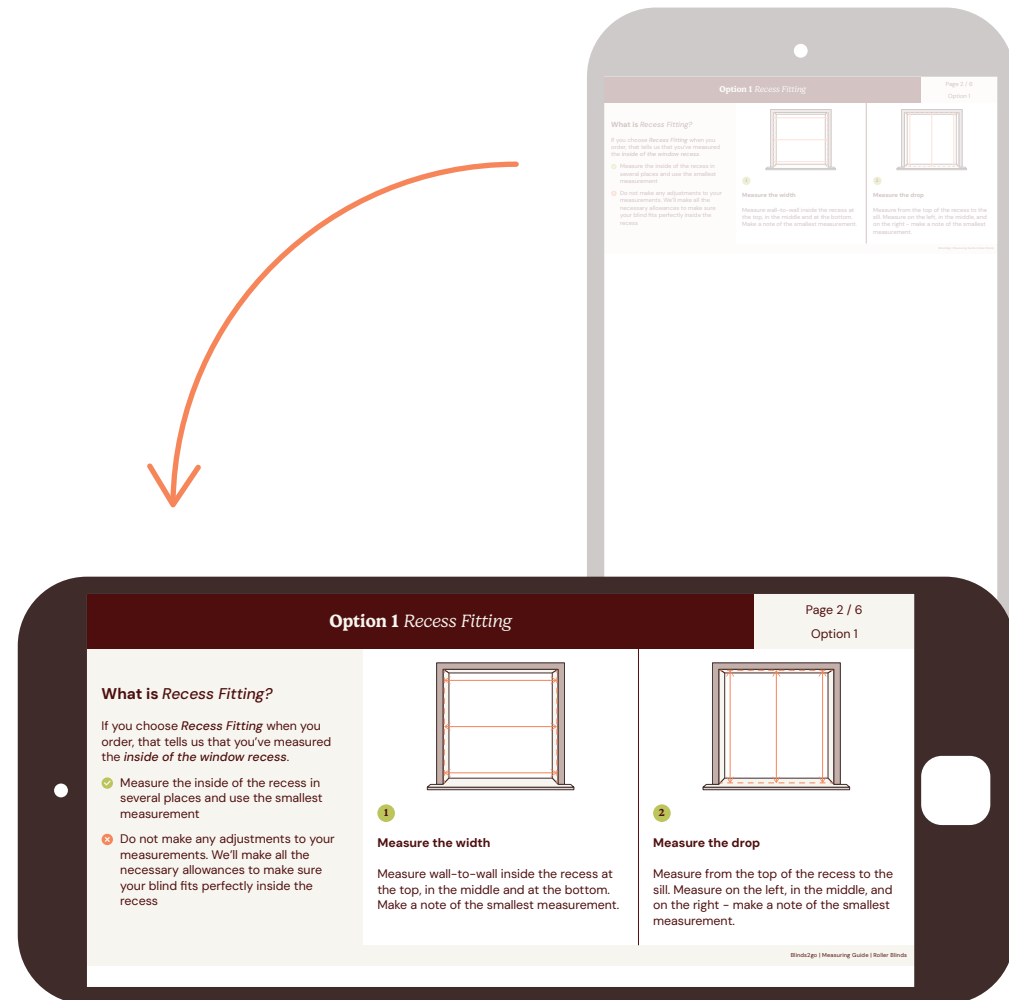

Designed for *DIY*


Our Stick On Night & Day Pleated Blinds are designed to be installed by you, without specialist fitters, even if you don't have much DIY experience.

Please read each page of this guide carefully during installation, following along one step at a time.

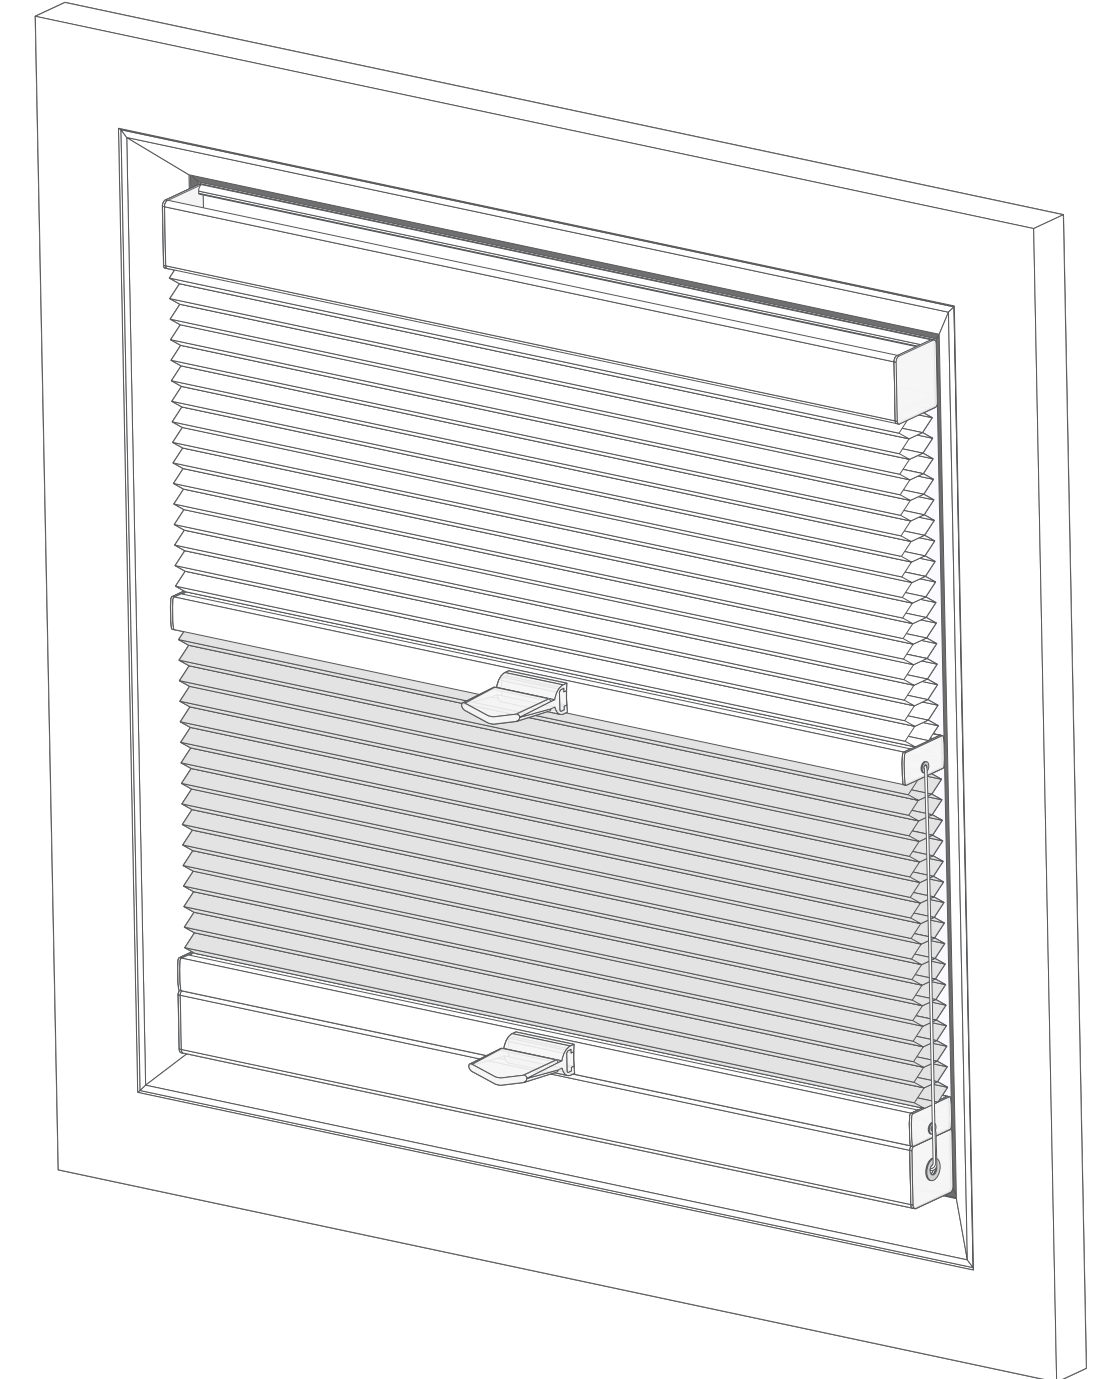

Parts included *in your order*:




- 1 Night & Day Pleated Blind
- 2 Alcohol wipes

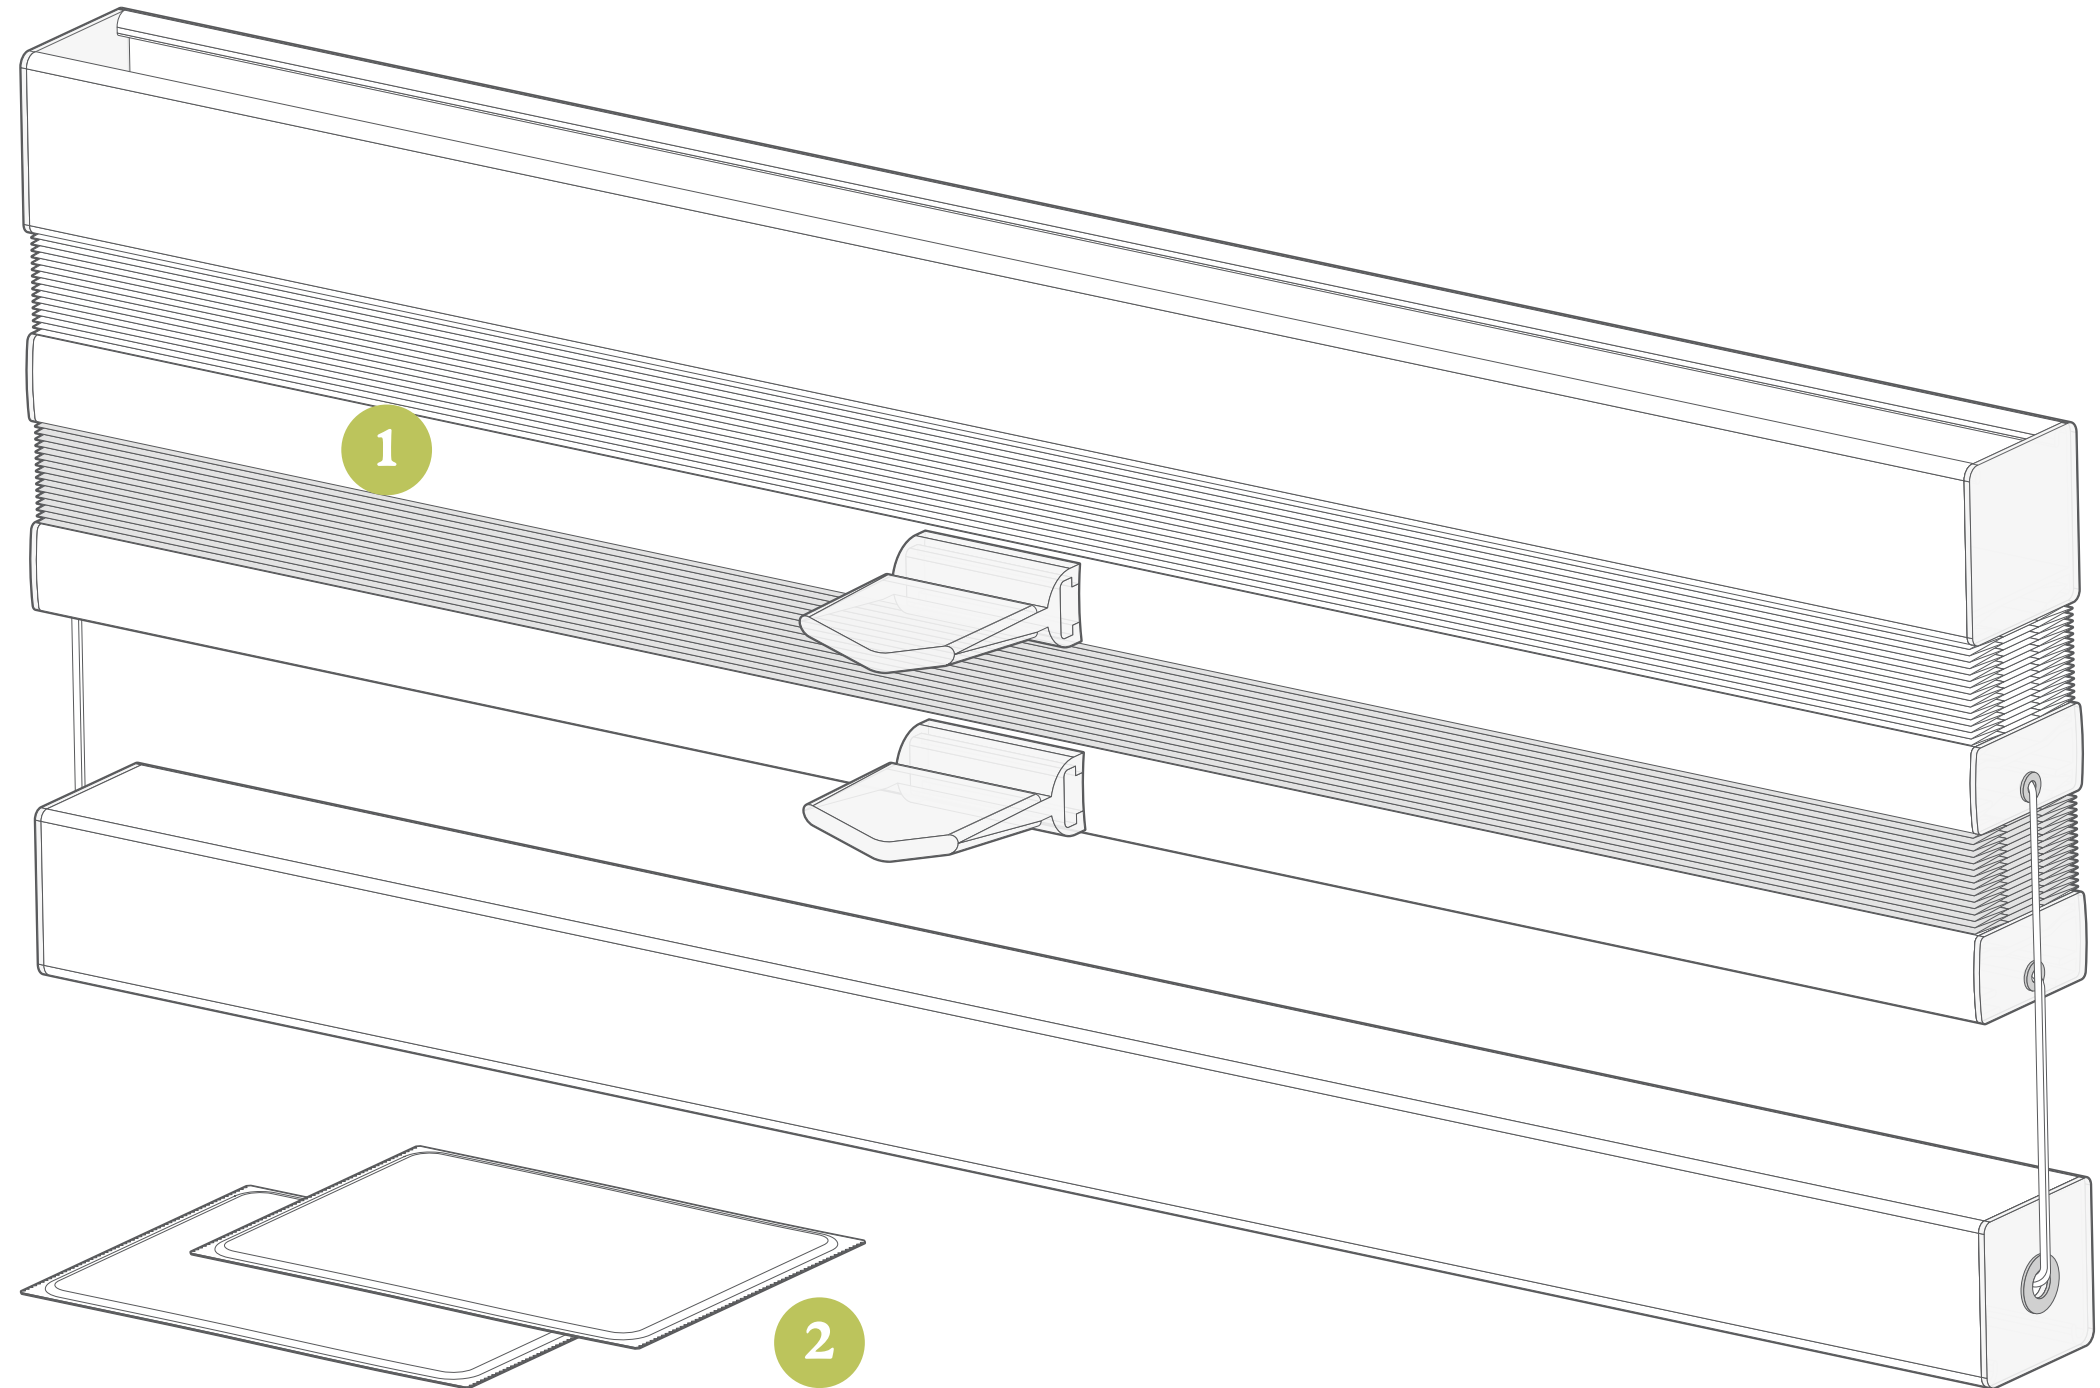

Section 2 *Installing the Blind*

Page 3 / 7

Section 2

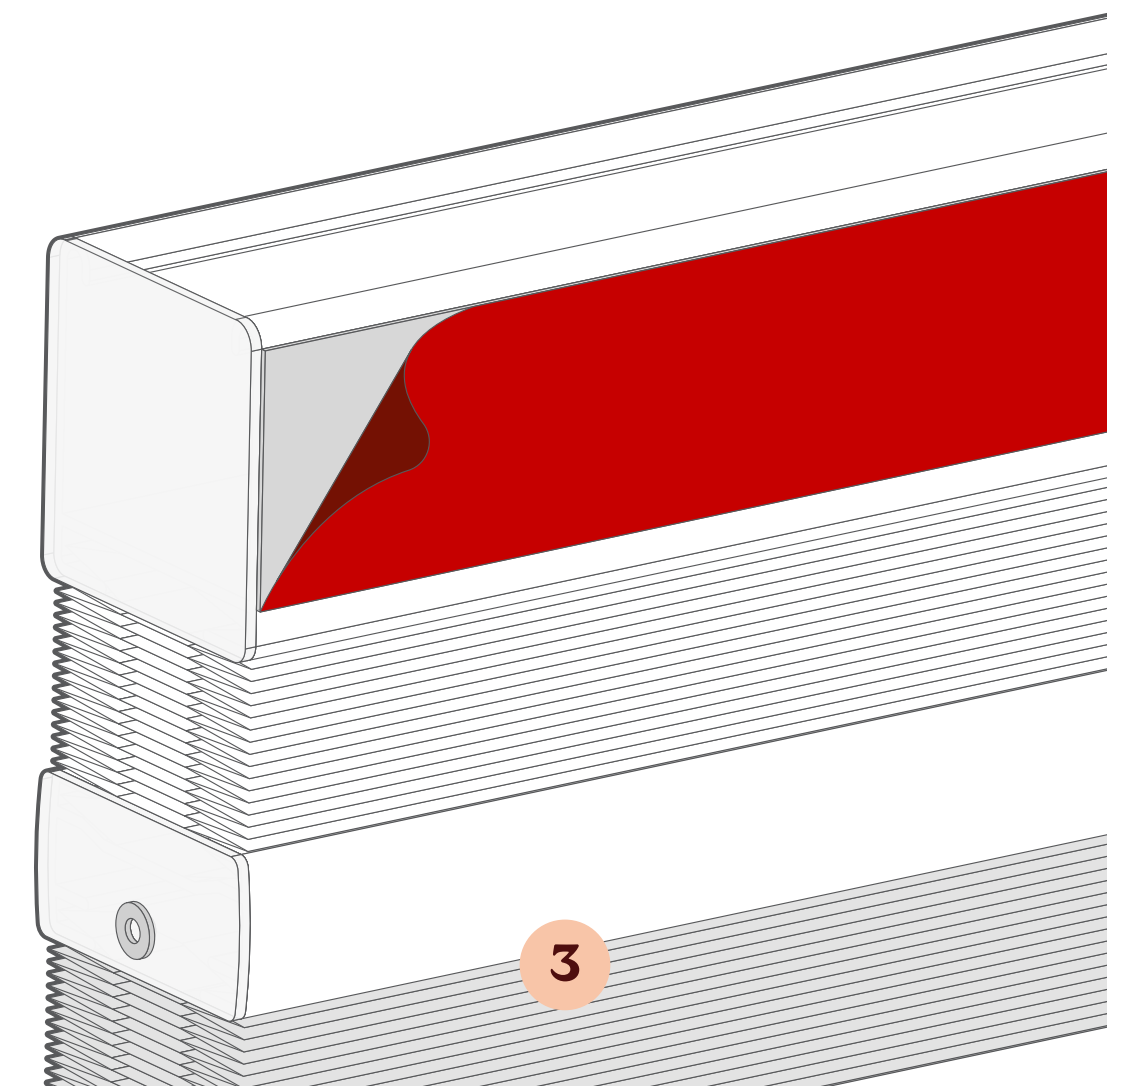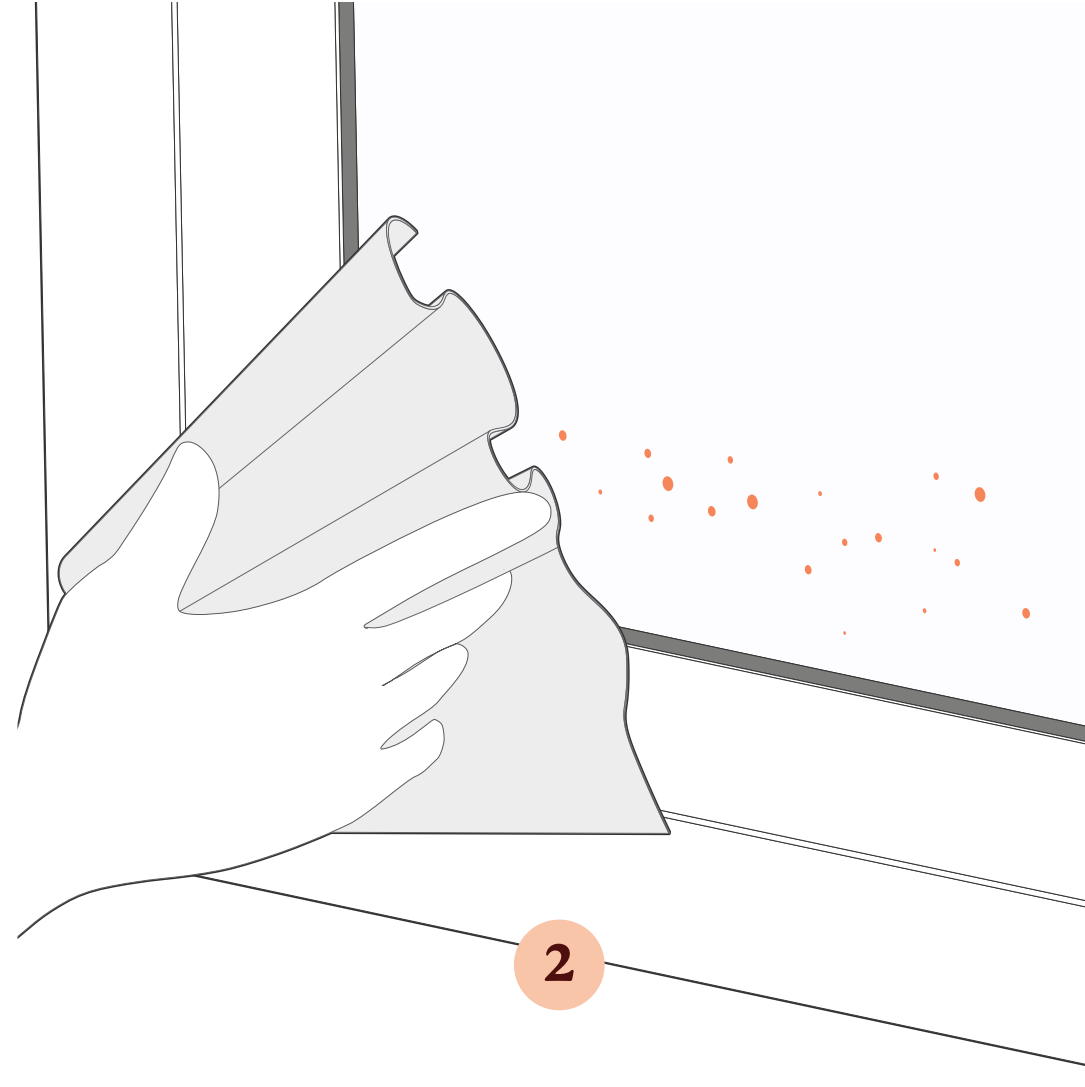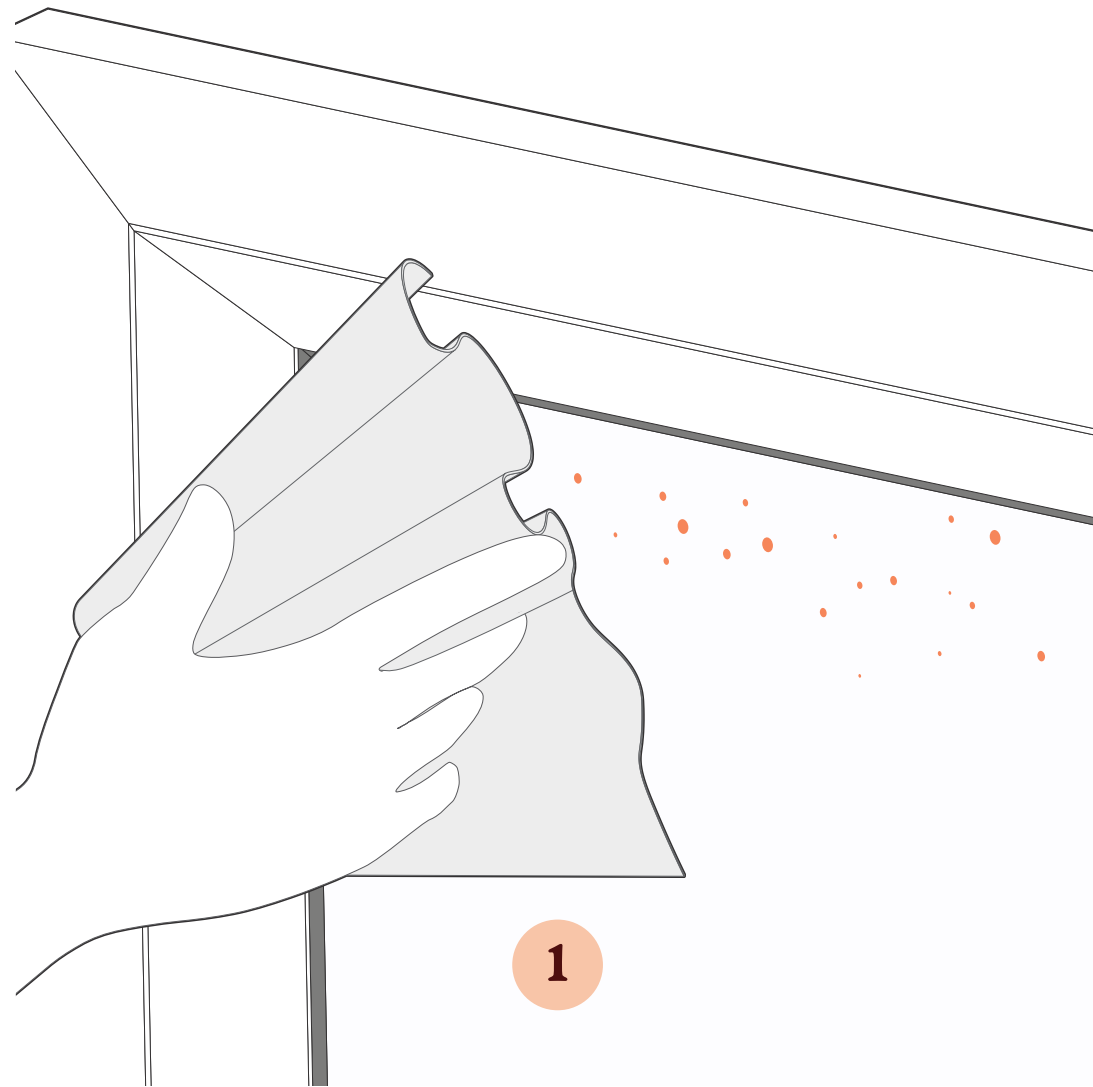


Use soapy water and a cloth, then the alcohol wipes provided, to clean the glass, especially across the top (1) and bottom (2). The cleaner the surface, the better the blind will adhere, so make sure it's entirely free of any dirt or dust. ***Leave until the glass is fully dry before moving onto the next step.*** Once it's dry, Peel the cover from the adhesive strip on the back of the blind's headrail (3).


Section 2 *Installing the Blind*

Page 4 / 7

Section 2.1

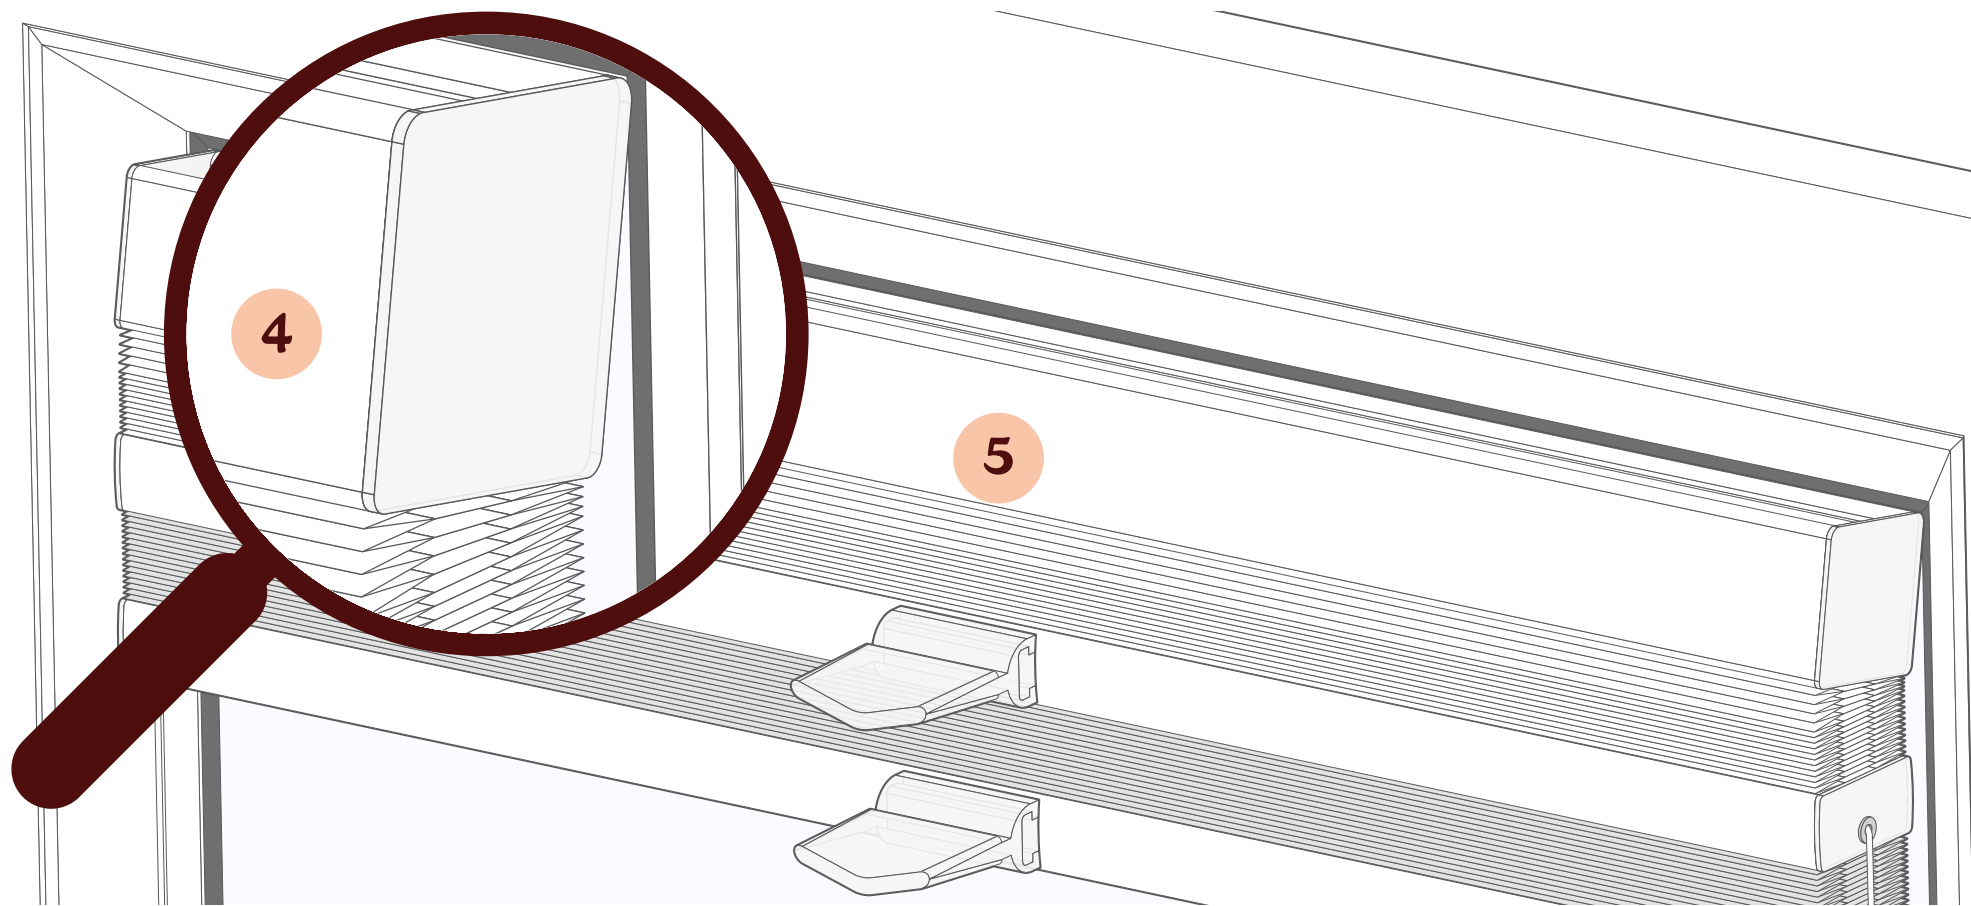

Rest the top of the blind against the top of the glass – do this with the headrail tilted a little so that it doesn't stick whilst you're straightening it up (4 / 5).

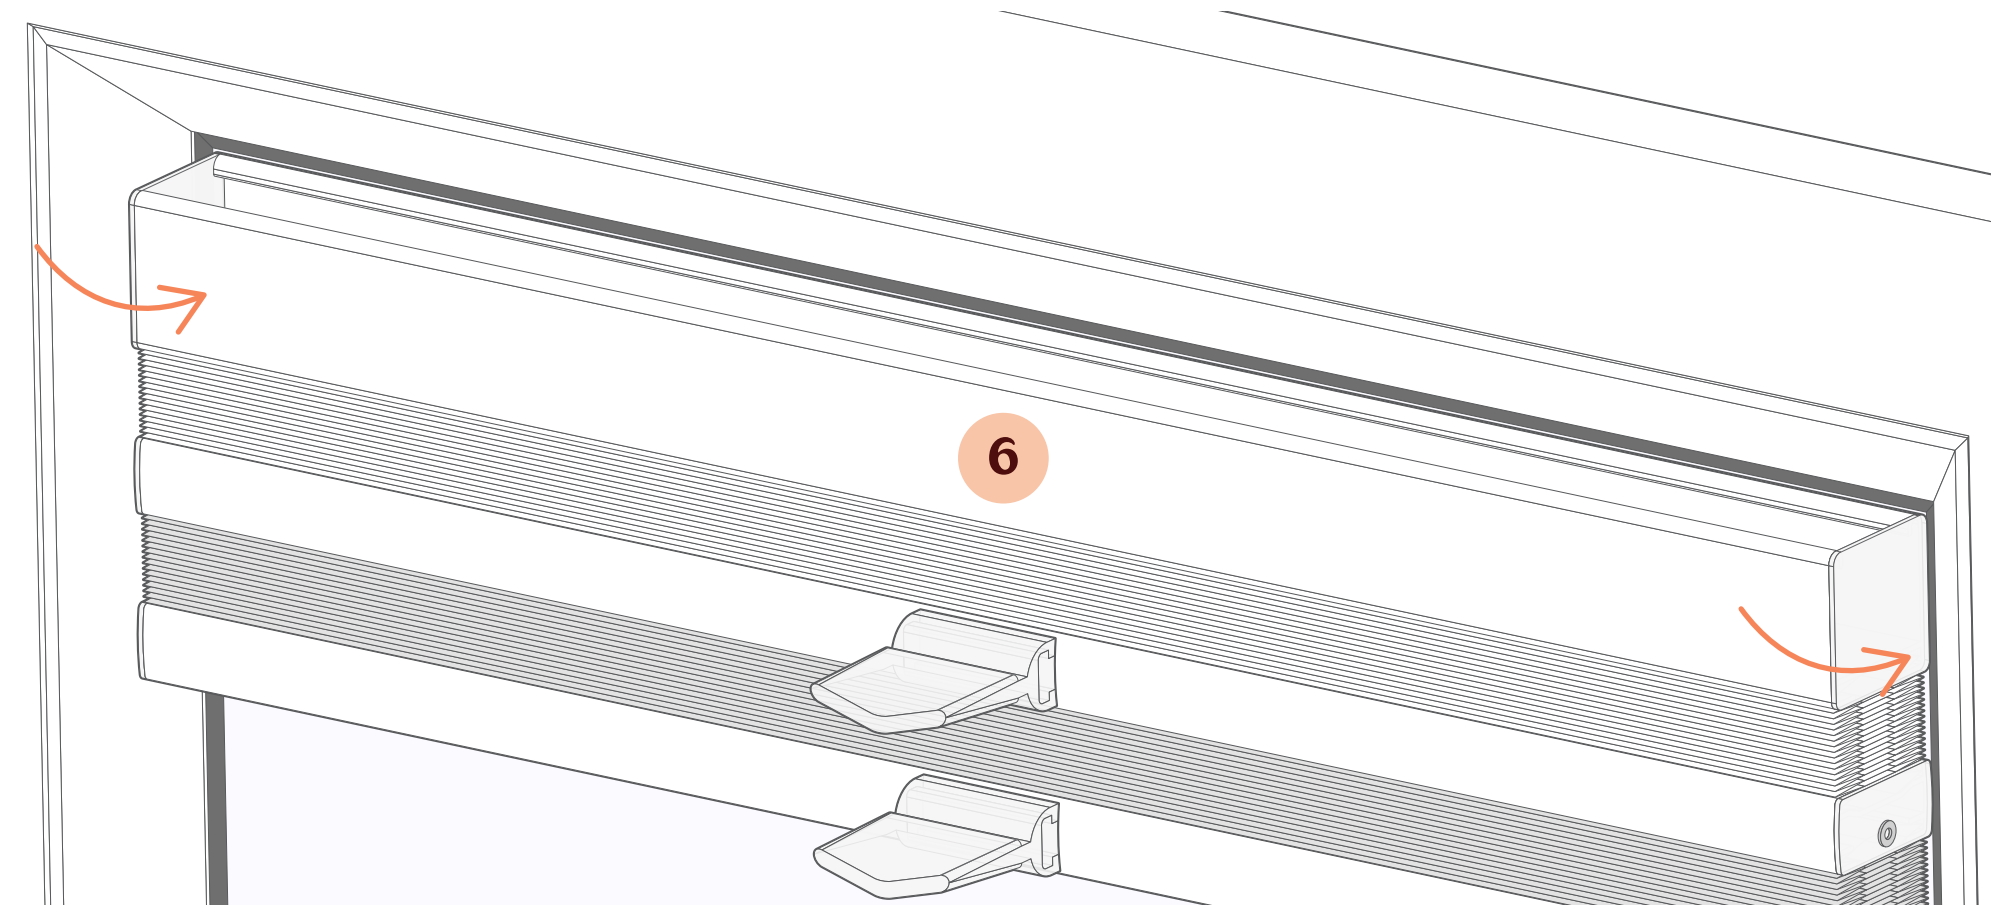


When you're happy with the position, press the headrail back against the glass and hold for around 30 seconds (6).


Section 2 *Installing the Blind*

Page 5 / 7

Section 2.2

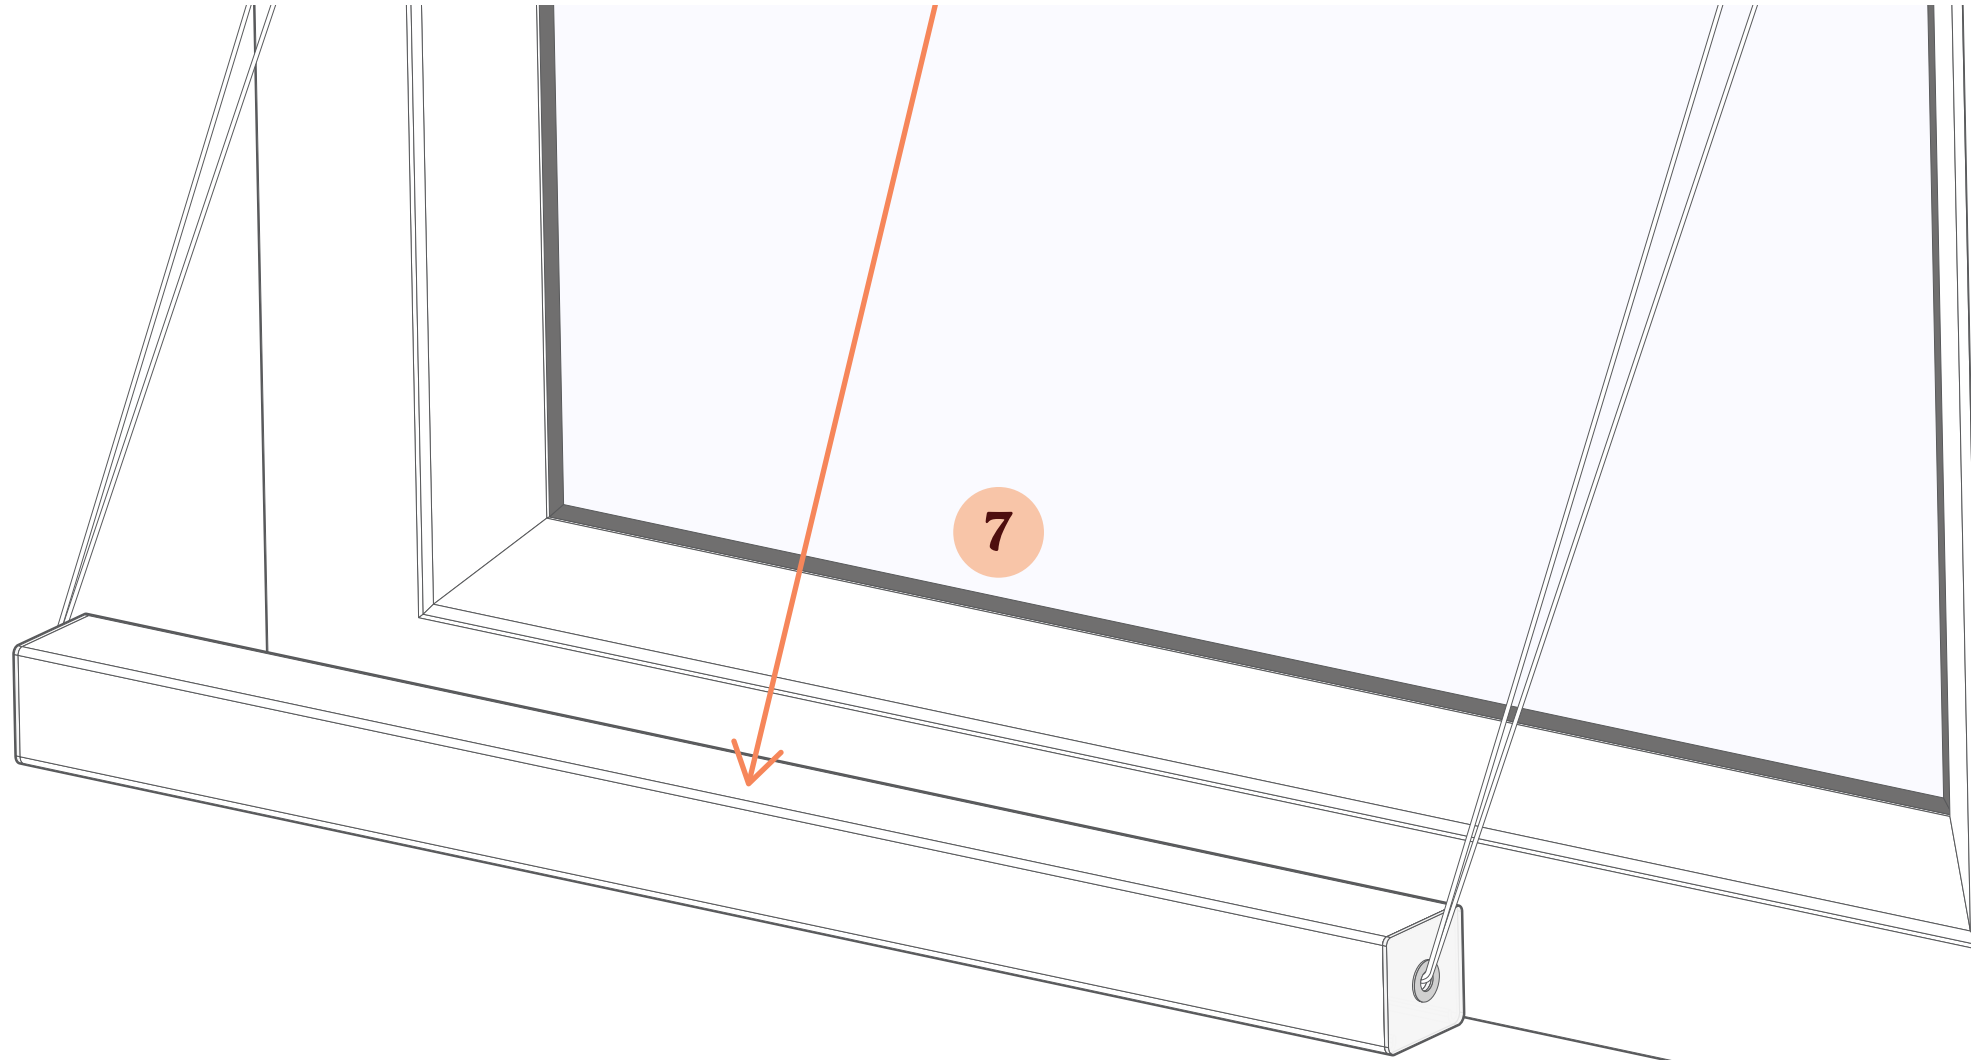

Pull the bottom rail down to stretch out the cords, until the rail is level with the bottom of the glass (7).

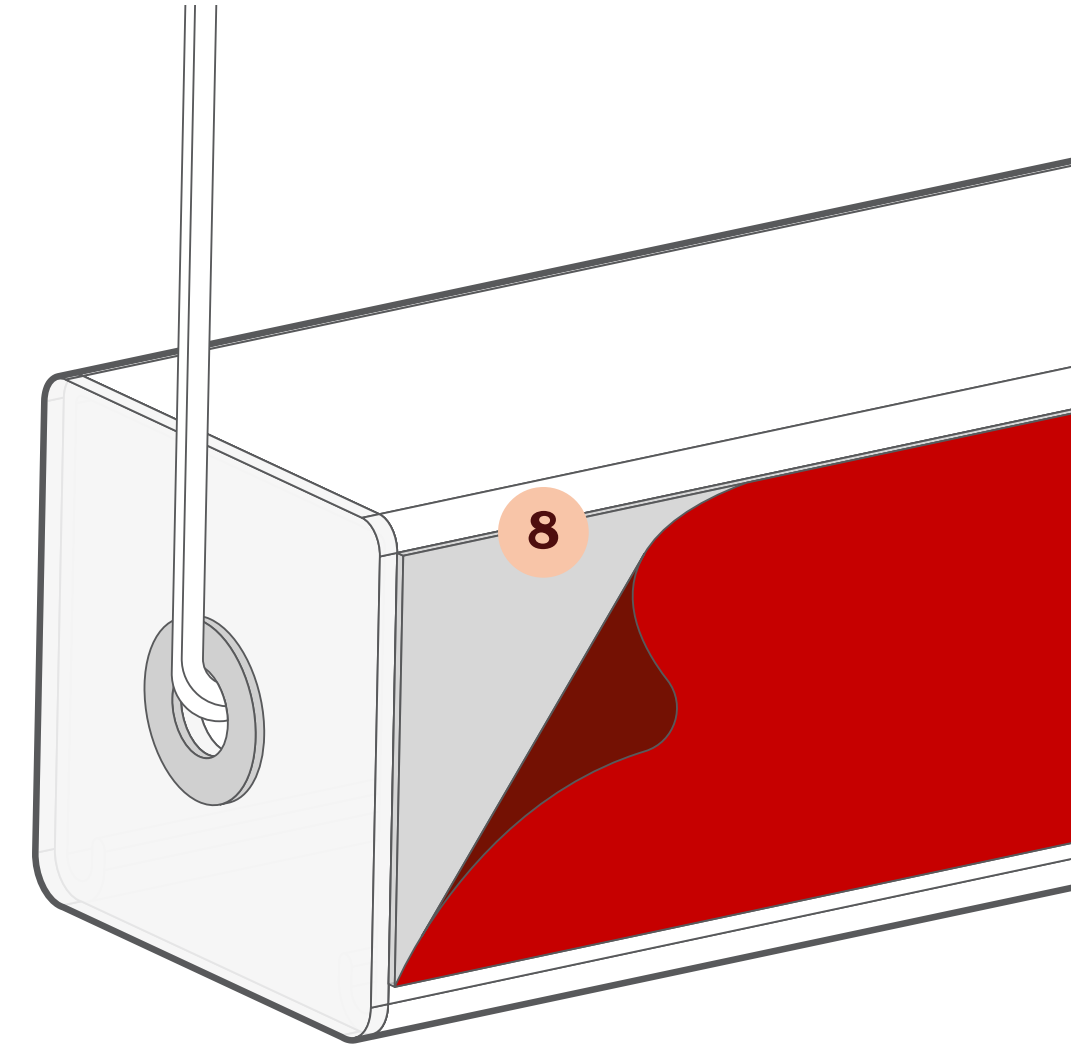


Peel the cover from the adhesive strip on the back of the bottom rail (8).

Section 2 *Installing the Blind*


Page 6 / 7

Section 2.3

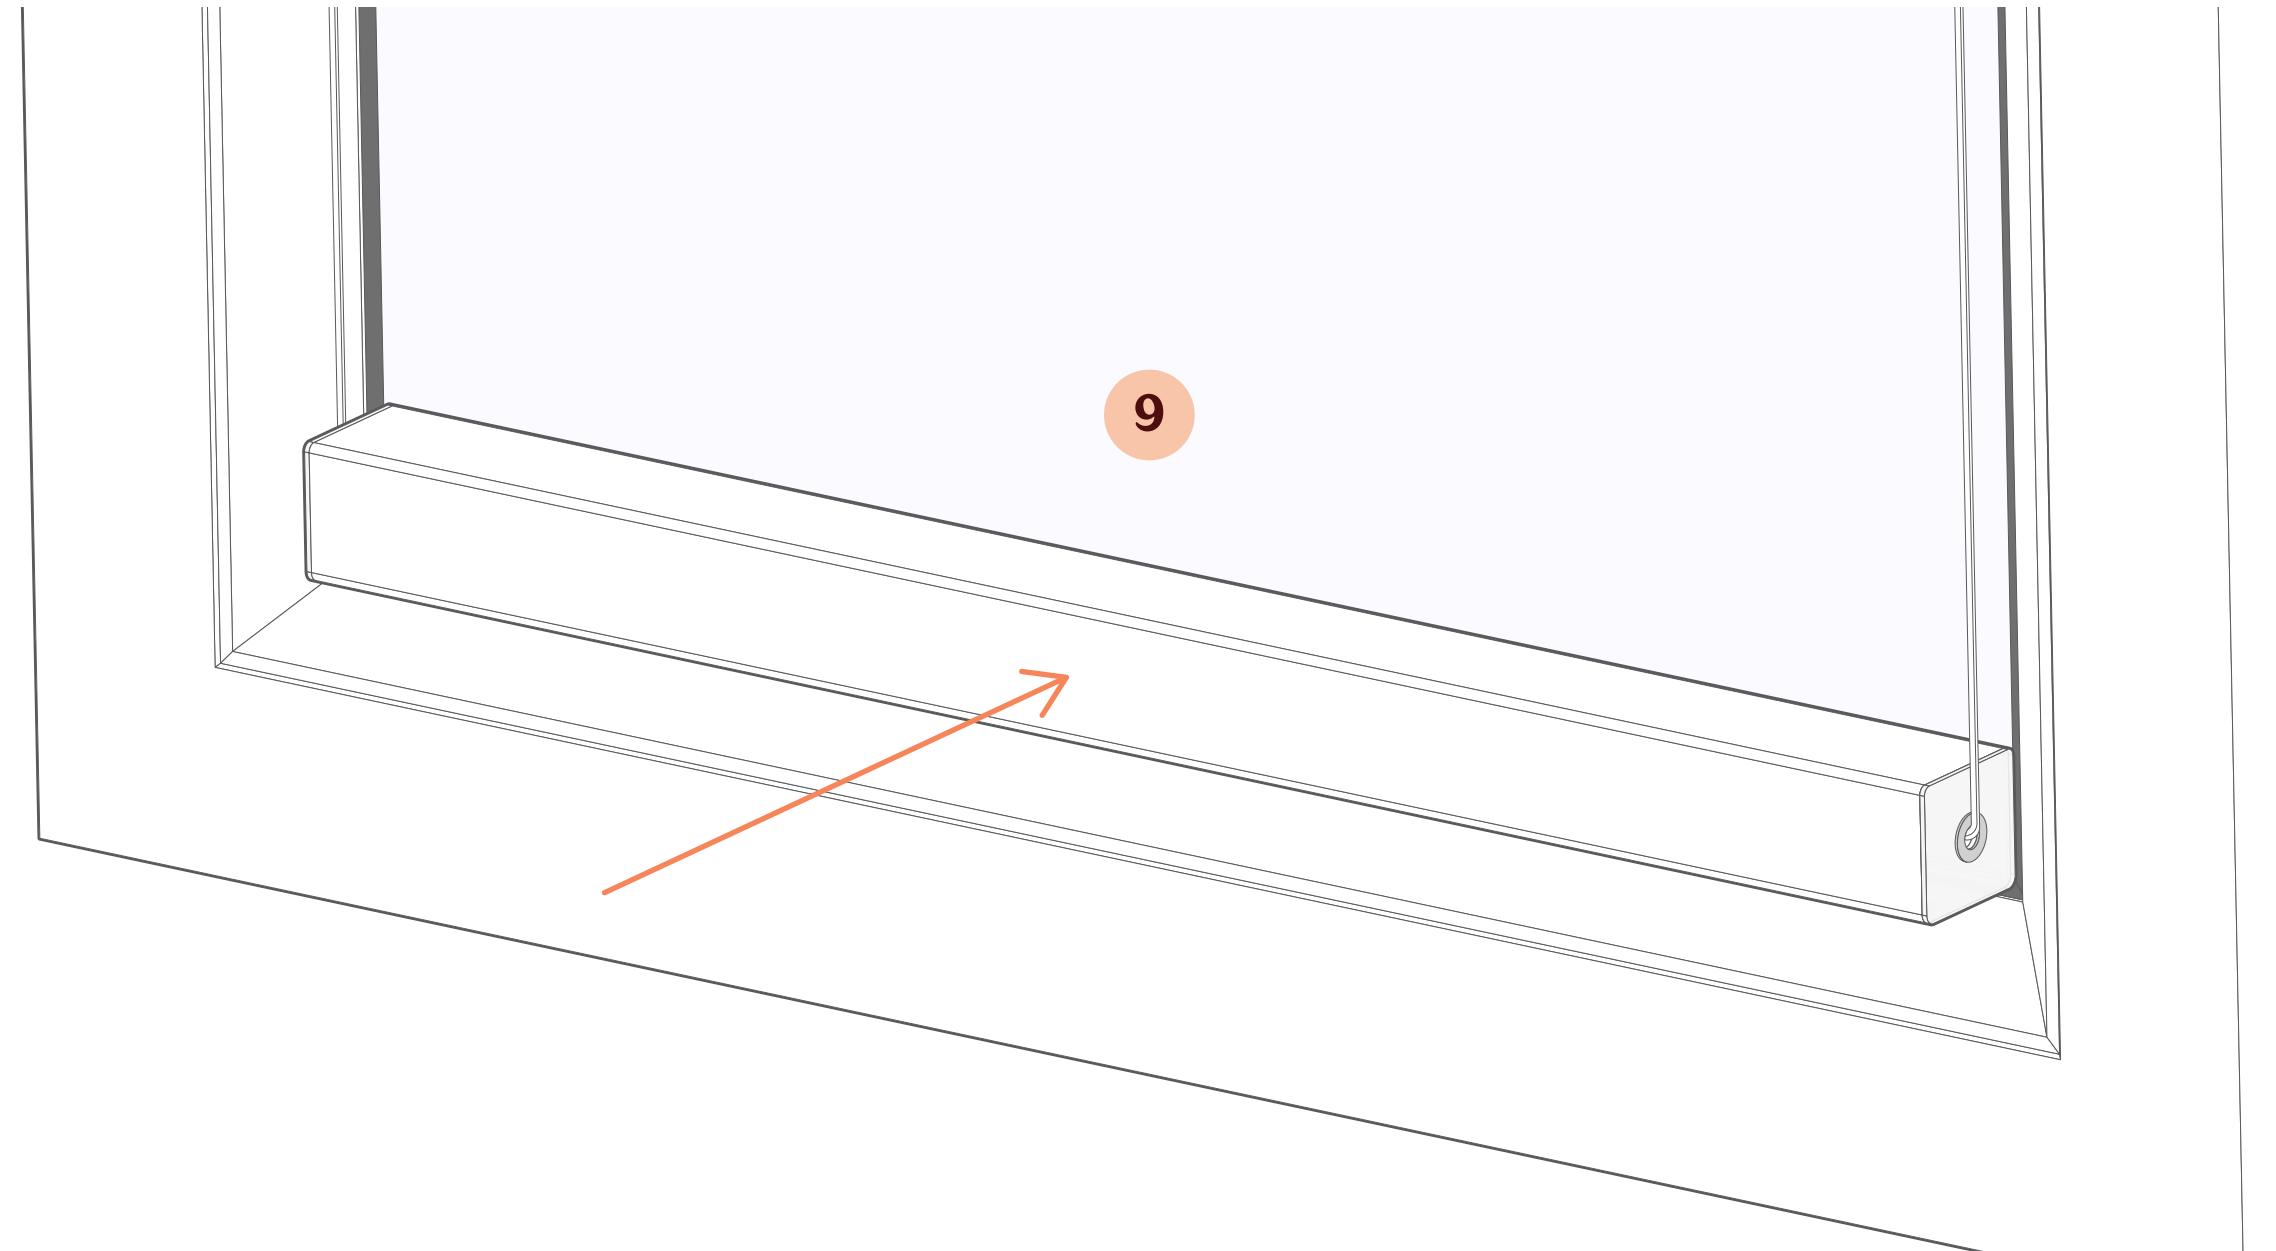


Push the bottom rail back against the glass and hold in place for around 30 seconds to give the adhesive time to set (9).

Section 2 *Installing the Blind*

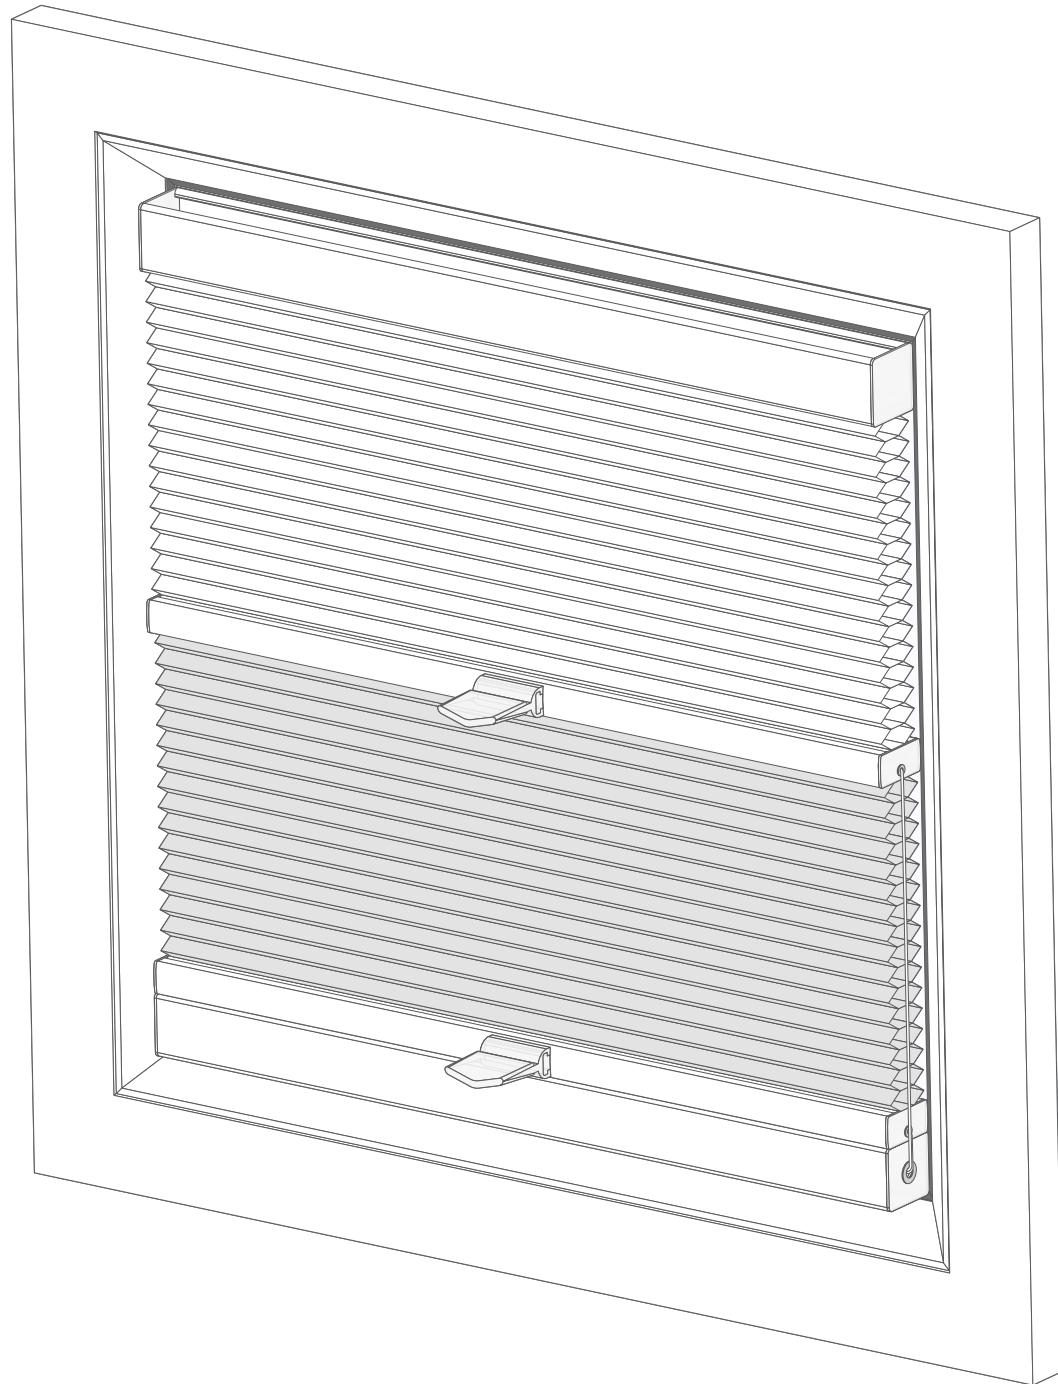

And that's it! Your beautiful new blind is installed and ready to enjoy.

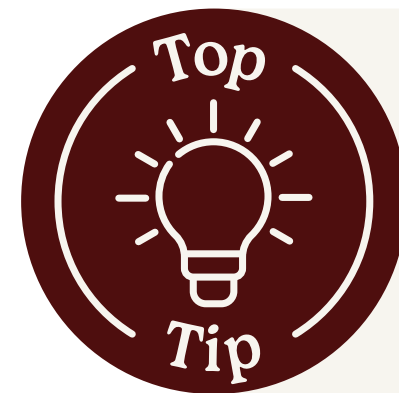

Please leave the blind in place for at least 30 minutes before using it. This gives the adhesive enough time to cure and prevents any slippage when you raise or lower the blind.