


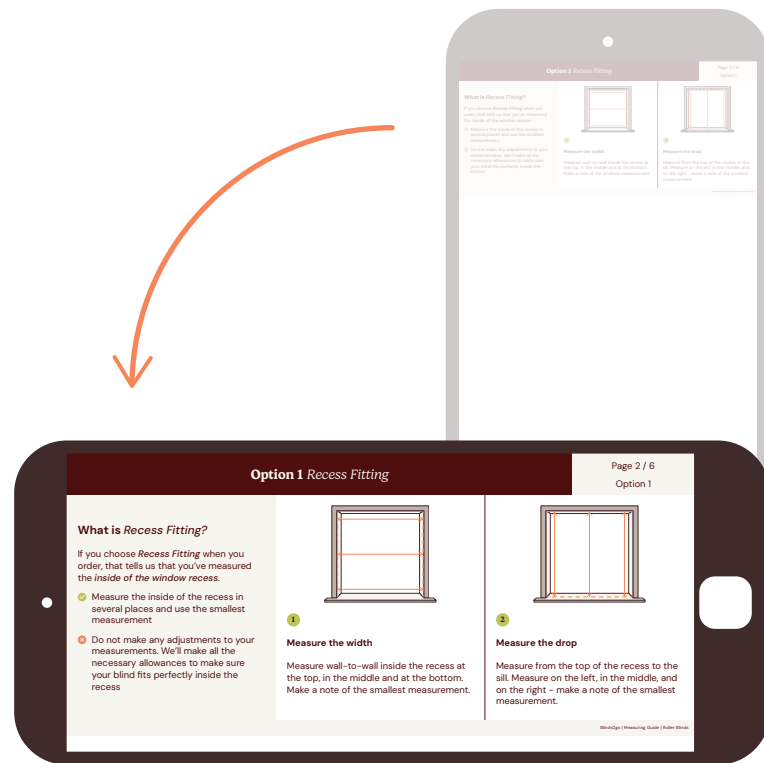


Turn your phone or tablet

Our guides are best viewed in landscape if you're viewing on your phone or tablet.

Designed for *DIY*




Our Stick On Blackout Roller Blinds are designed to be installed by you, without specialist fitters, even if you don't have much DIY experience.

Please read each page of this guide carefully during installation, following along one step at a time.

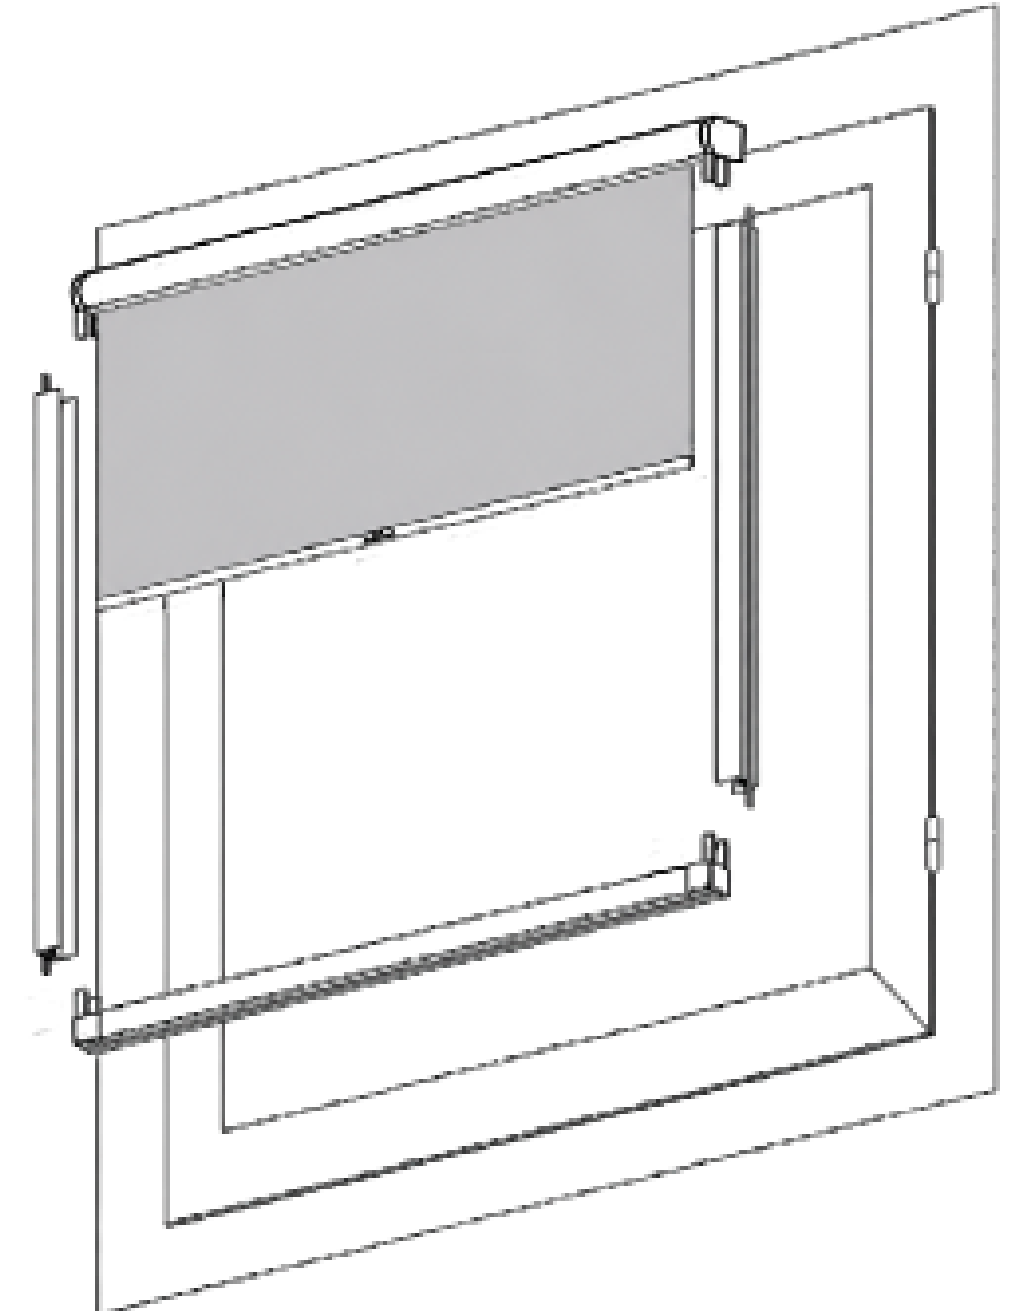


Parts included *in your order*:

- 1 Stick On Roller Blind
- 2 Bottom bar
- 3 Side frames
- 4 Blackout strip
- 5 Allen key
- 6 Alcohol wipes


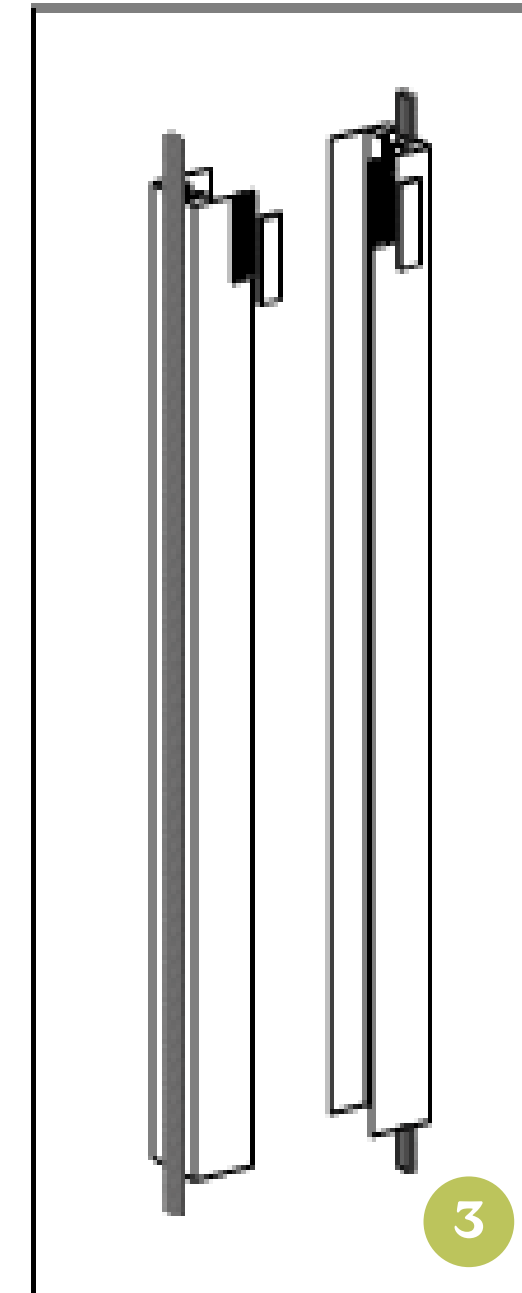
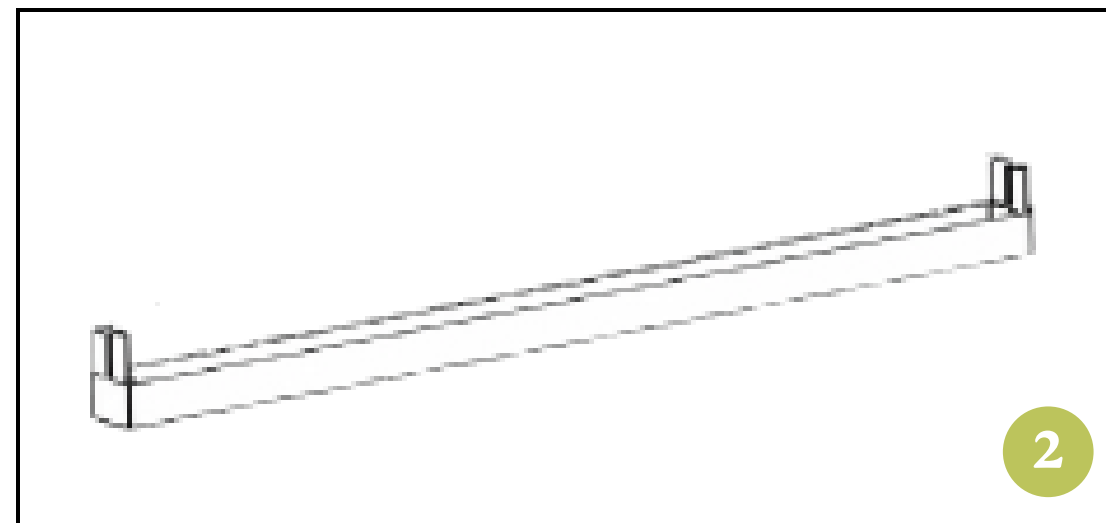
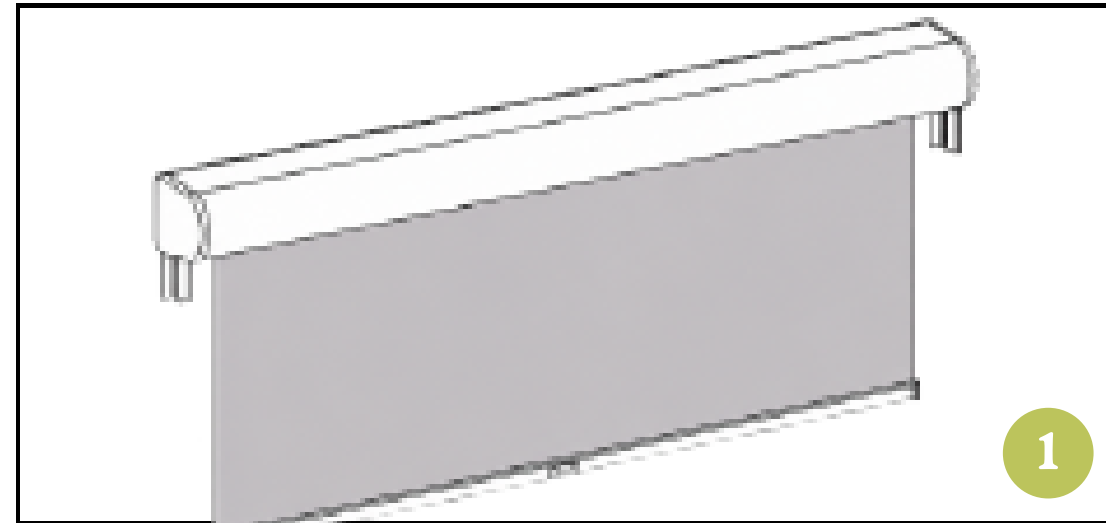


Section 2 Preparation

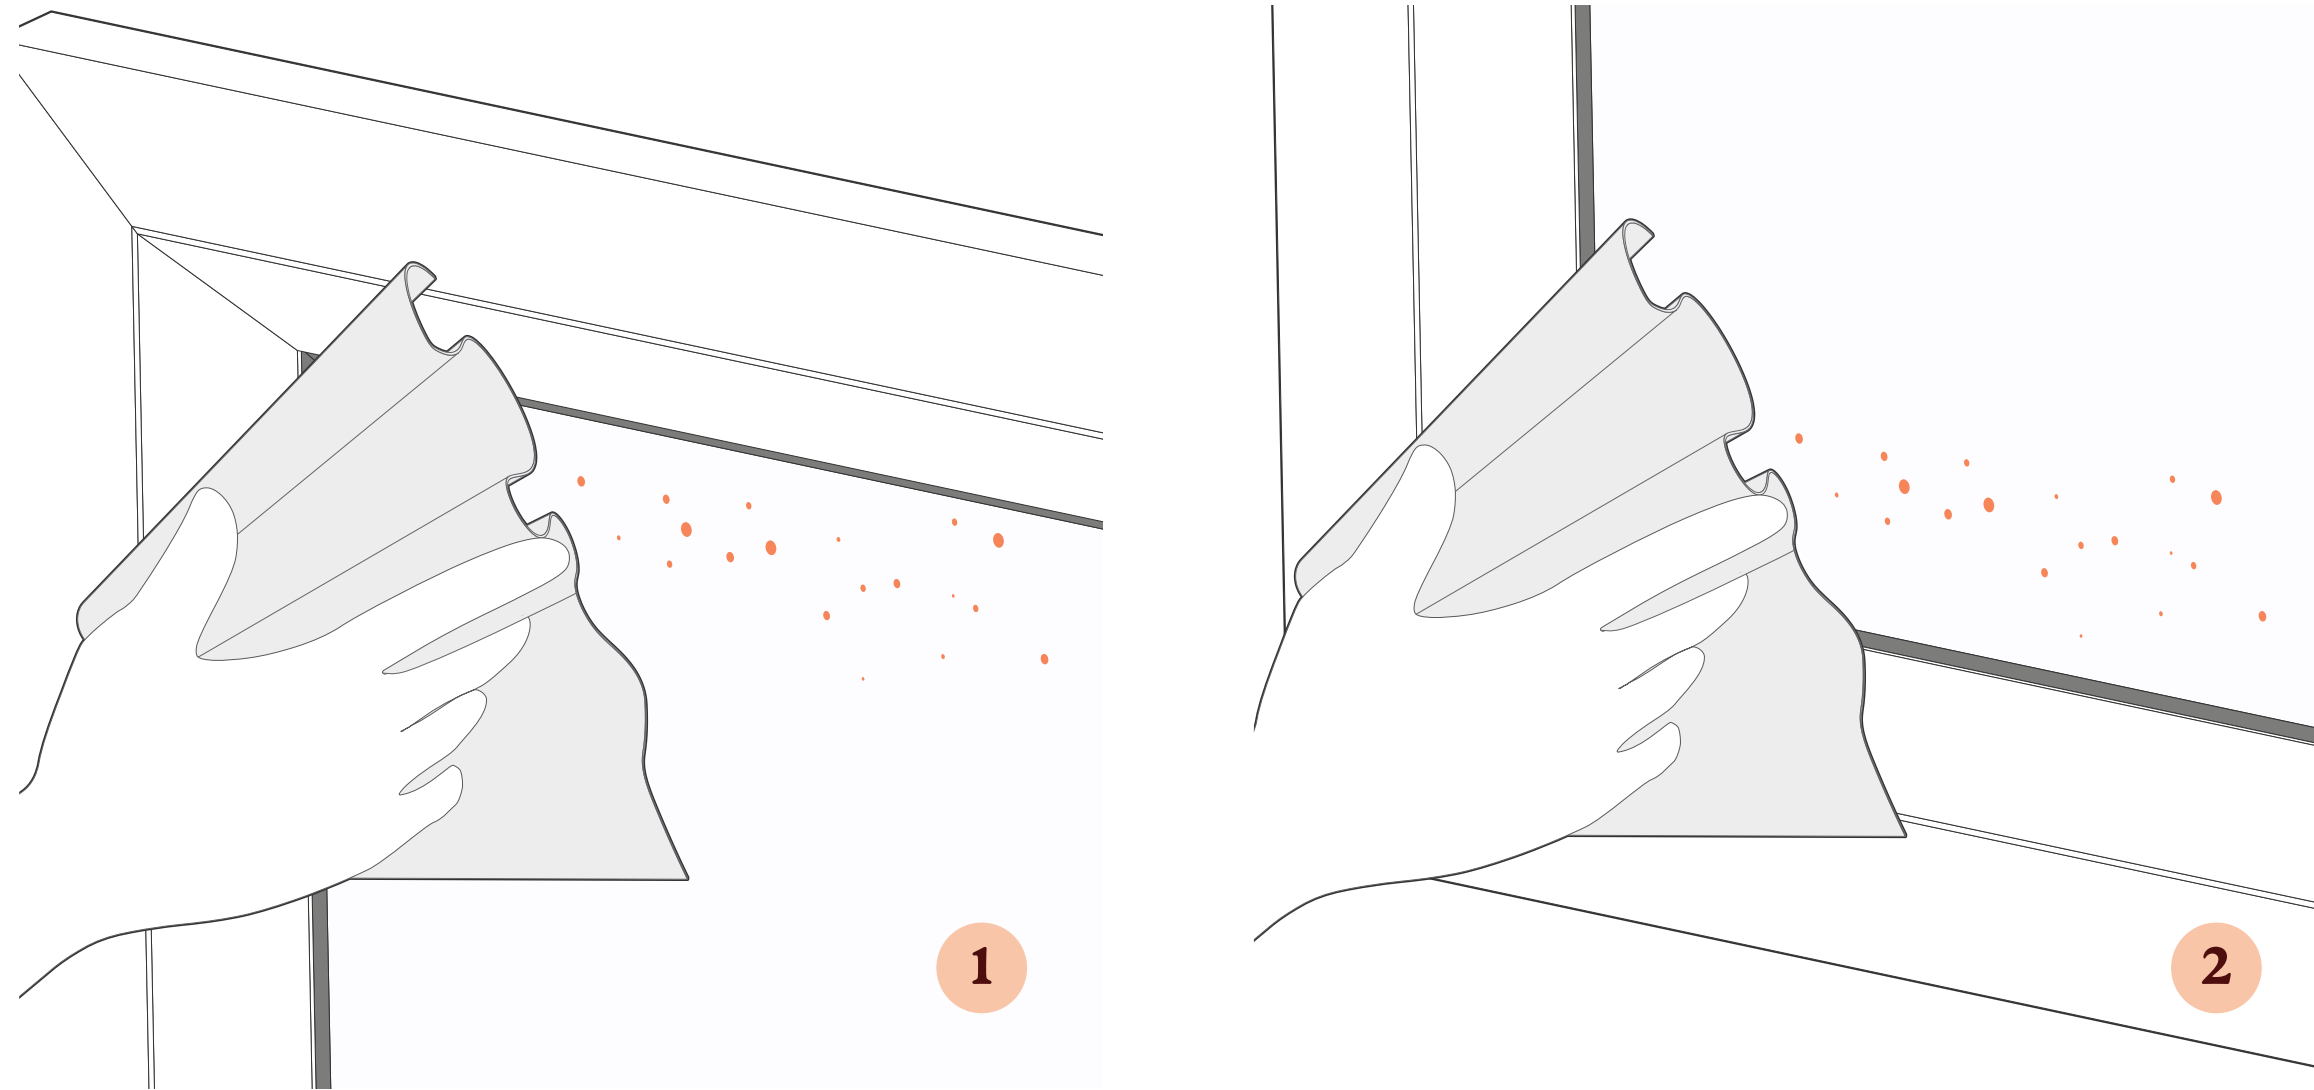

Use soapy water and a cloth, then the alcohol wipes provided, to clean the glass, especially across the top (1) and bottom (2). The cleaner the surface, the better the blind will adhere, so make sure it's entirely free of any dirt or dust. ***Leave until the glass is fully dry before moving onto the next step.***





Section 3 *Installing the Blind*

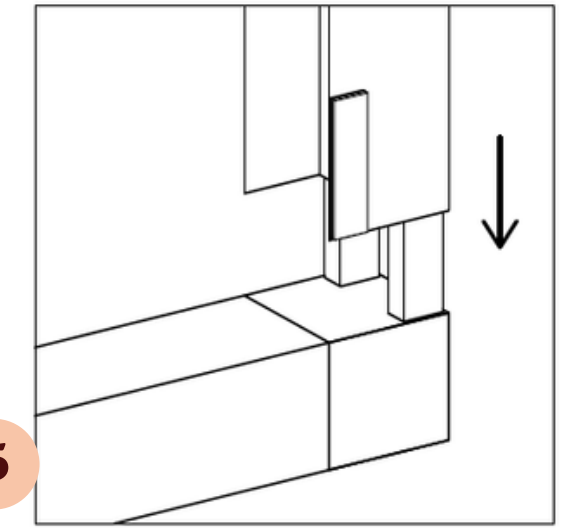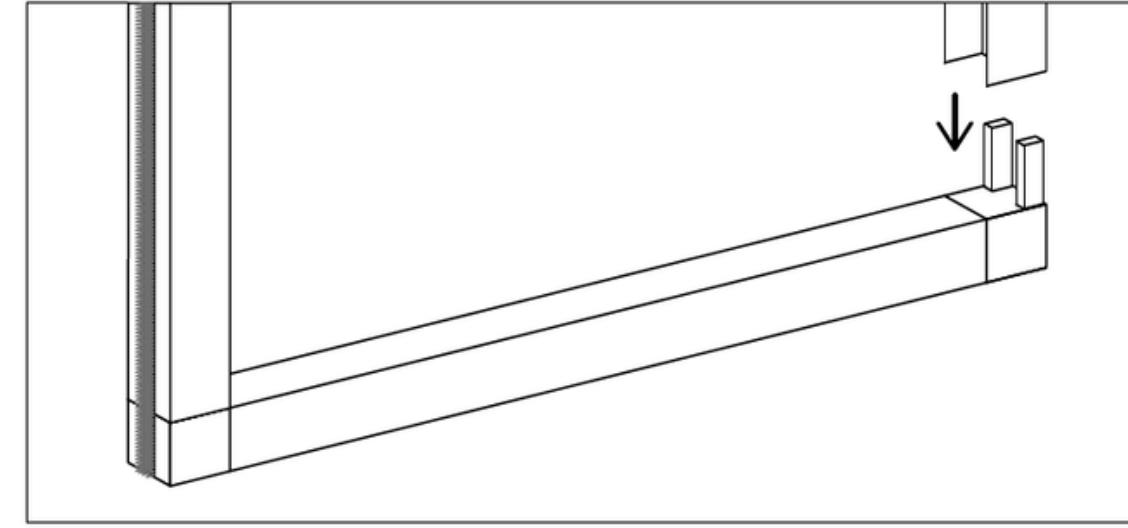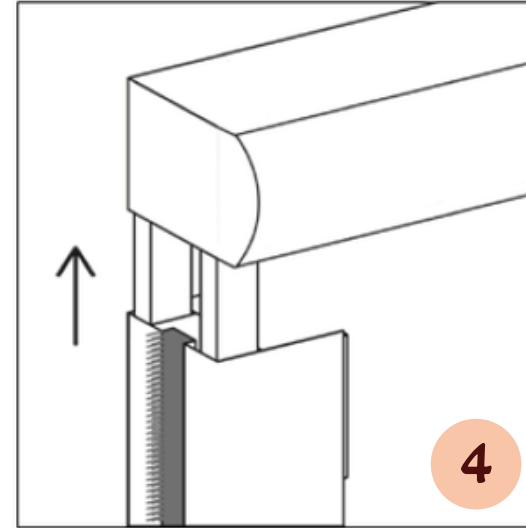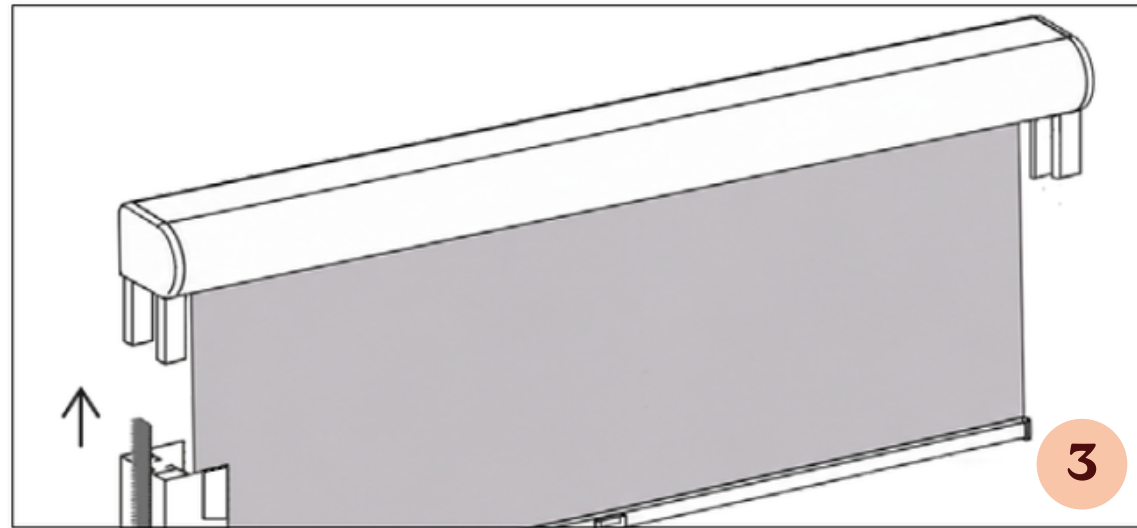


Slide the left side frame onto the pegs protruding from the side of the roller blind (3). Repeat on the right side with the other side frame (4).

Then slot the side frames onto the pegs at the ends of the bottom bar (5).

Section 3 *Installing the Blind*

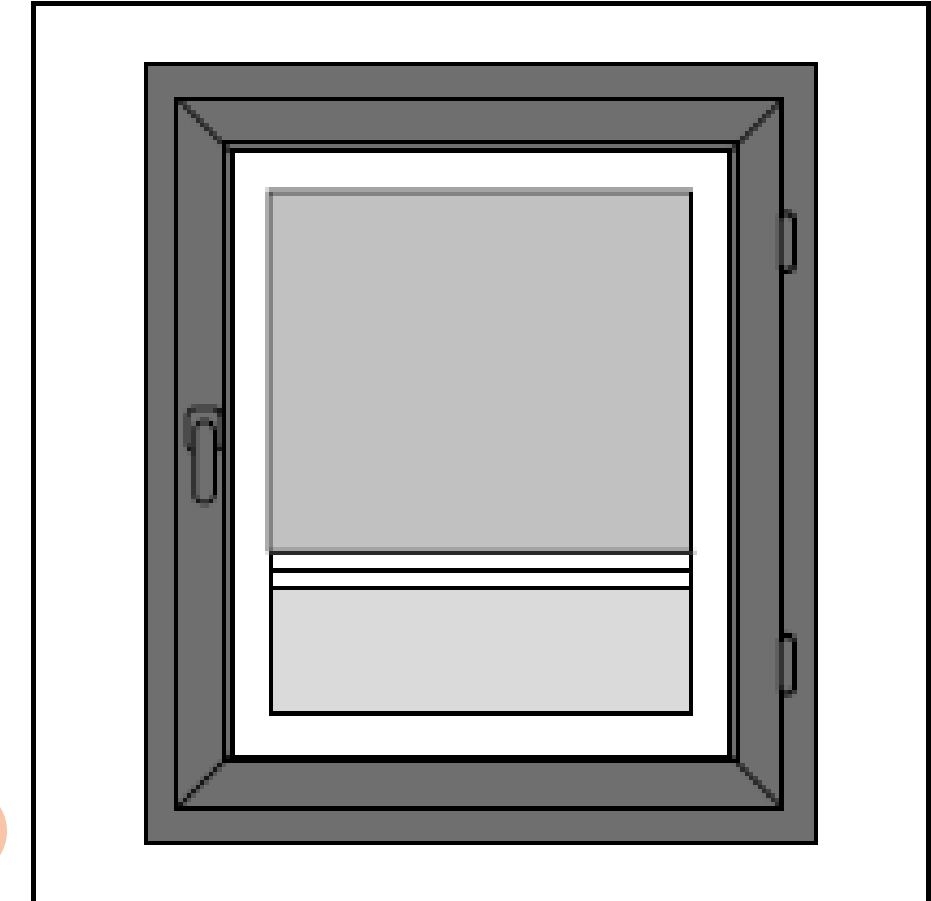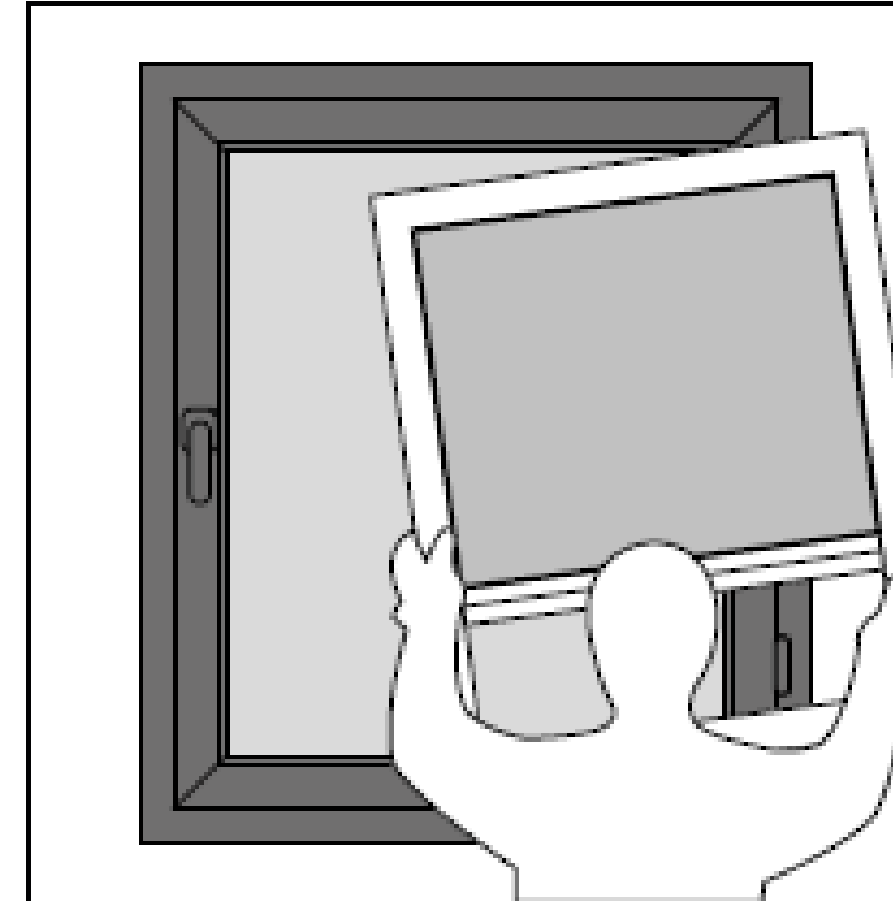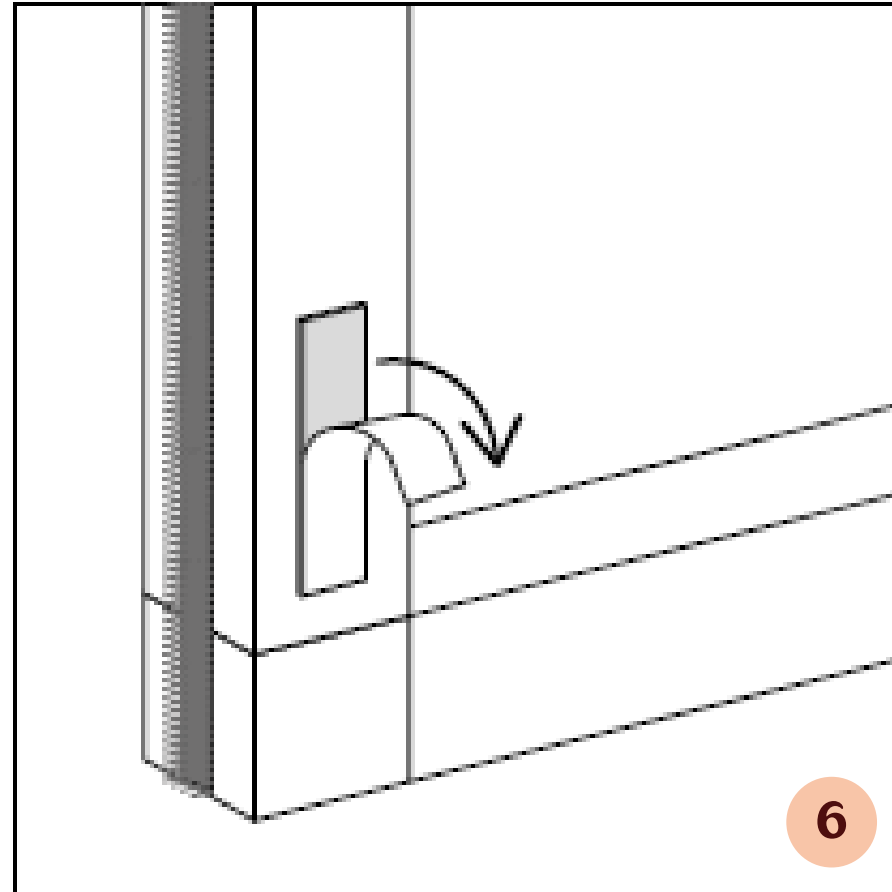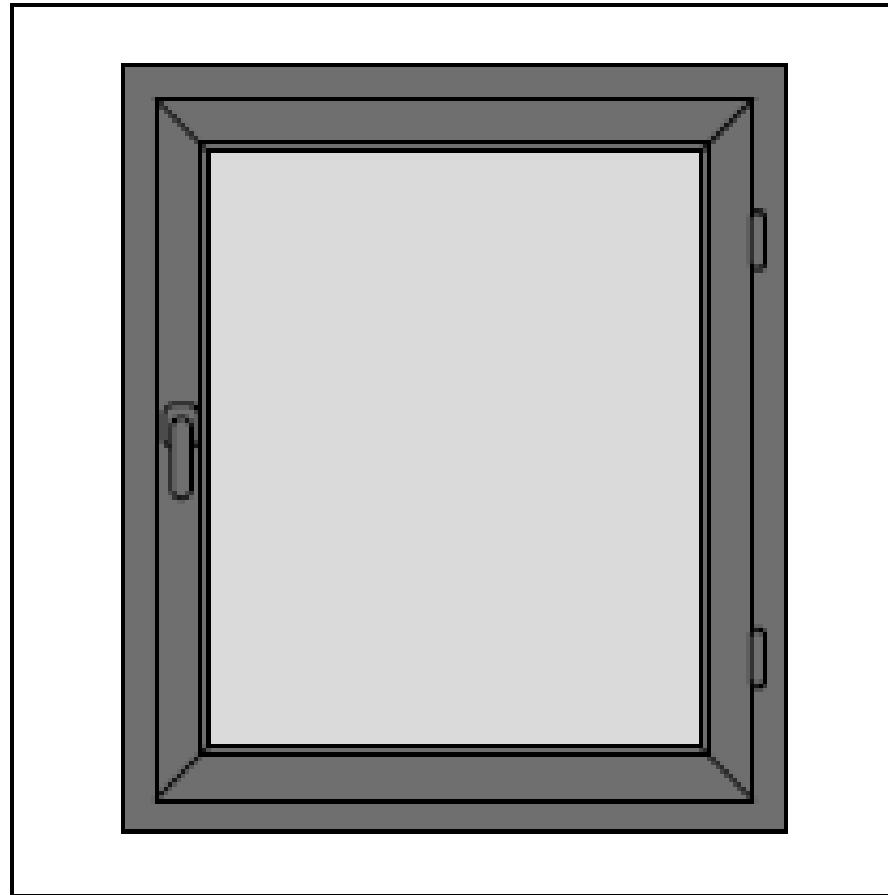

Remove the covers from the adhesive strips on the back of each side frame (6). Then, carefully stick the blind into place on the glass (7).

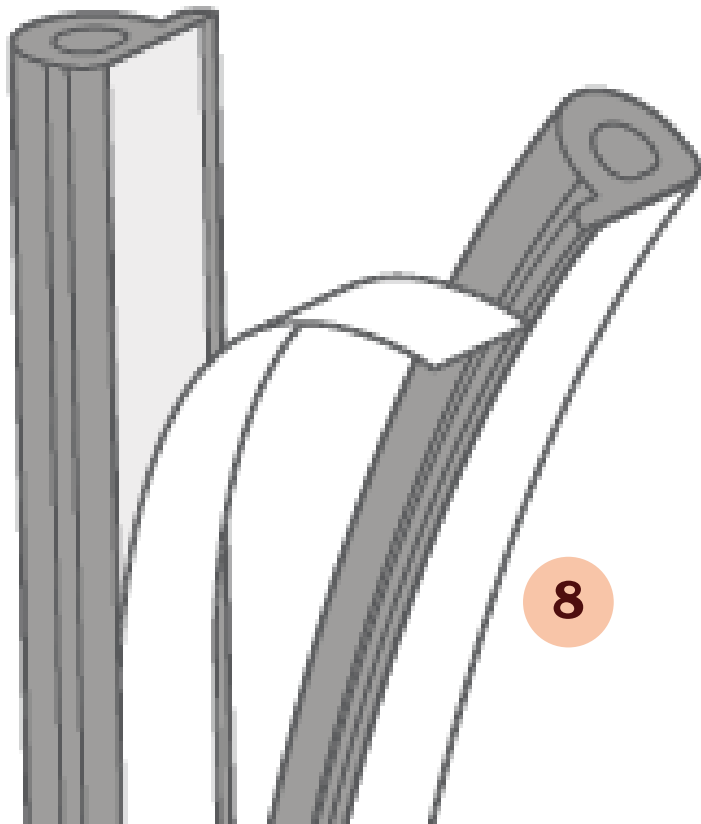


If you notice small light gaps around the edges of the blind after installation, and you have checked that it is level, then this is usually because the window frame is uneven.

To resolve this, a blackout rubber strip is included with your order.

The blackout strip is supplied as a double-length strip on a roll, with both halves attached together.

Begin by carefully separating the two halves at one end and start removing the adhesive cover on the back of one of the separated lengths (8).


Section 4 *Installing the Blackout Strip - Optional*

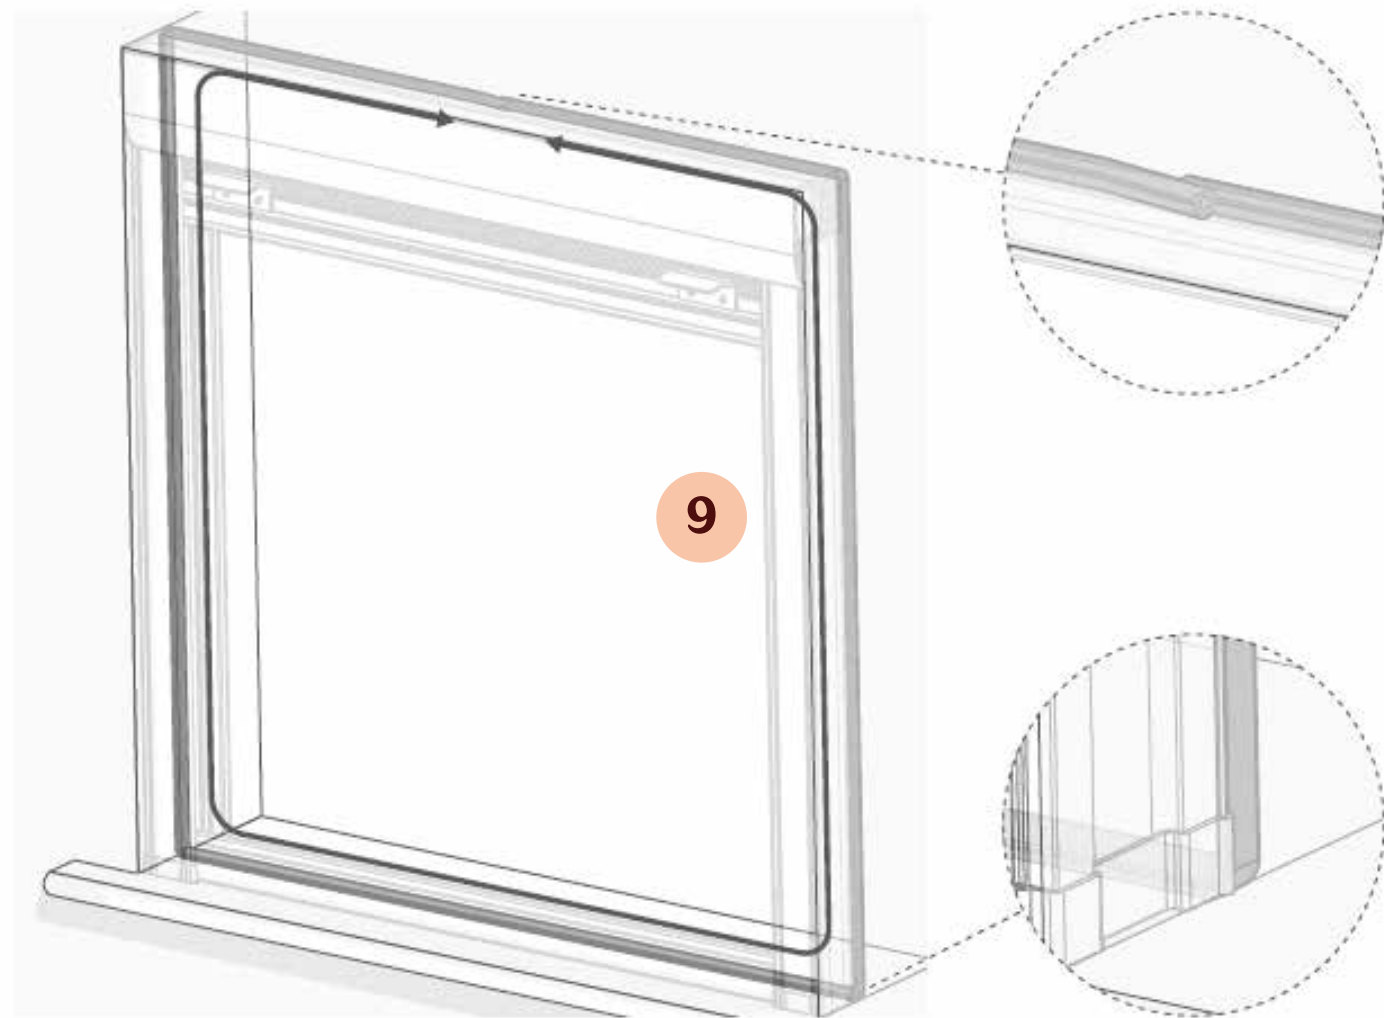

Starting in the centre of the blind either at the top or bottom, begin sticking the seal to the blind's frame, filling any small gaps around the edges of the frame (9).

Continue sticking the seal around the frame, folding over at the corners, until you get back to where you started.

And that's it! Your new blind is installed and ready to enjoy...

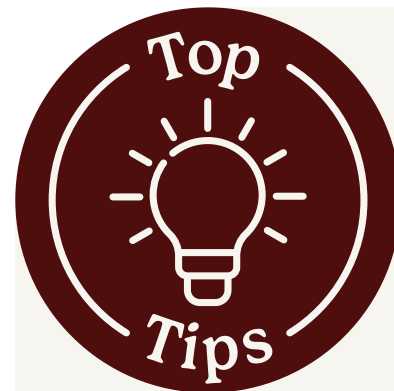

Plenty of excess blackout seal is provided, so that you can use as much as needed to cover any light gaps and achieve the best possible blackout.

Please leave the blind in place for at least 30 minutes before using it. This gives the adhesive enough time to cure and prevents any slippage when you raise or lower the blind.