


Turn your *phone or tablet*

Our guides are best viewed in landscape if you're viewing on your phone or tablet.

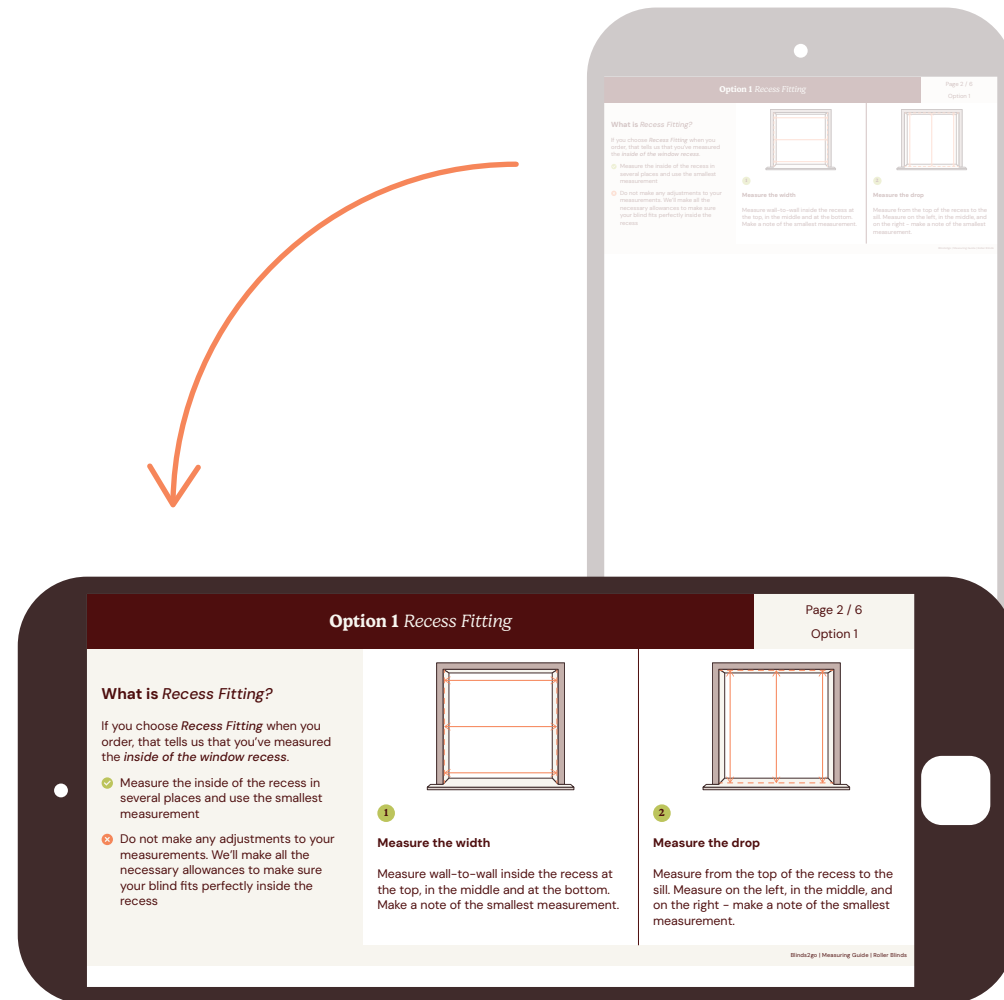

Designed for *DIY*

Our Stick On Roman Blinds are designed to be installed by you, without specialist fitters, even if you don't have much DIY experience.

Please read each page of this guide carefully during installation, following along one step at a time.


Check out our *video guide*



Click or tap the thumbnail above to watch our handy video overview. This video covers the basics, but for more detailed instructions just keep reading...

Parts included *in your order*:


- 1 Stick On Roman Blind
- 2 Alcohol wipes

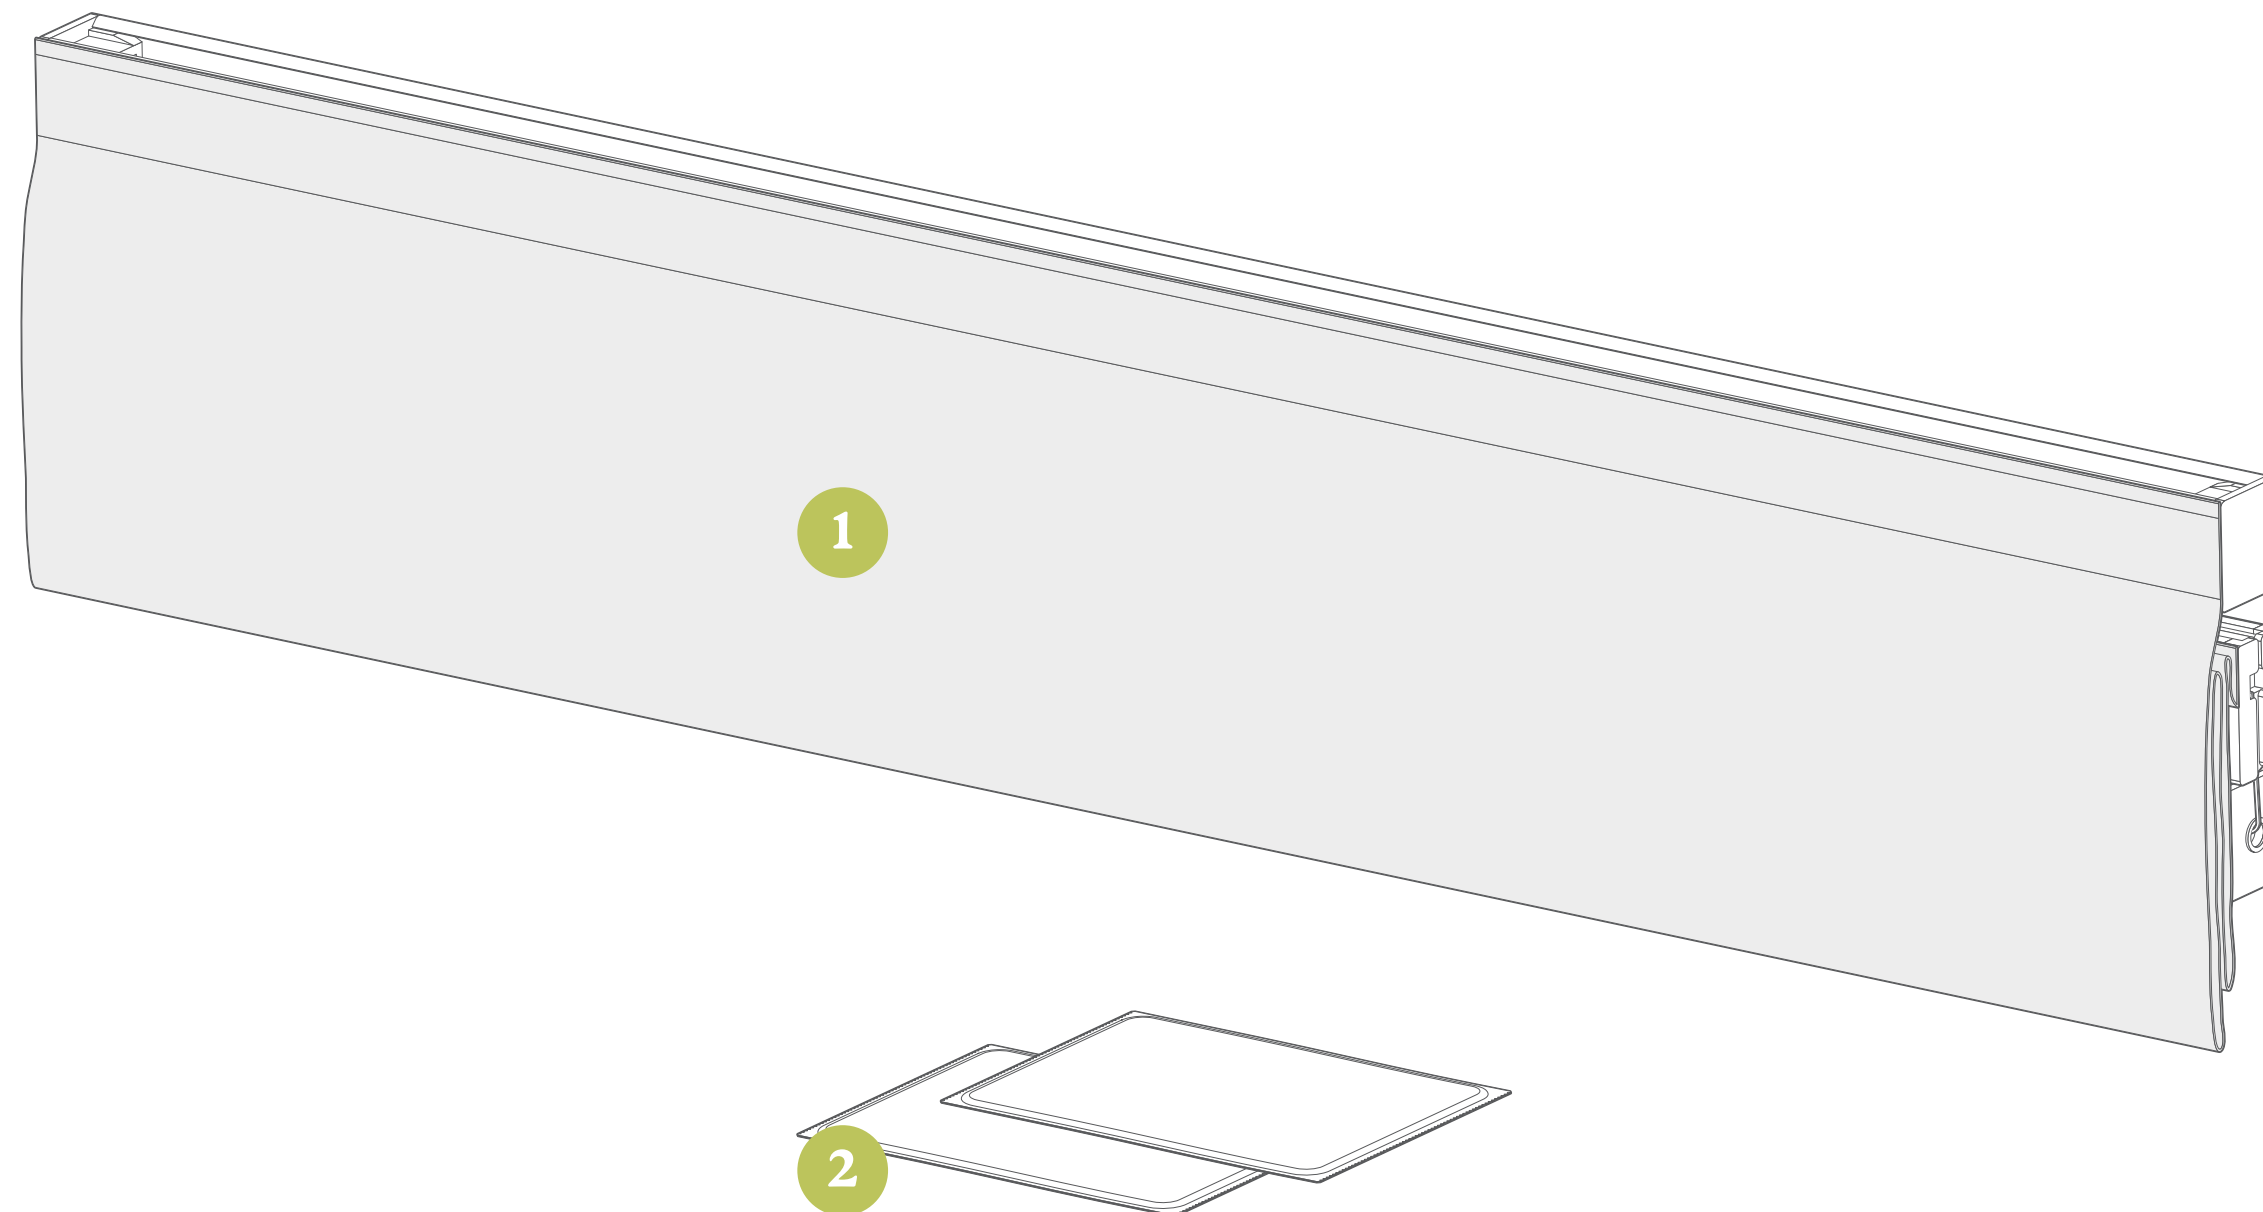


Section 2 *Installing the Blind*

Page 3 / 8

Section 2

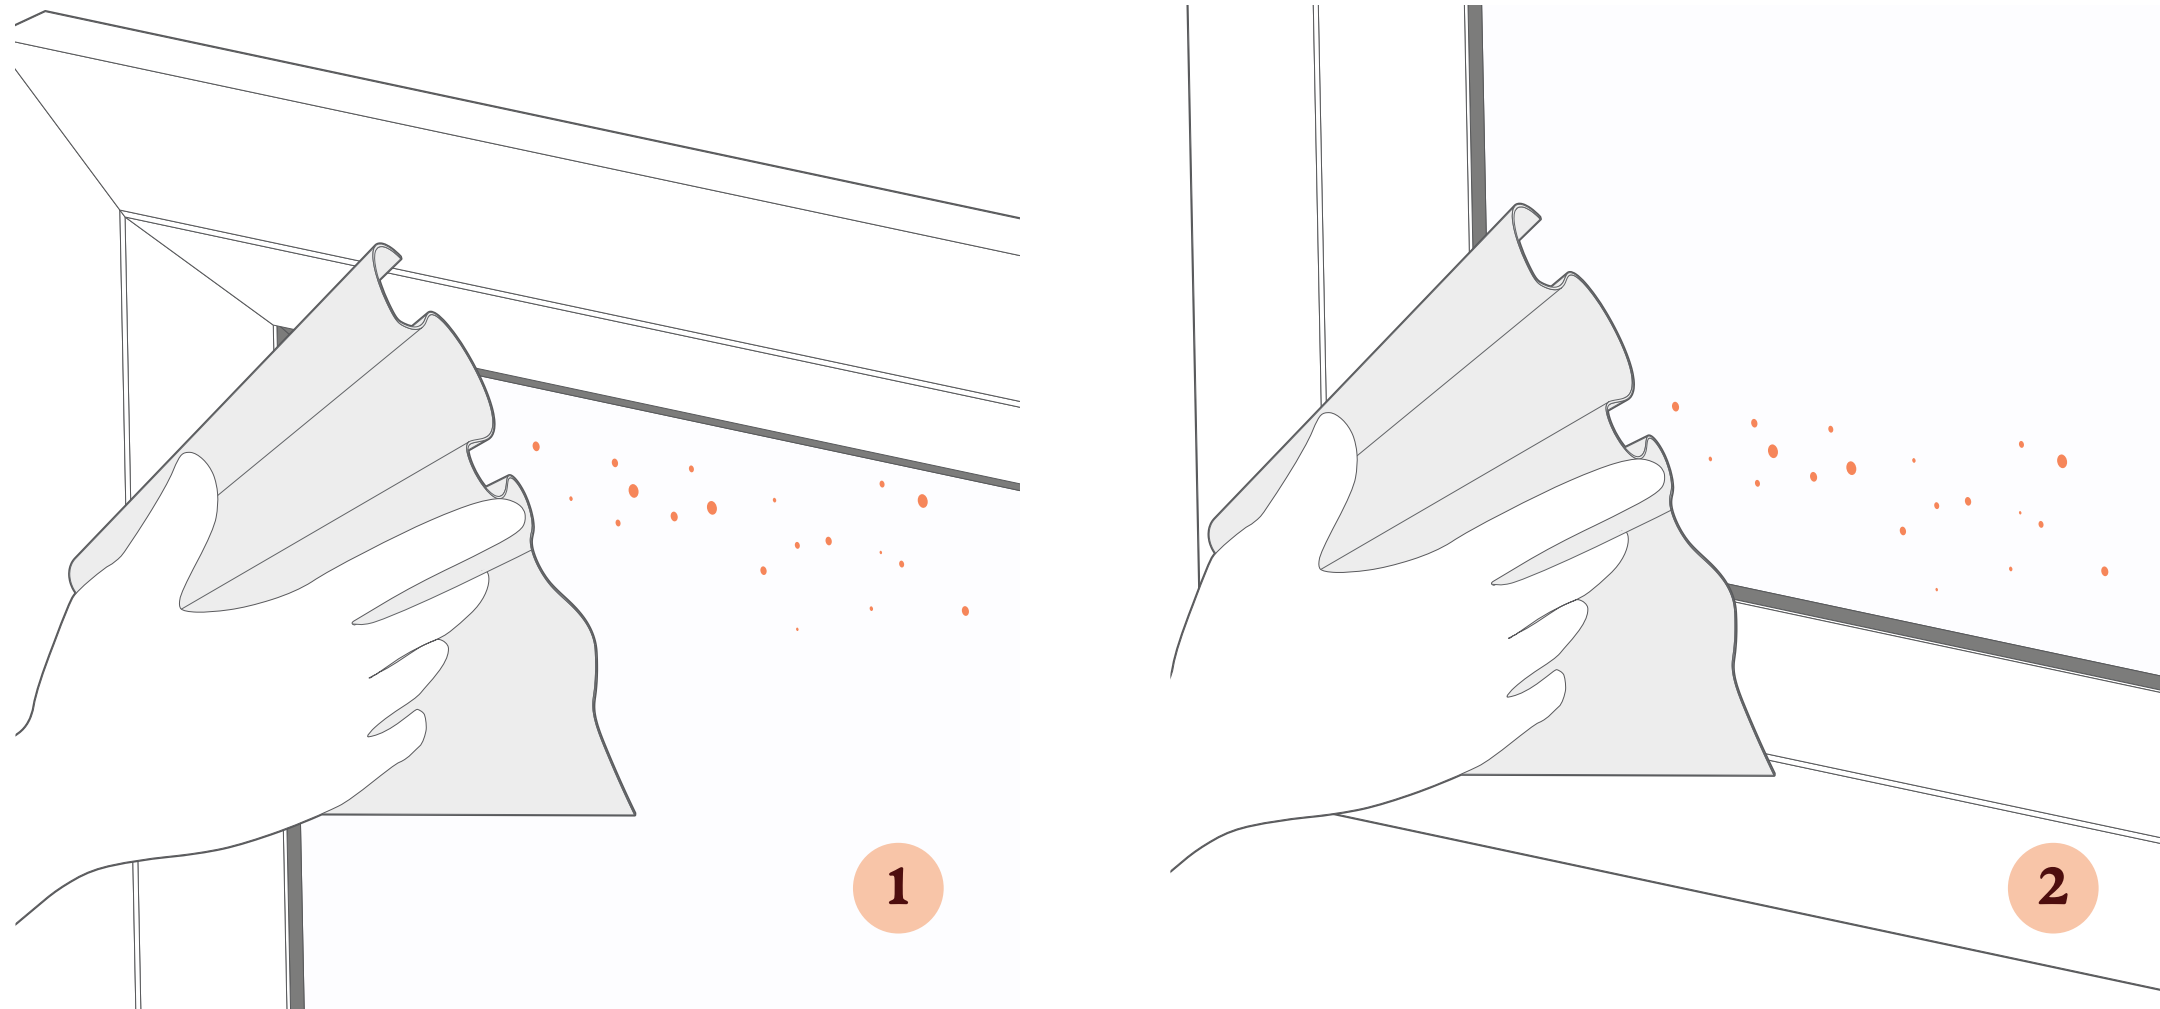

Use soapy water and a cloth, then the alcohol wipes provided, to clean the glass, especially across the top and bottom (1 / 2). The cleaner the surface, the better the blind will adhere, so make sure it's entirely free of any dirt or dust. ***Leave until the glass is fully dry before moving onto the next step.***

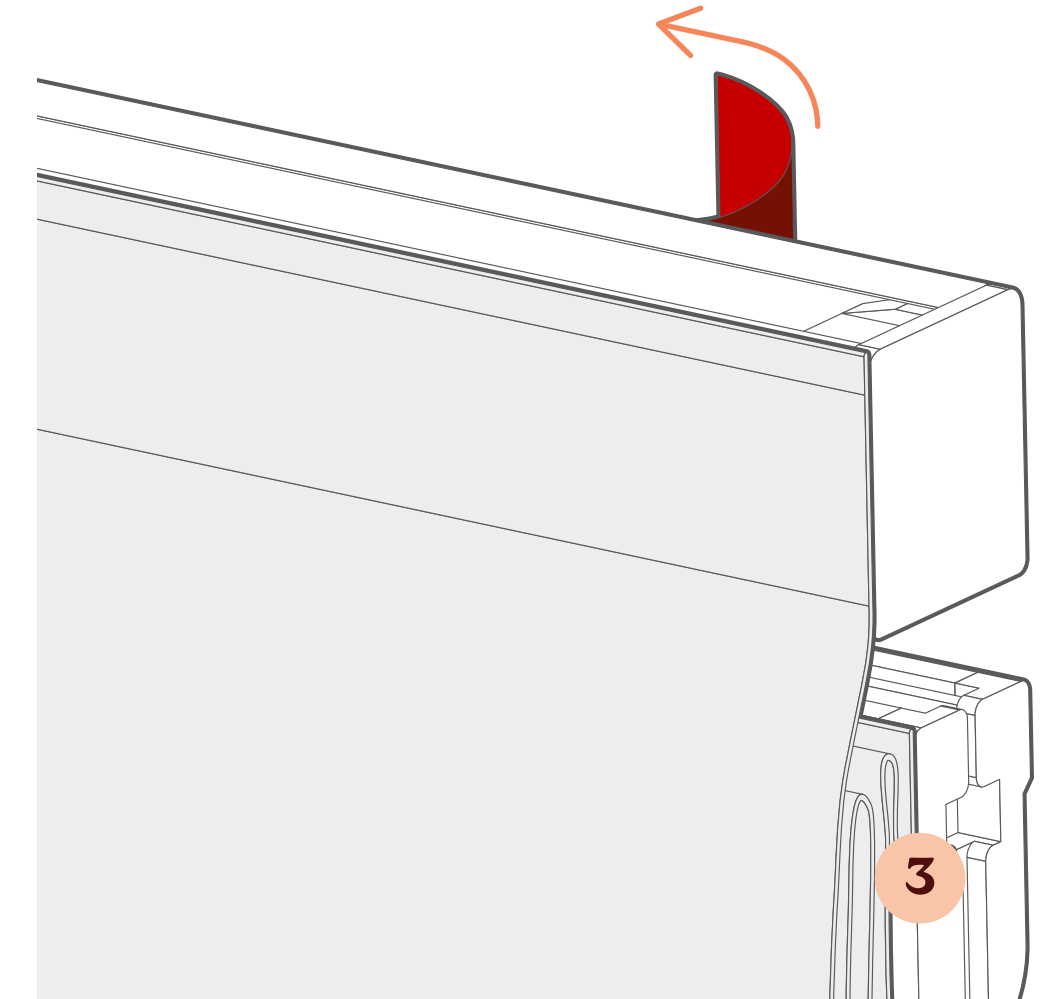


Peel the cover from the adhesive strip on the back of the top rail (3). ***Only remove the cover from the top rail for now, leave the bottom rail covered.***

Section 2 *Installing the Blind*


Page 4 / 8

Section 2.1

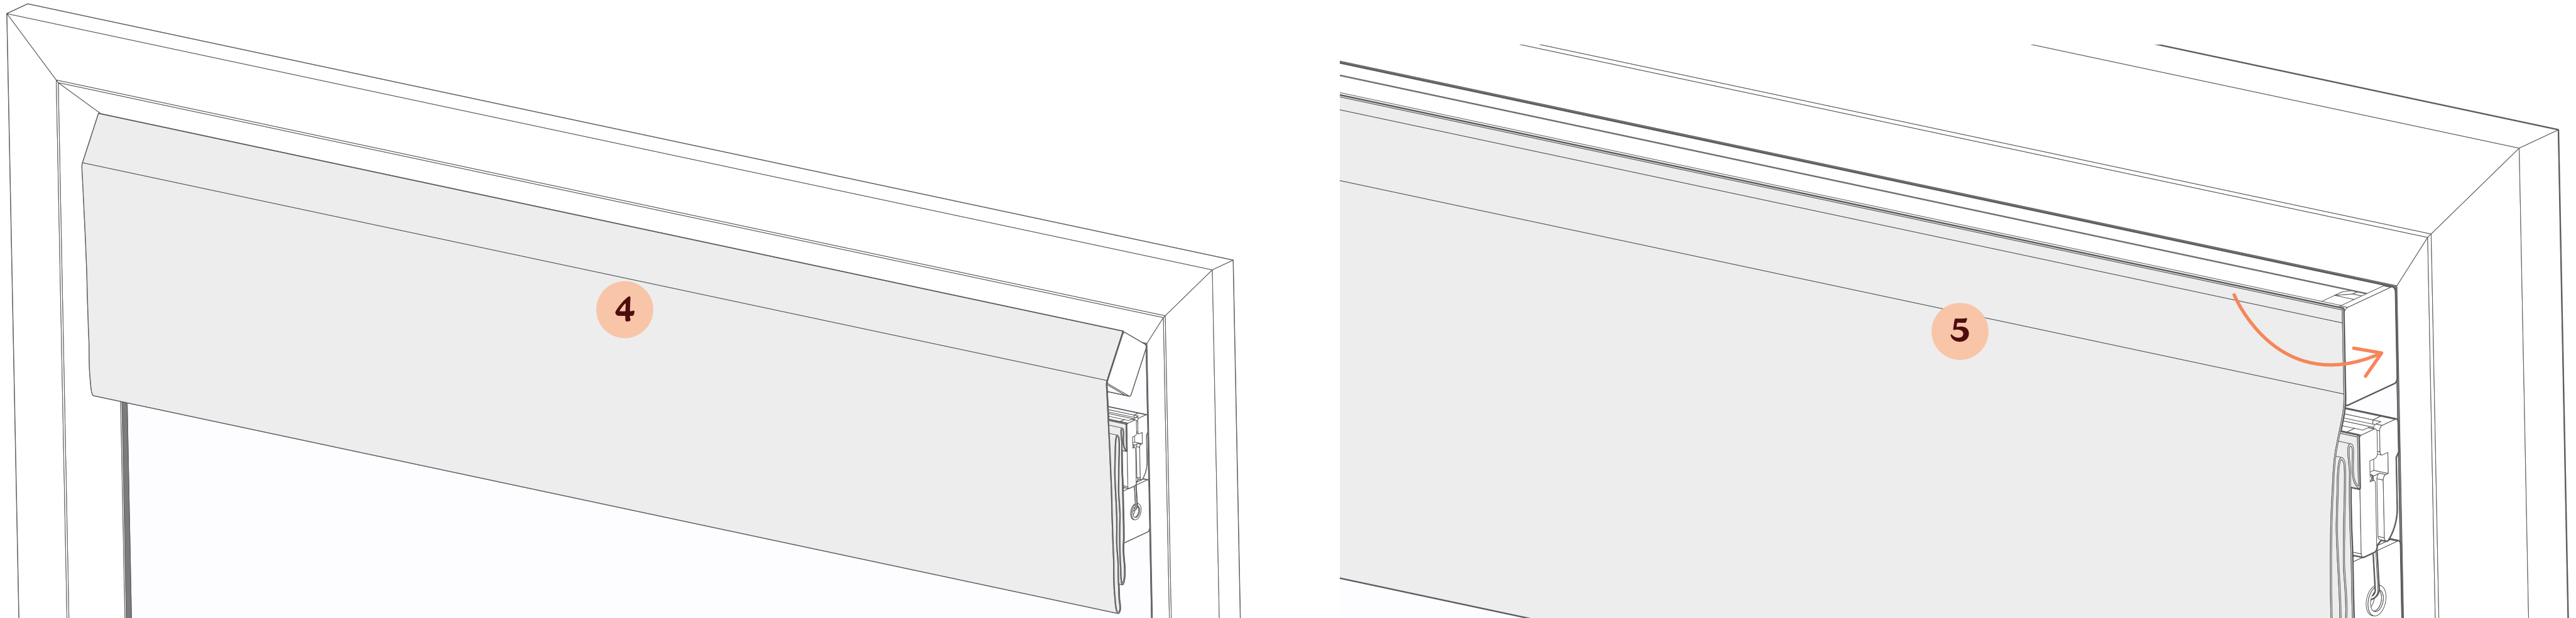

Line up the top rail with the top of the glass – hold it at an angle to begin with, to avoid accidentally sticking it to the glass whilst you straighten it up (4). When you're happy that it's straight and level, press the rail back against the glass and hold for around 30 seconds to give it time to adhere (5). ***Note that after 12 hours the adhesive will be fully cured.***



Section 2 *Installing the Blind*

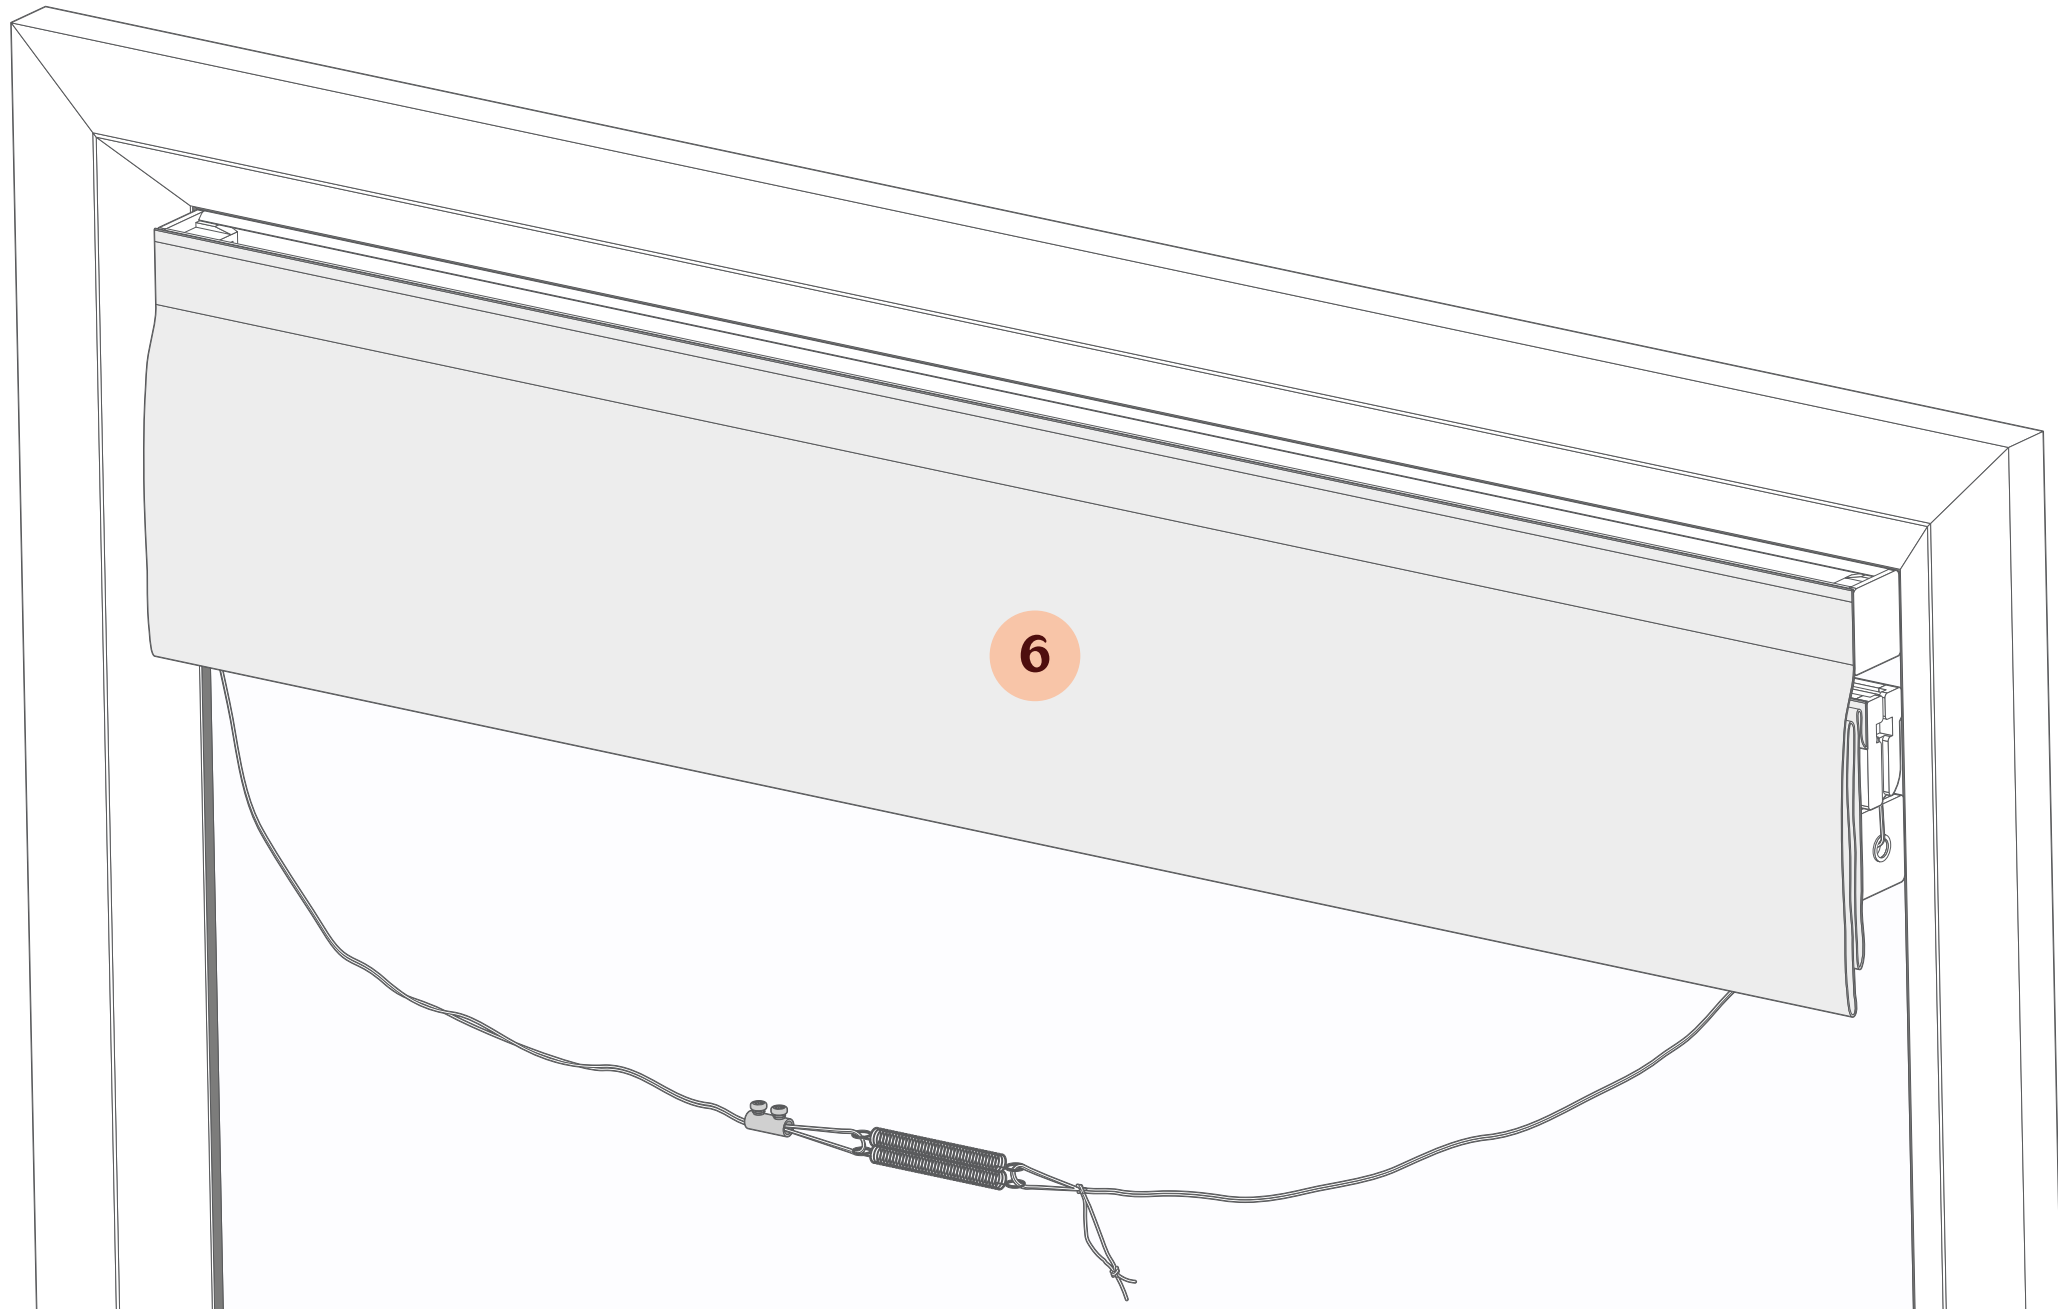

The tension cords are knotted to protect the cords in transit, so you'll need to untie and release them before fitting the bottom rail (6).

Make sure that you do not untie the cords from the coupler spring to which they're attached.


Section 2 *Installing the Blind*

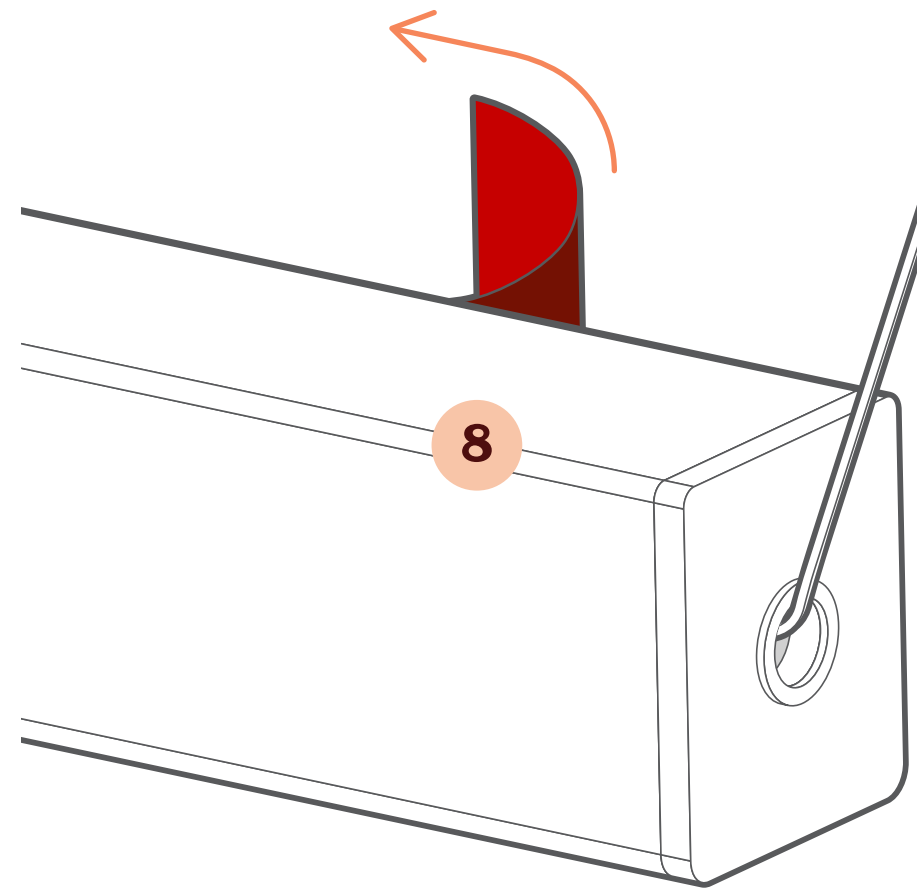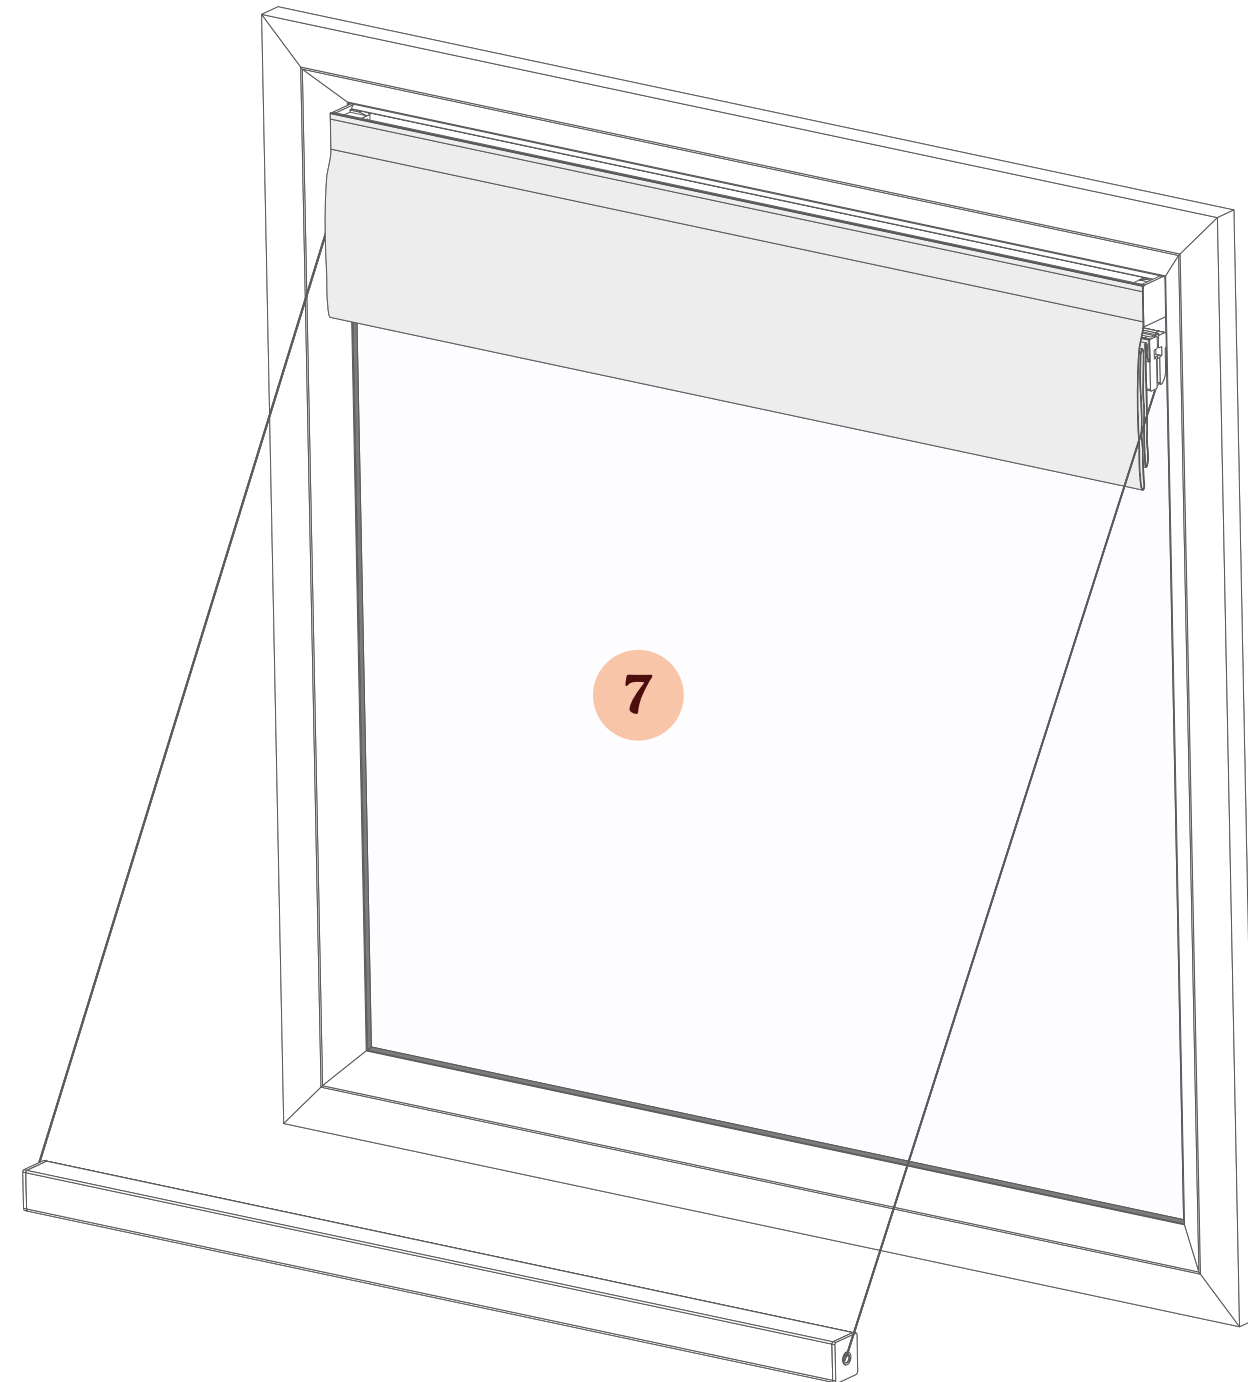

Hold the blind steady and pull the bottom rail down to the bottom of the window (7).


Remove the cover from the adhesive strip on the back of the bottom rail (8).

Section 2 *Installing the Blind*

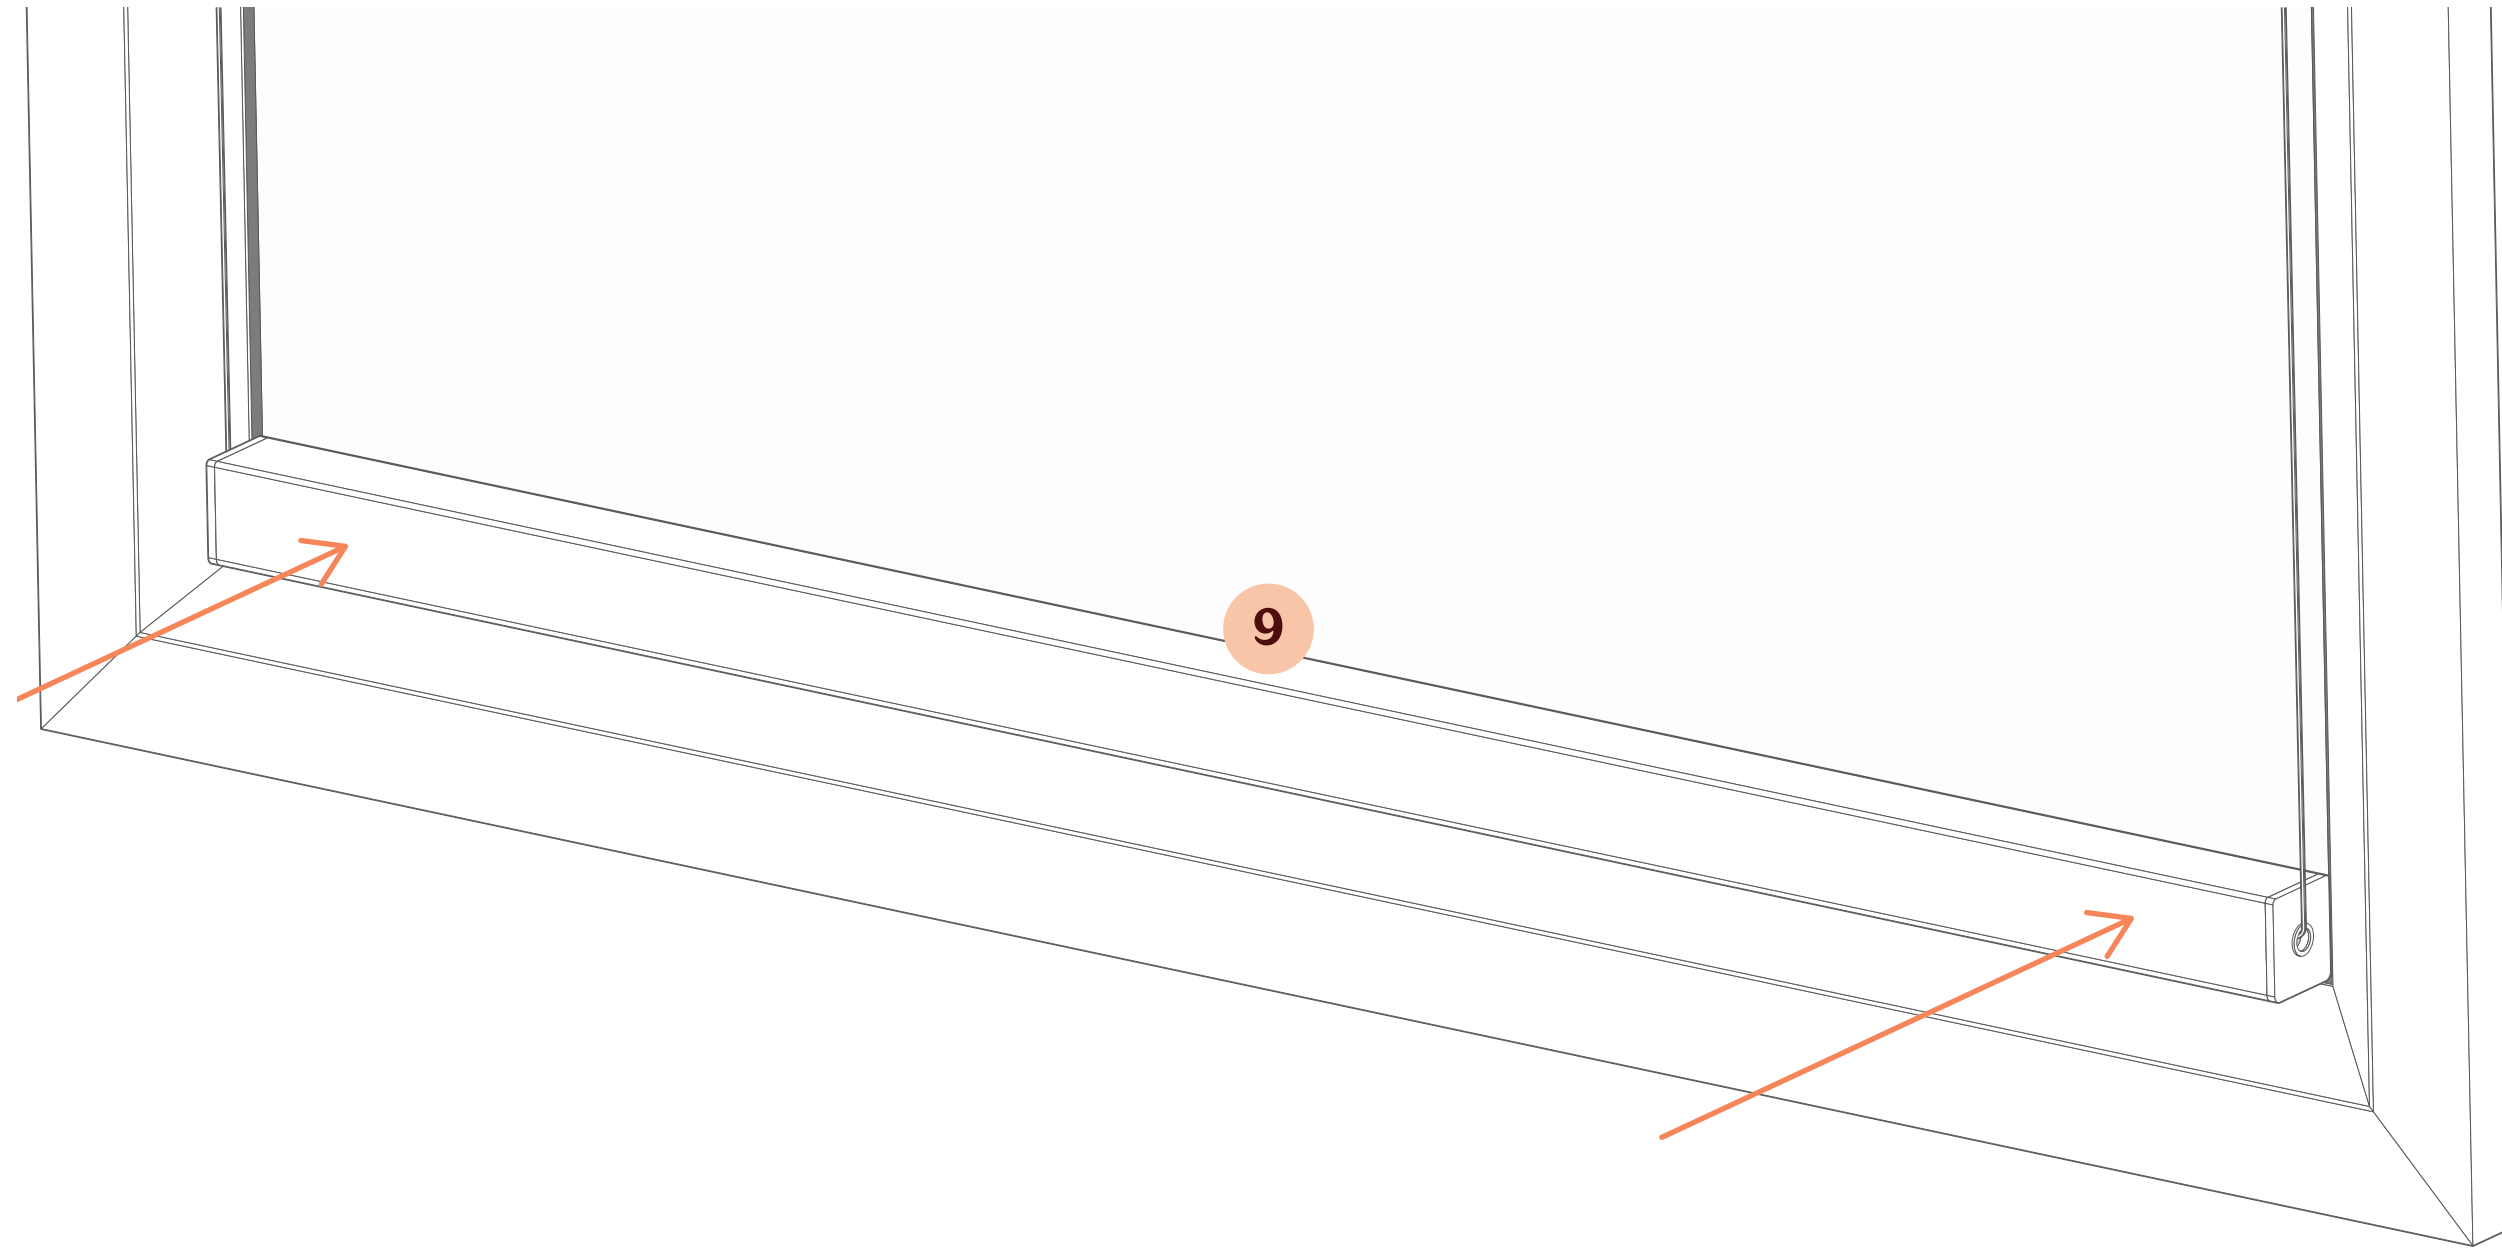


Press the bottom bar against the glass and hold in position for around 30 seconds to give it time to adhere fully (9).

Section 2 *Installing the Blind*

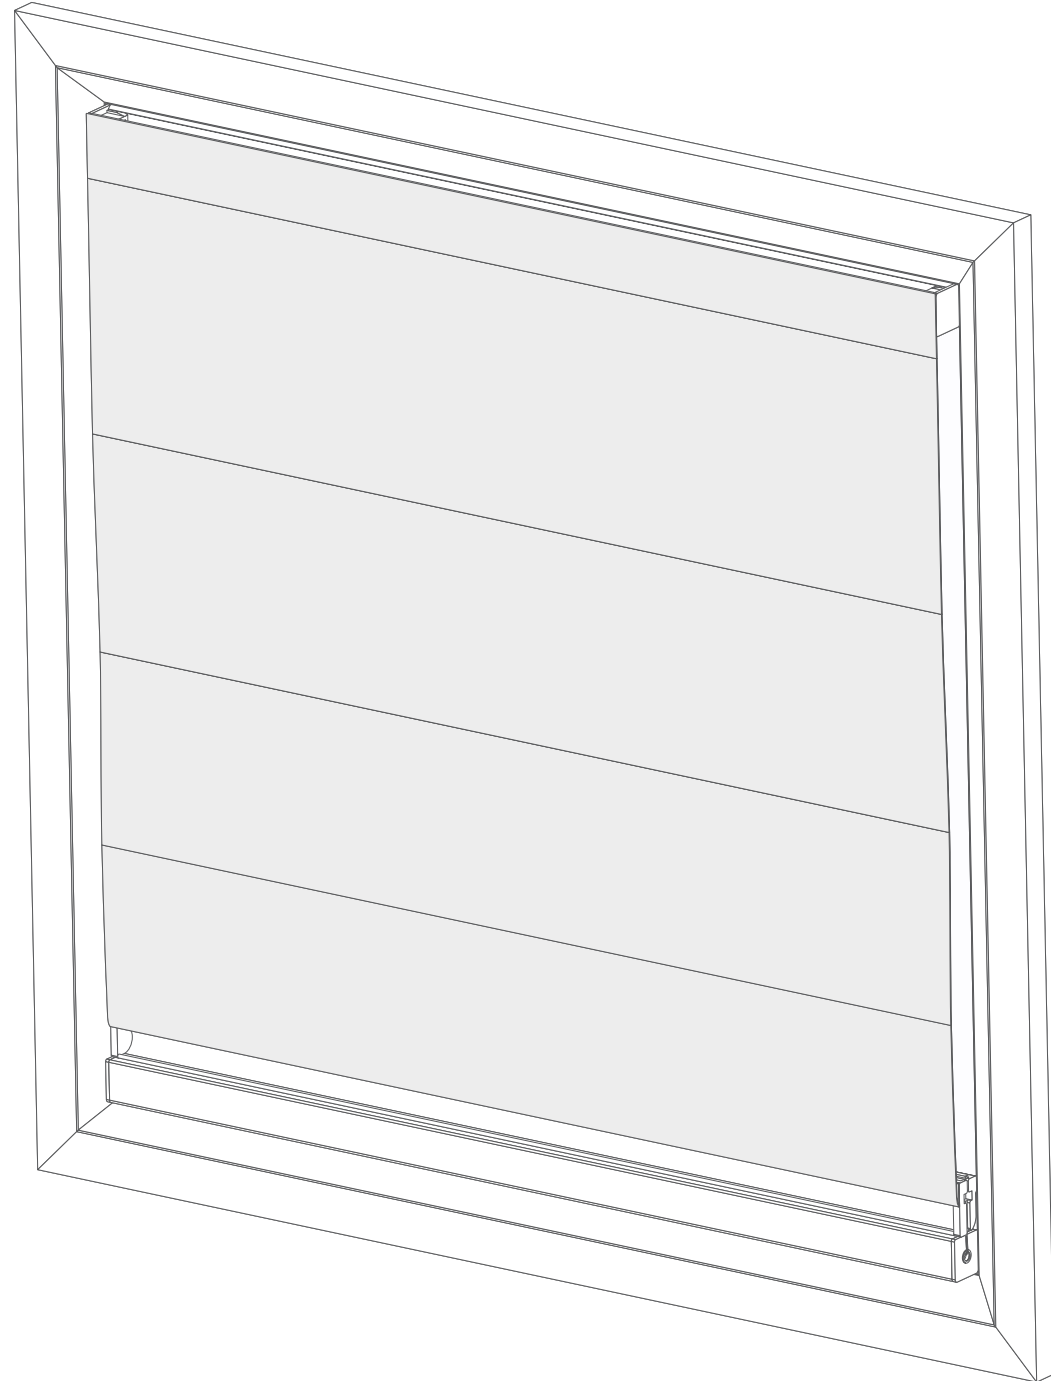

Use the central bar, to which the bottom of the fabric is attached, to raise and lower the fabric. Raise or lower your blind to any height, and cord tension will keep it in position.

And that's it! Your beautiful new blind is installed and ready to enjoy.

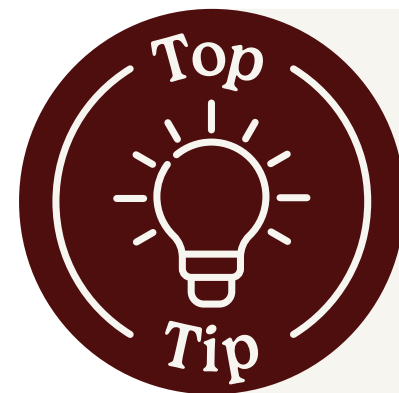

Please leave the blind in place for at least 30 minutes before using it. This gives the adhesive enough time to cure and prevents any slippage when you raise or lower the blind.