


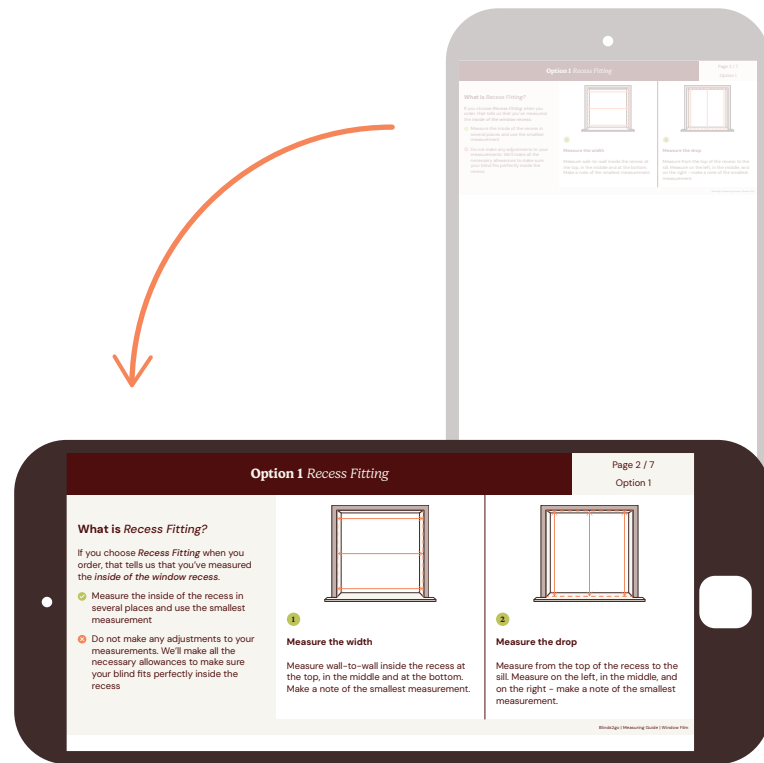


Turn your phone or tablet

Our guides are best viewed in landscape if you're viewing on your phone or tablet.

Designed for *DIY*

Our Window Film is designed to be installed by you, without specialist fitters, even if you don't have much DIY experience.

Please read each page of this guide carefully during installation, following along one step at a time.

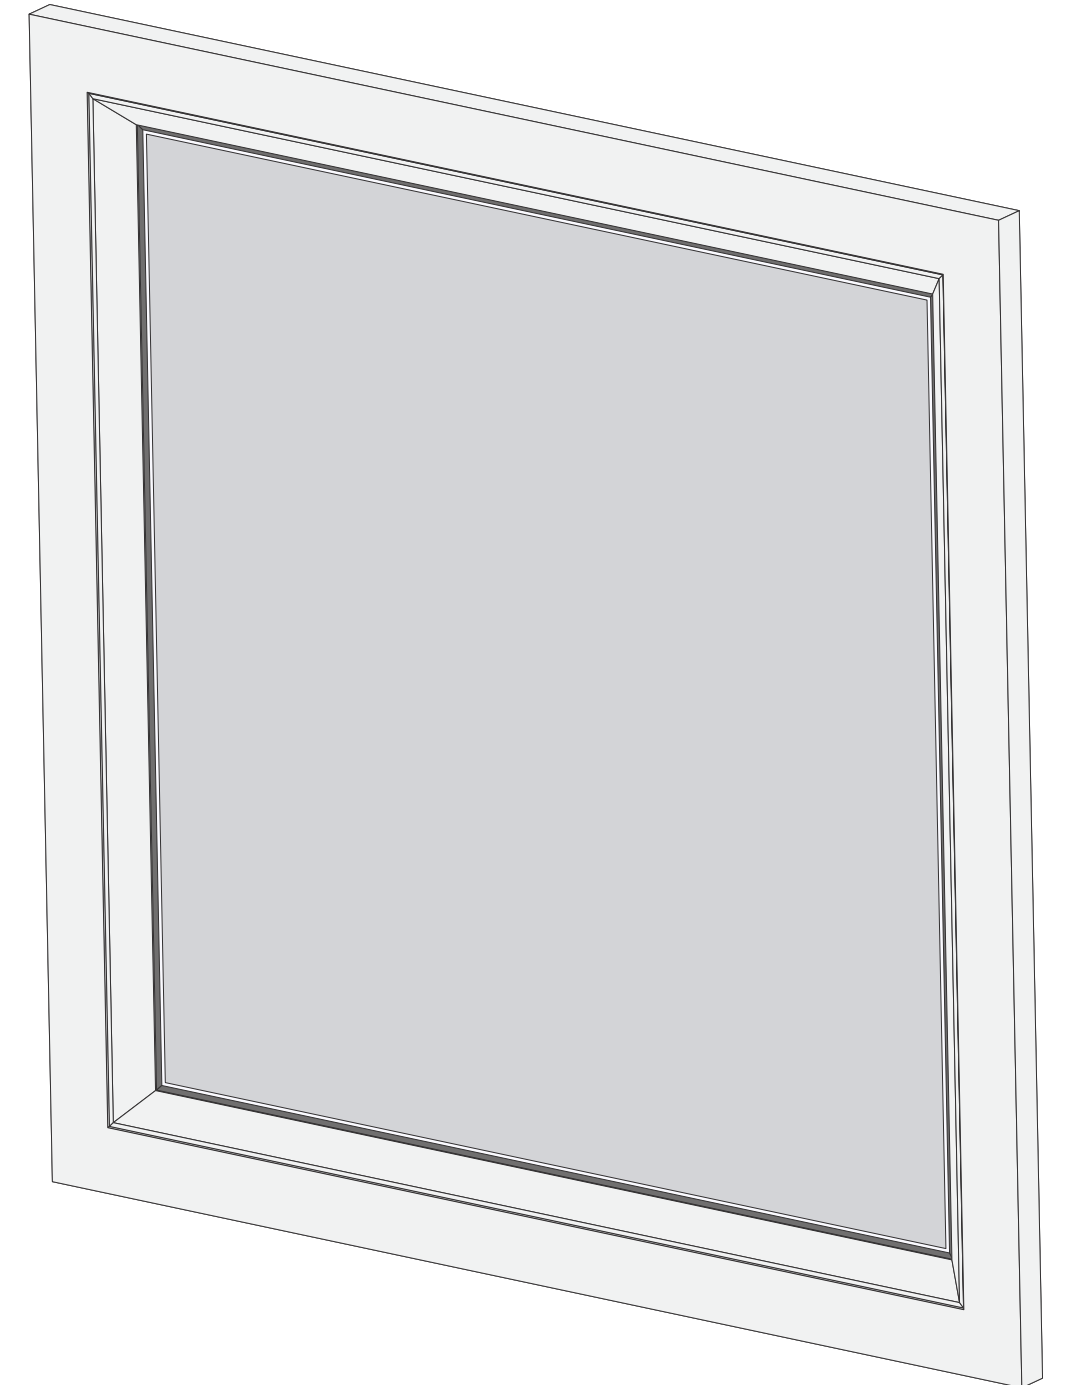


Tools required for this install: (If you didn't order a fitting kit)

- ✓ Old credit / debit / store card *
- ✓ Cutting blade **


Parts included in your order:

- 1 Window Film (rolled)

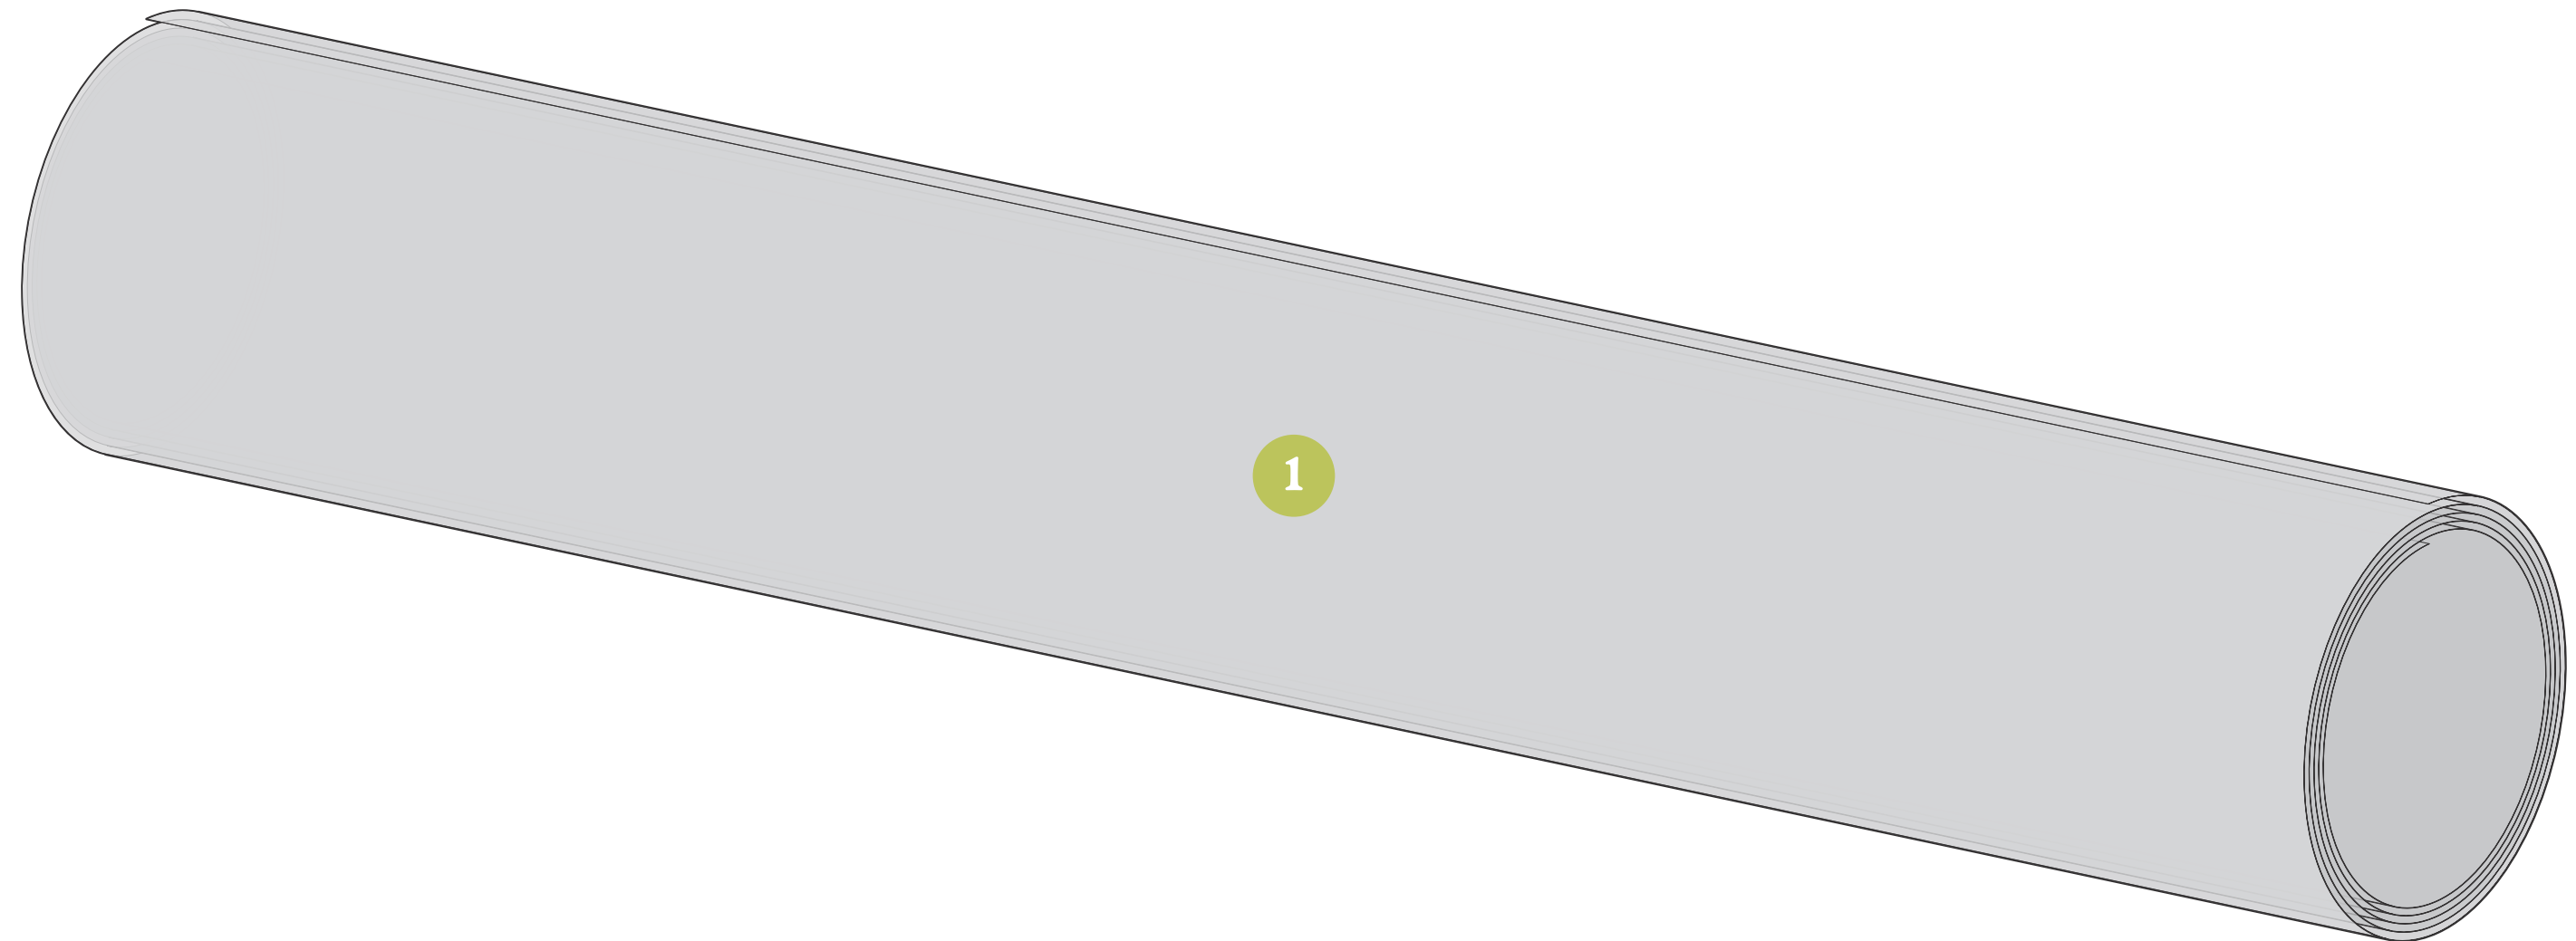

* You'll use this card to scrape over the film and remove bubbles, so make sure it's an old/unused card

** Any standard box cutting blade will be fine, but it's best to make sure the blade is new

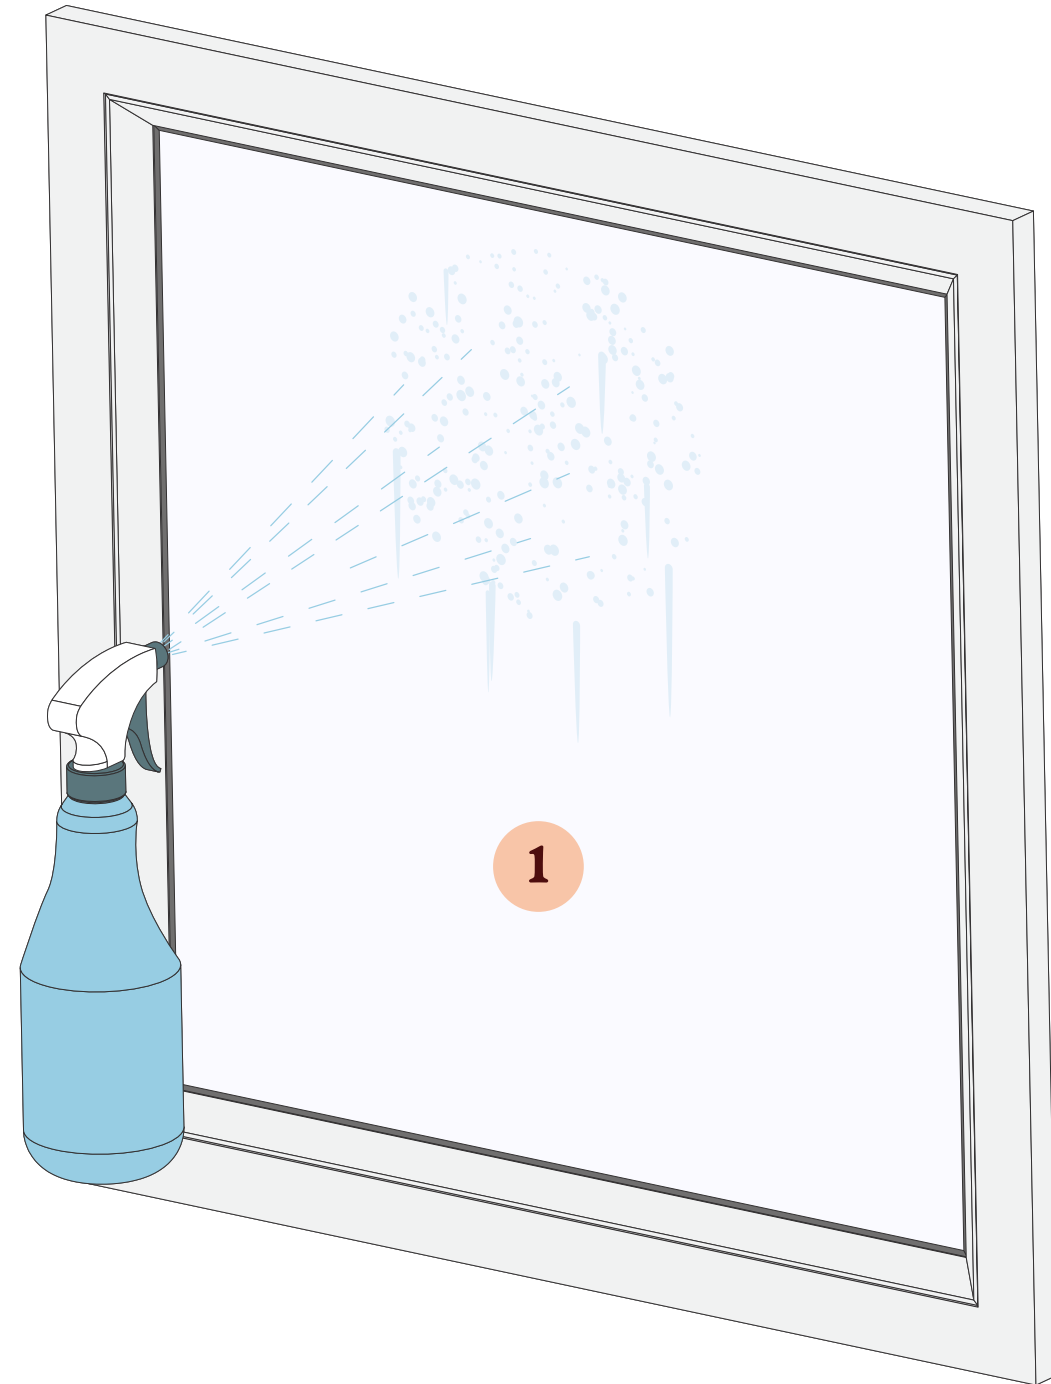


Use glass cleaner and/or soapy water to thoroughly clean the glass before you start fitting. The cleaner the surface, the better the film will adhere, so make sure the glass is entirely free of any dirt or dust.

Leave until the glass is fully dry before moving onto the next step.

Section 3 *Install the Film*


Page 4 / 7

Section 3

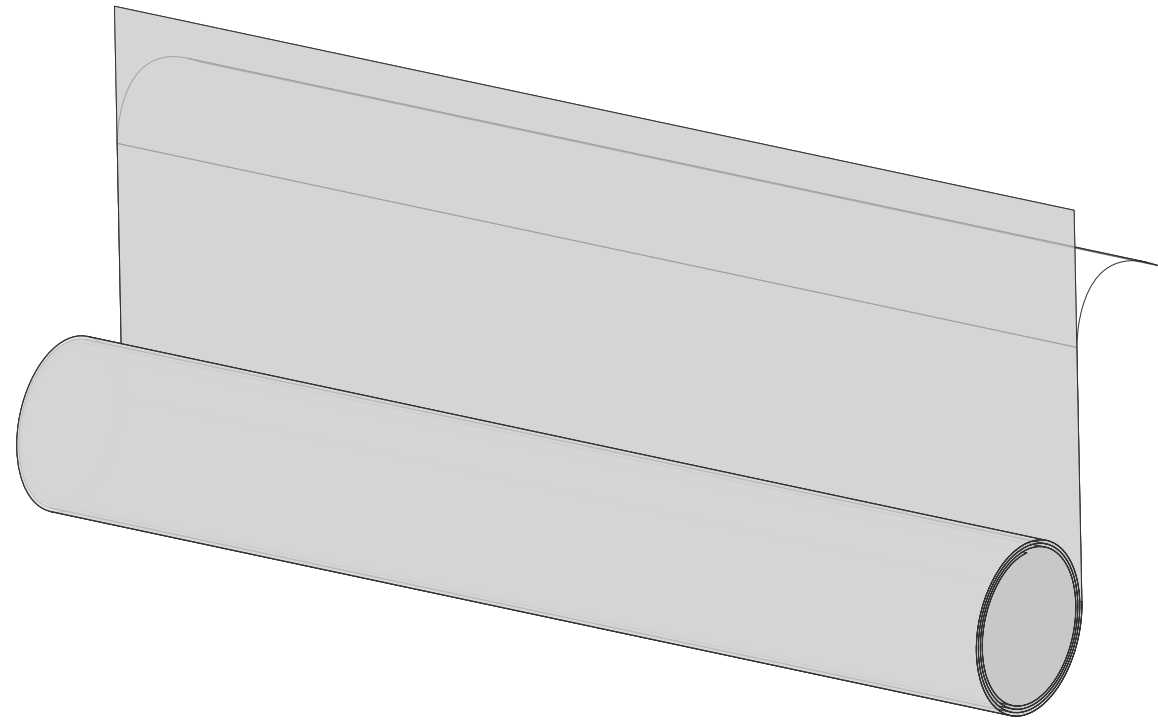


2

Peel a portion of the protective backing from the back of the film – peel back around 20cm of cover from the top portion of the film (2).

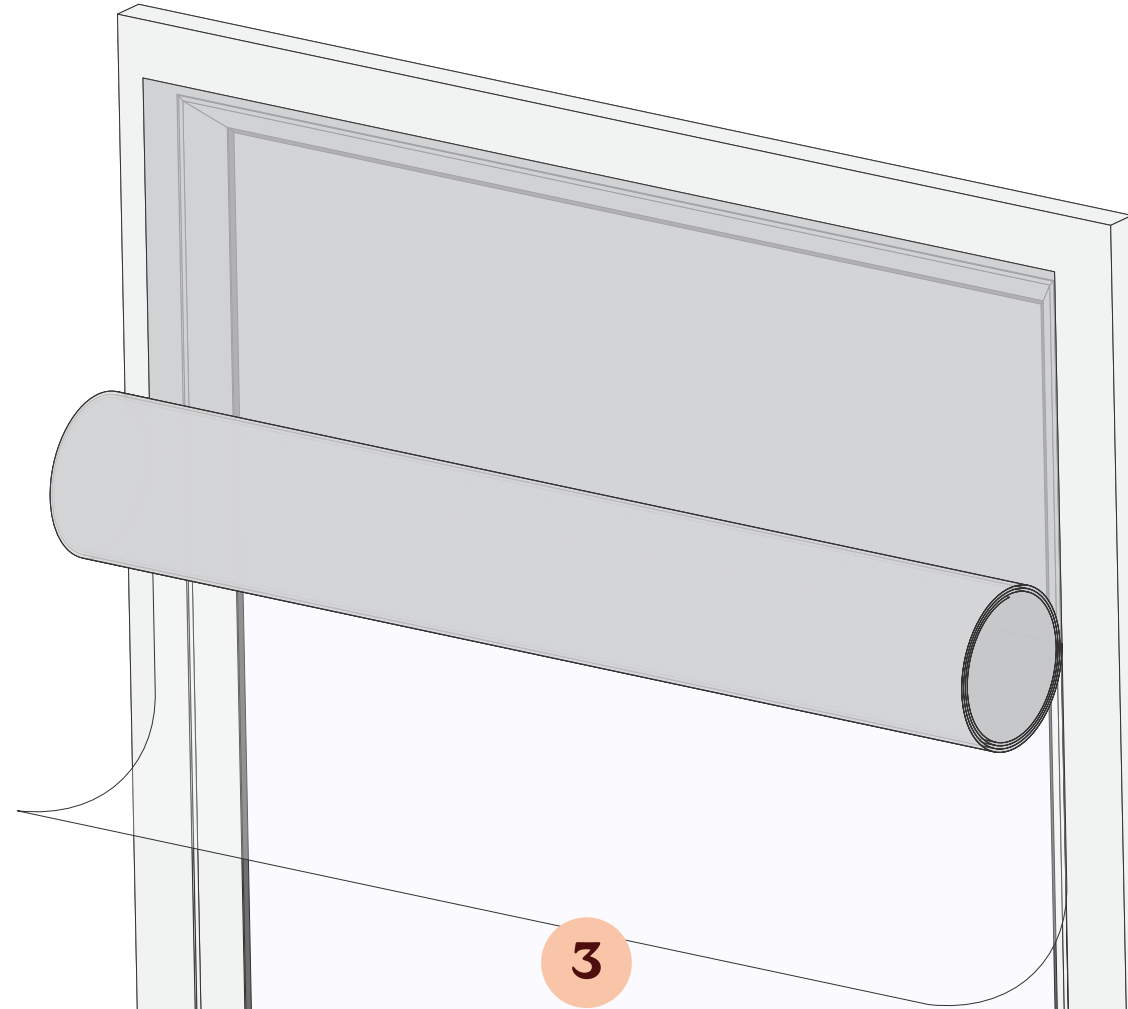

3



Line up and centre the film against the window (3).

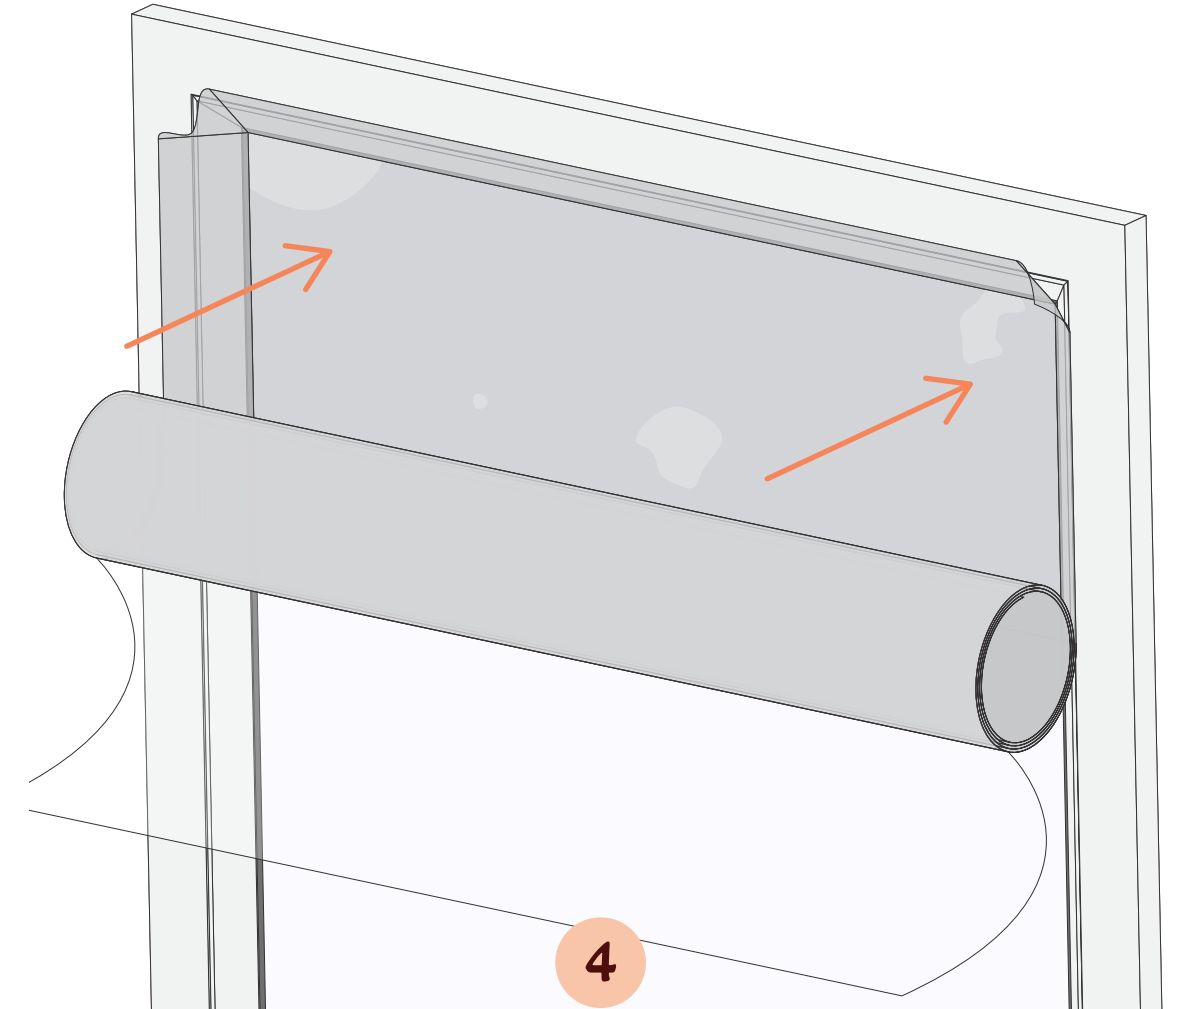

4

Press the uncovered portion to the glass (4). Use your hand for now to brush the film against the glass, pressing it into place.



Section 3 *Install the Film*

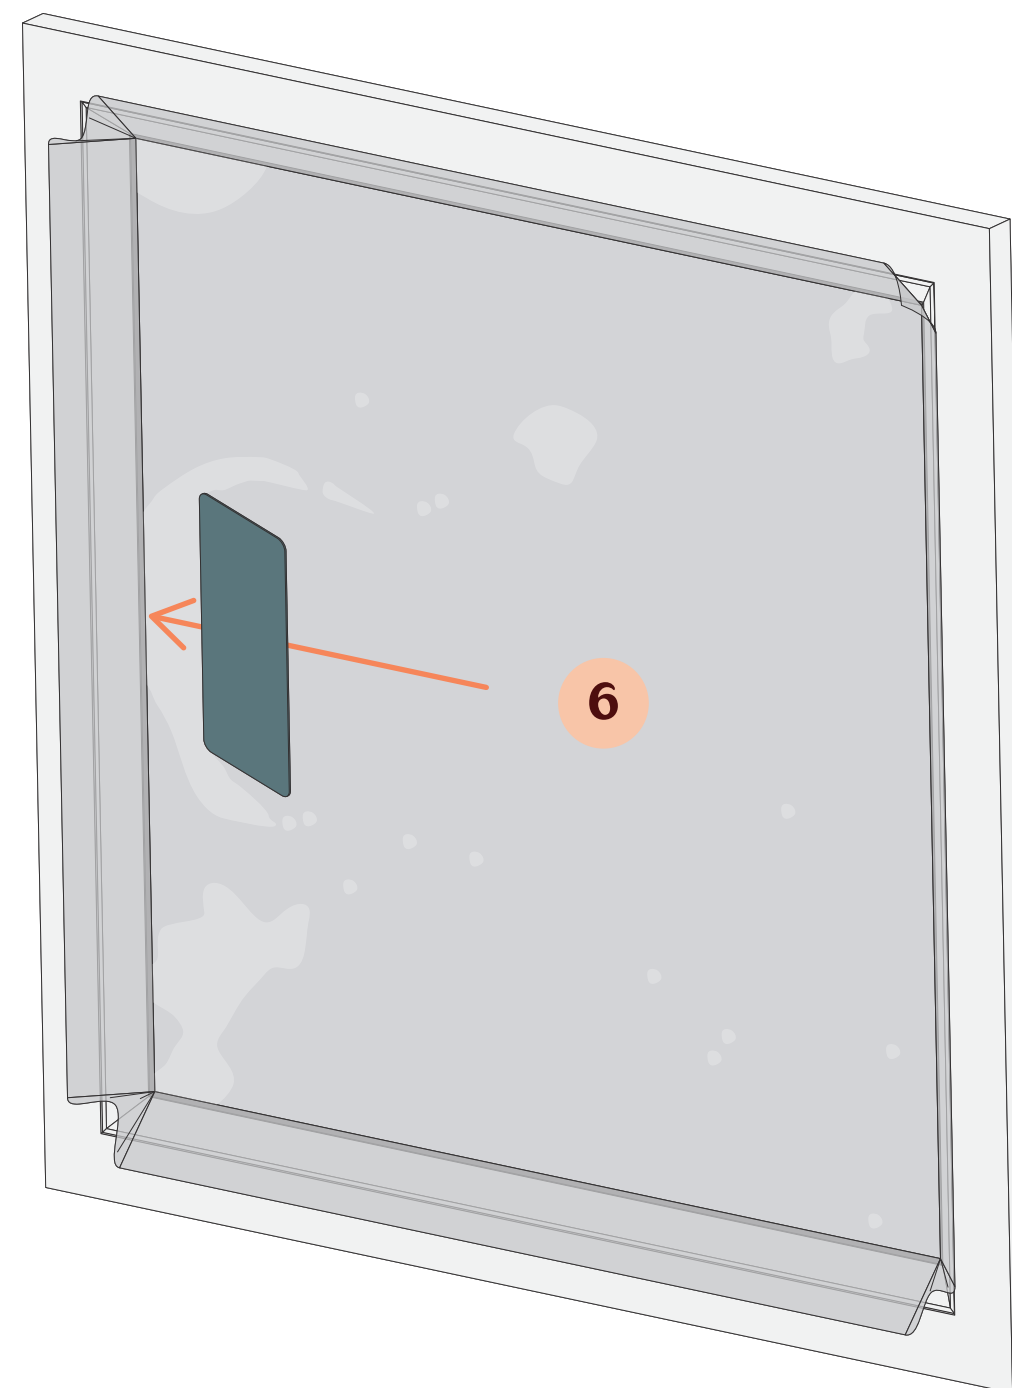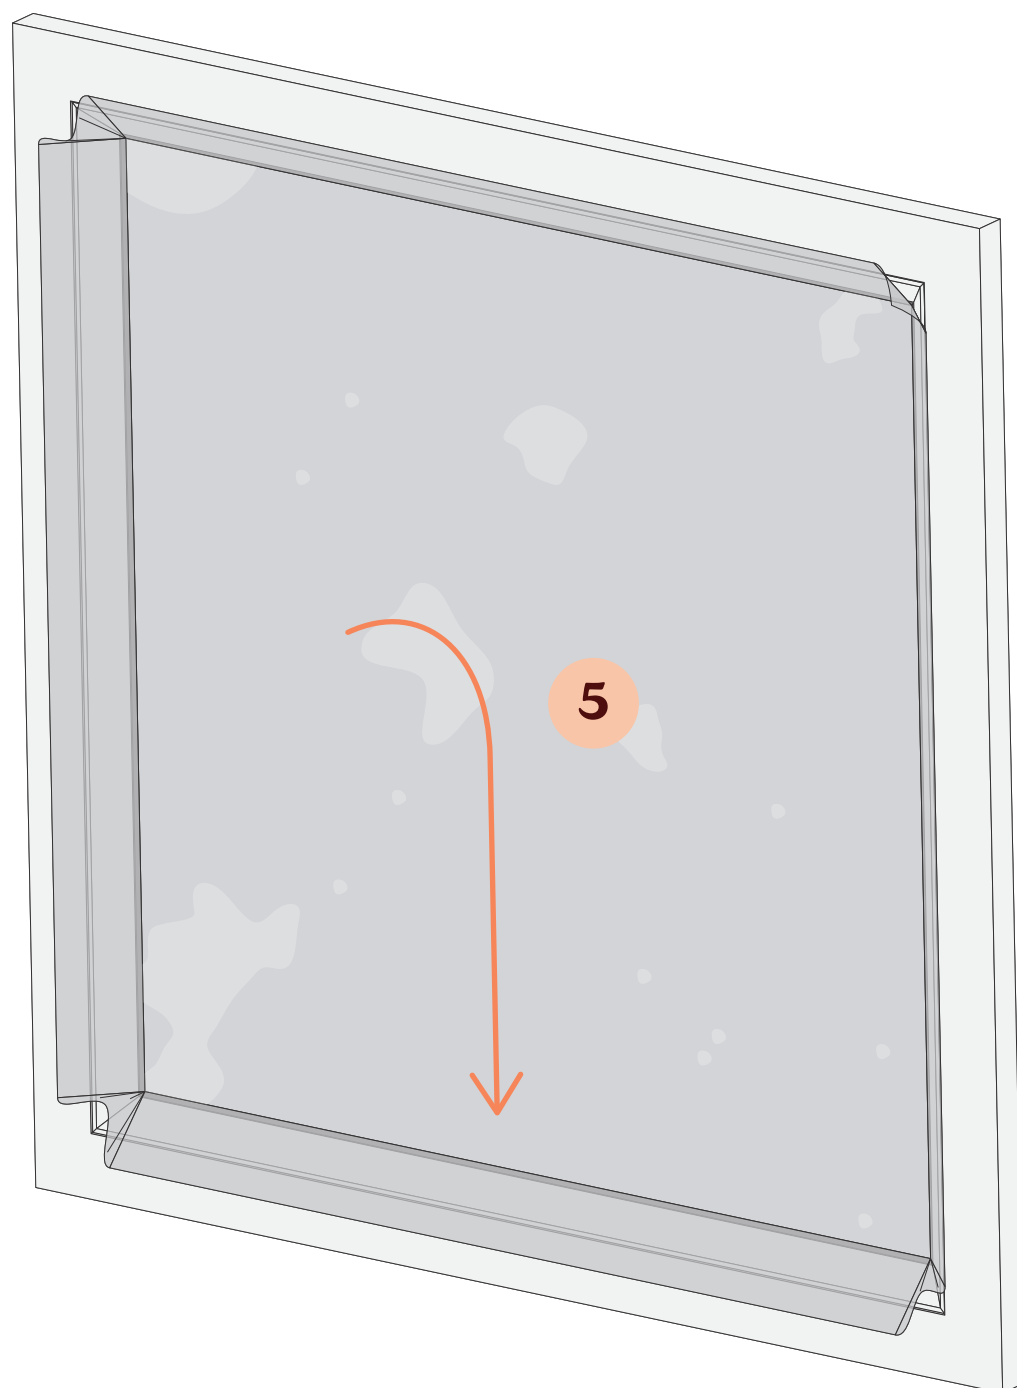

Continue pressing the film against the glass, peeling off the backing as you go, until the glass is fully covered and the backing completely removed (5).


Now you can take your scraper (either an old credit card, or the bubble remover from the fitting kit if you added it to your order), and start brushing the bubbles to the edges of the film (6).

Section 3 *Install the Film*

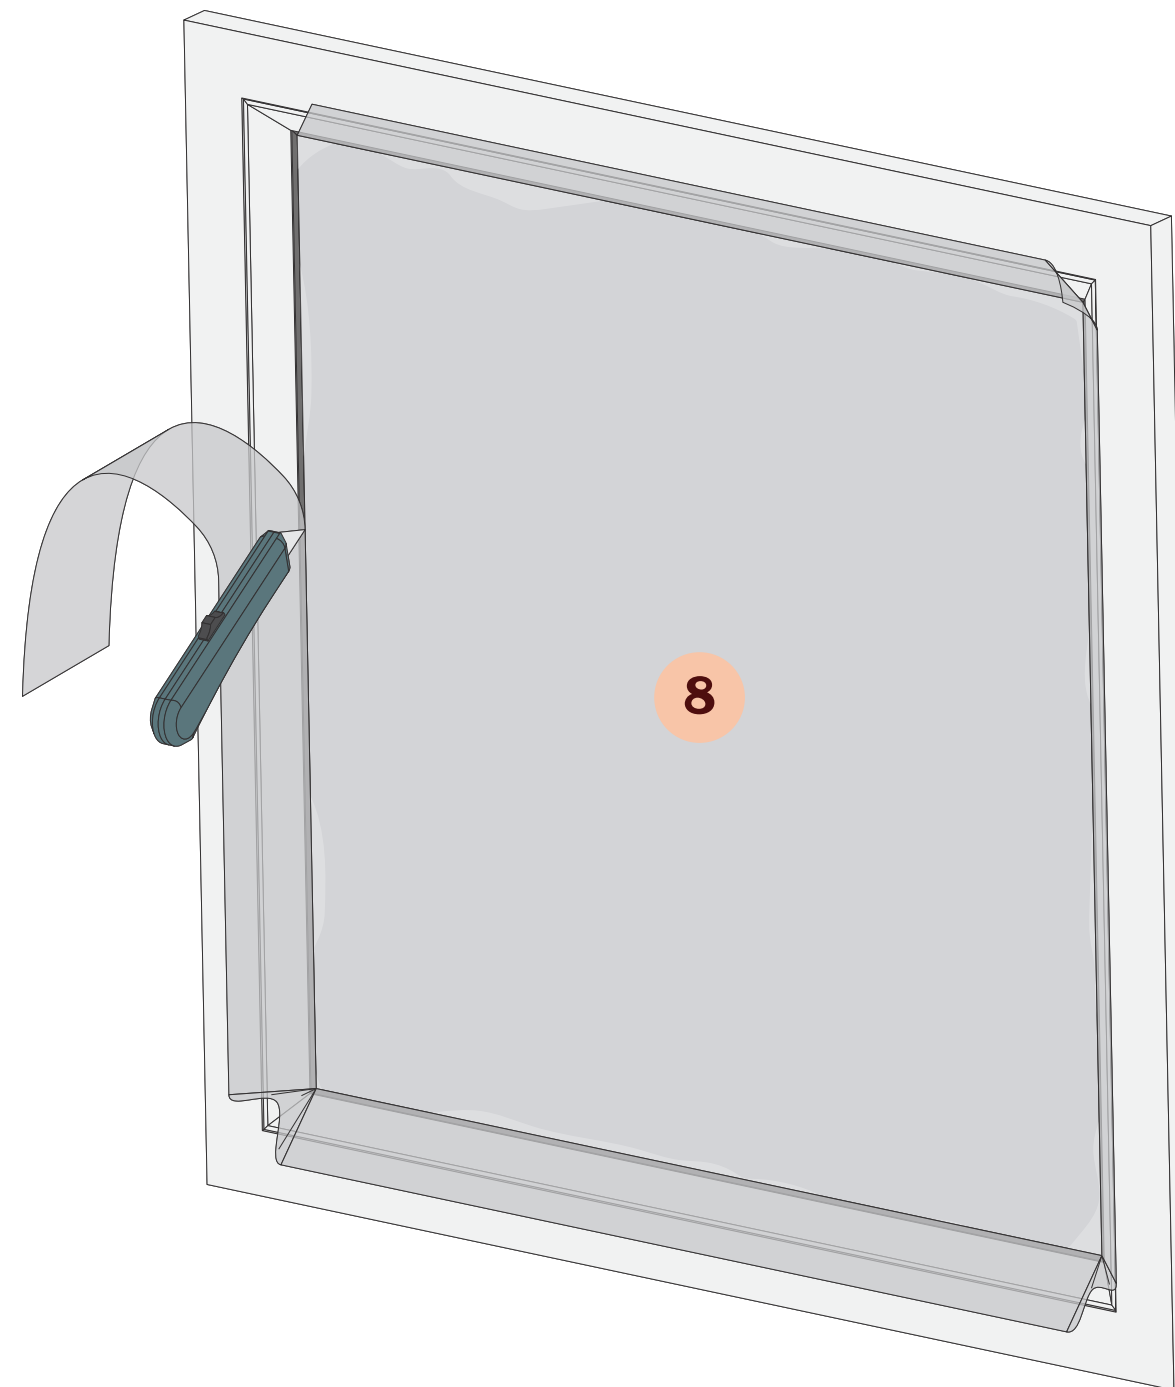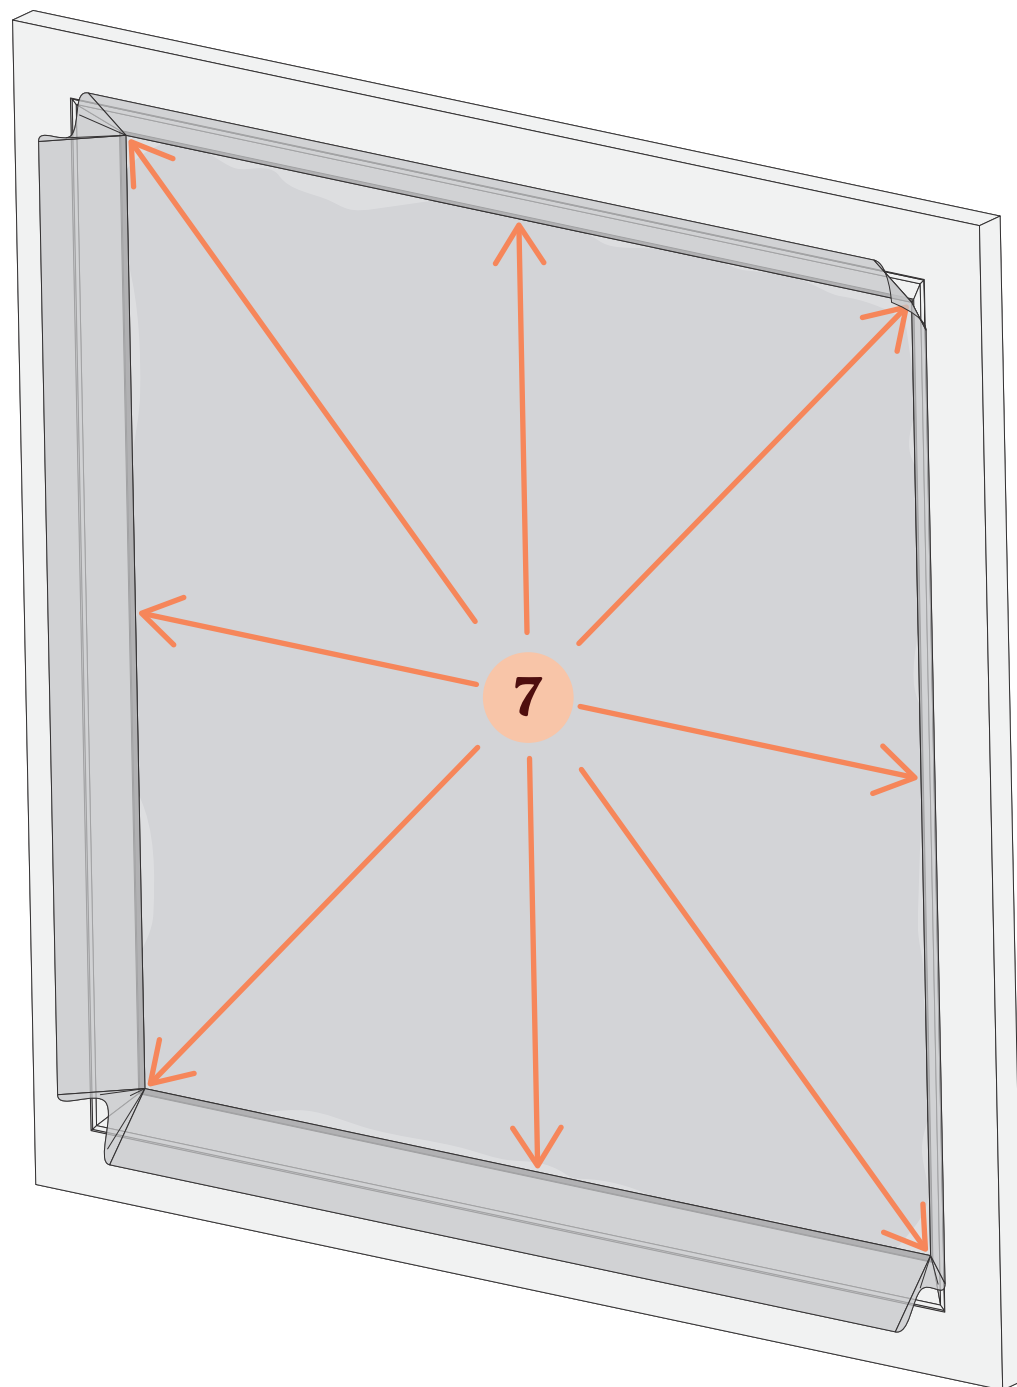


Continue using your scraper to push the bubbles out to the edges of the film, working outwards from the centre (7). You'll have some bubbles left at the edges of the fabric once you're done – don't worry, those can be pushed out once you've trimmed the film.

Now use your cutting blade to trim the edges of the film (8). Take this part slowly, taking care not to slip and cut into the window's rubber seal, or accidentally cut across the film.

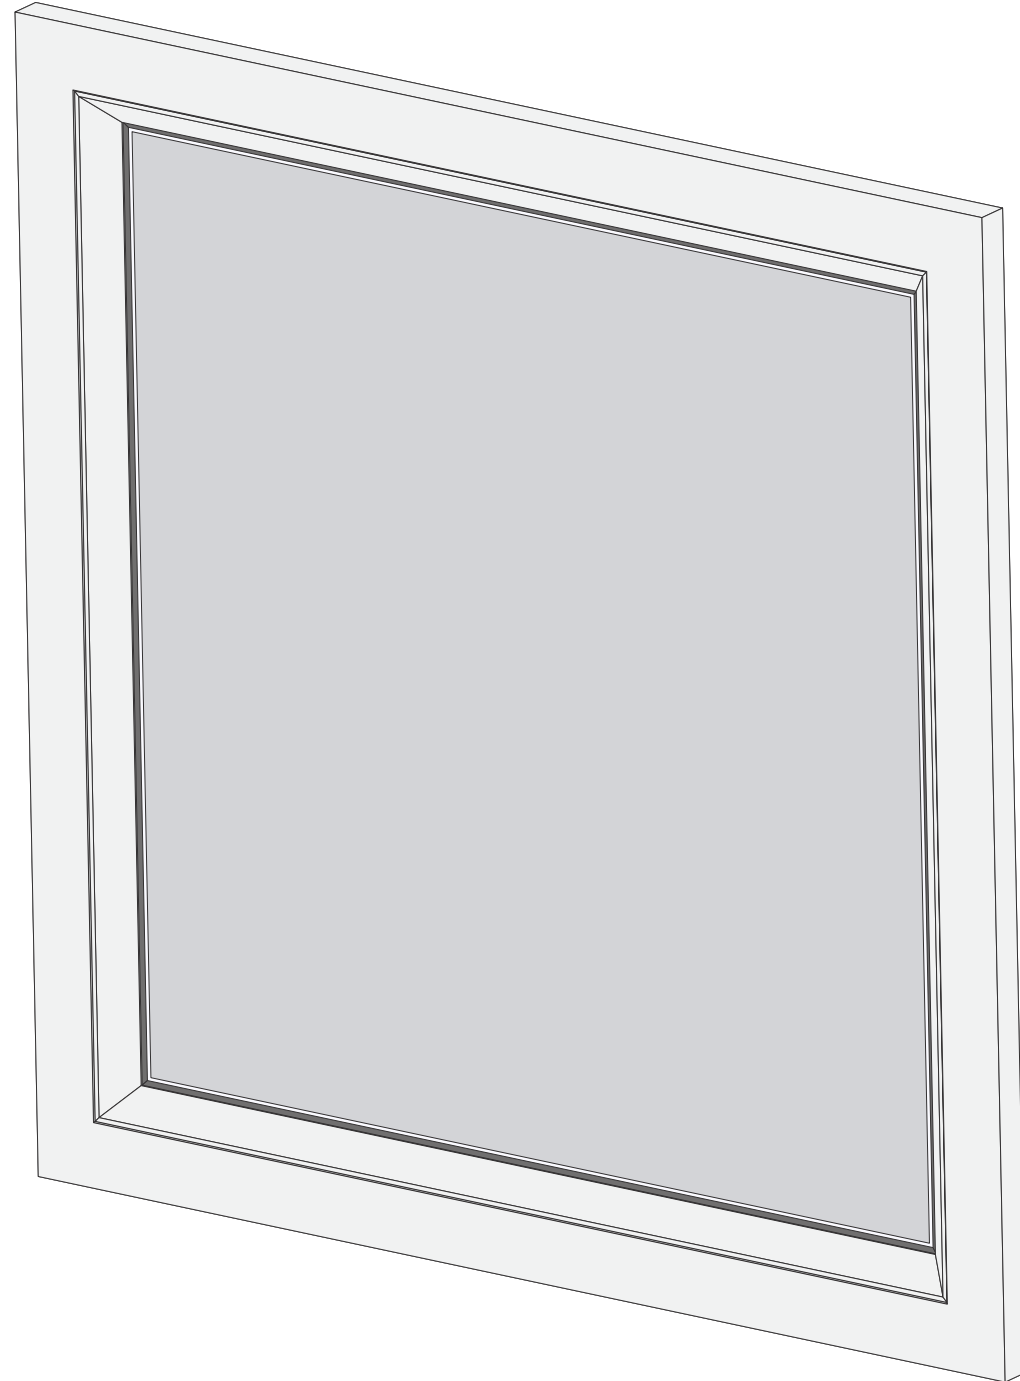

Once you've trimmed away all the excess, use your scraper to push out the rest of the bubbles around the edges of the fabric.

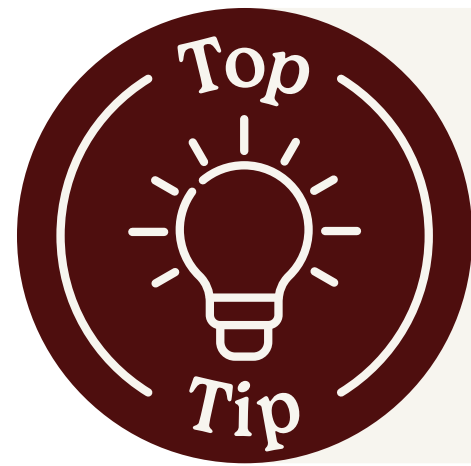

You can easily check for any bubbles you've missed by taking a quick look at the back of the film from outside – smaller bubbles can be harder to spot from inside.

And that's it! Your film is now installed, easy!