


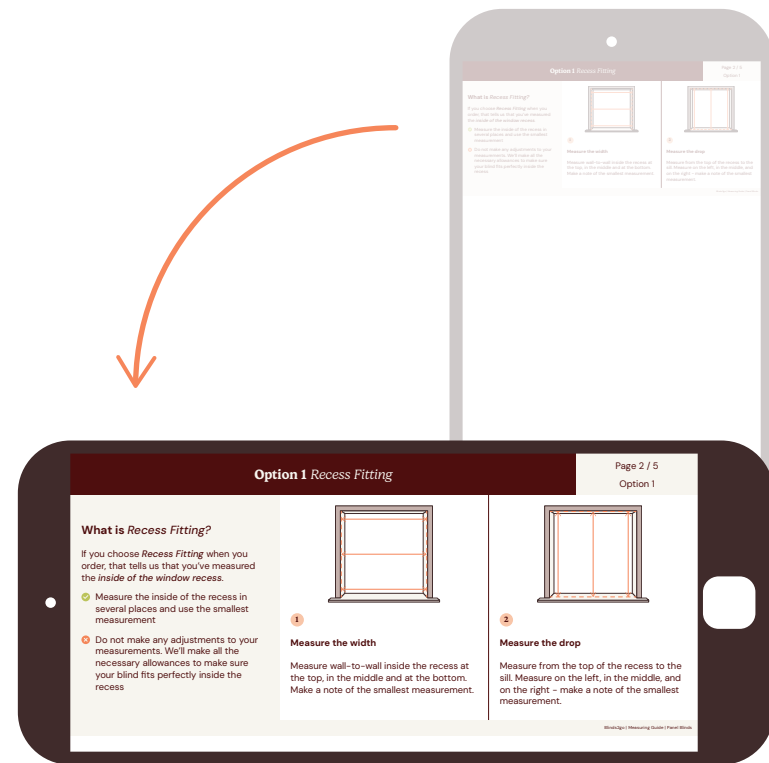

Turn your phone or tablet

Our guides are best viewed in landscape if you're viewing on your phone or tablet.

Our Top Tips for Measuring

Even if you have no DIY or measuring experience, don't worry – measuring is easy! The following pages will guide you through how to measure for your beautiful new blinds, but here are some general tips to keep in mind as you measure:

- ✓ Always use a metal tape measure – cloth or plastic ones can stretch, giving you inaccurate measurements
- ✓ Double check everything! If you're even slightly unsure about a measurement you've taken, measure again until you're certain
- ✓ Measure to the nearest millimetre, or to the nearest fraction if you're measuring in inches




Don't worry! Even if your measurements aren't quite right, our SureSize measuring guarantee has you covered.

What is Recess Fitting?

If you choose *Recess Fitting* when you order, that tells us that you've measured the *inside of the window recess*.


- ✓ Measure the inside of the recess in several places and use the smallest measurement
- ✗ Do not make any adjustments to your measurements. We'll make all the necessary allowances to make sure your blind fits perfectly inside the recess
- i No drill blinds must be measured for recess fitting

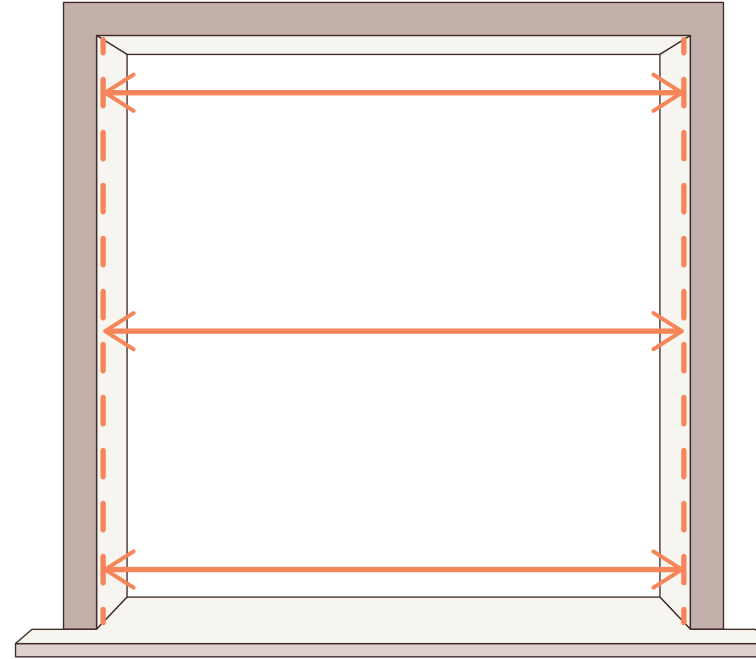

1

Measure the width


Measure wall-to-wall inside the recess at the top, in the middle and at the bottom. Make a note of the smallest measurement.

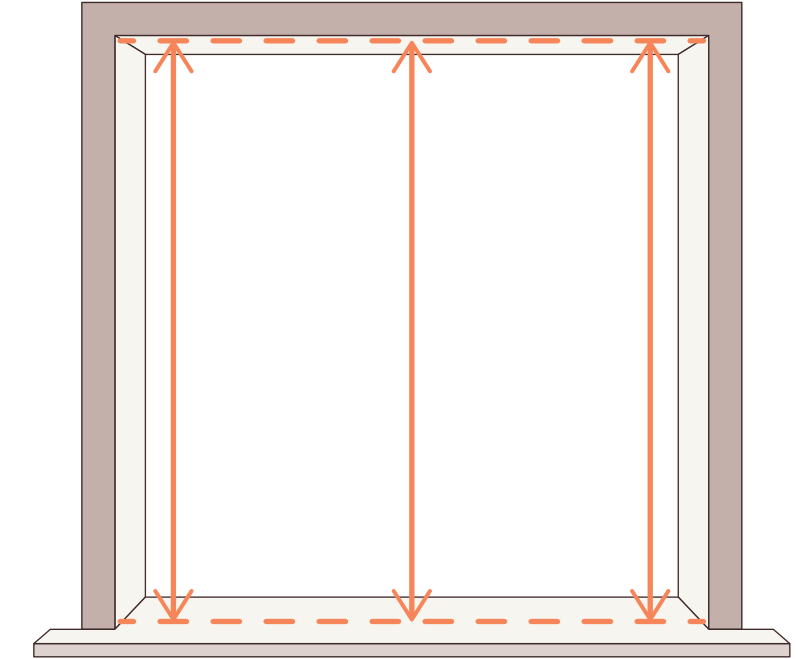

2

Measure the drop

Measure from the top of the recess to the sill. Measure on the left, in the middle, and on the right – make a note of the smallest measurement.

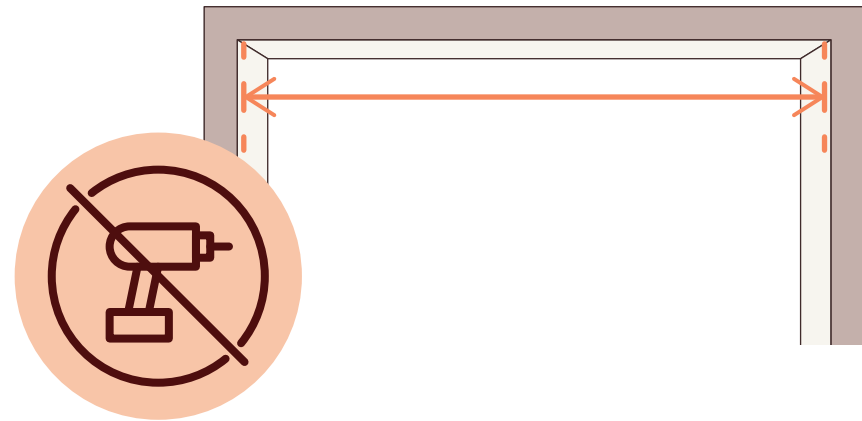

No drill blinds


If you're measuring for a blind with a no drill upgrade then the most important width measurement is at the top of the recess.



Uneven recesses

If your recess has tiles part way up, a skirting board or a picture rail, this is the spot where you should take your width measurement (as this will usually be the narrowest part of the recess).

- ✗ *These types of recesses aren't suitable for blinds with a no drill upgrade.*

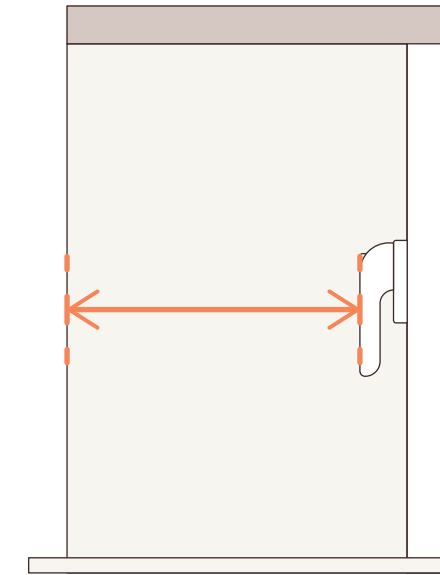

Window handles

Always make sure there's enough space inside the recess so that your blind will clear any window handles.


- i *If your recess is 1410mm wide or less, you'll need at least 55mm between the handle and the front of the recess. If it's wider, you'll need a depth of at least 90mm.*

What is *Exact Fitting*?

Choosing *Exact Fitting* tells us that wherever you're fitting your blind, your measurements are the final measurements you'd like us to make the blind.

Exact Fitting is usually the correct choice when *the blind is being installed outside a window recess*.


- ✓ Measure the size of the recess and add a certain amount to the width and the drop so that the blind overlaps on all sides
- ✓ Make sure you allow around a 15mm gap at the bottom so the fabric doesn't touch anything below it

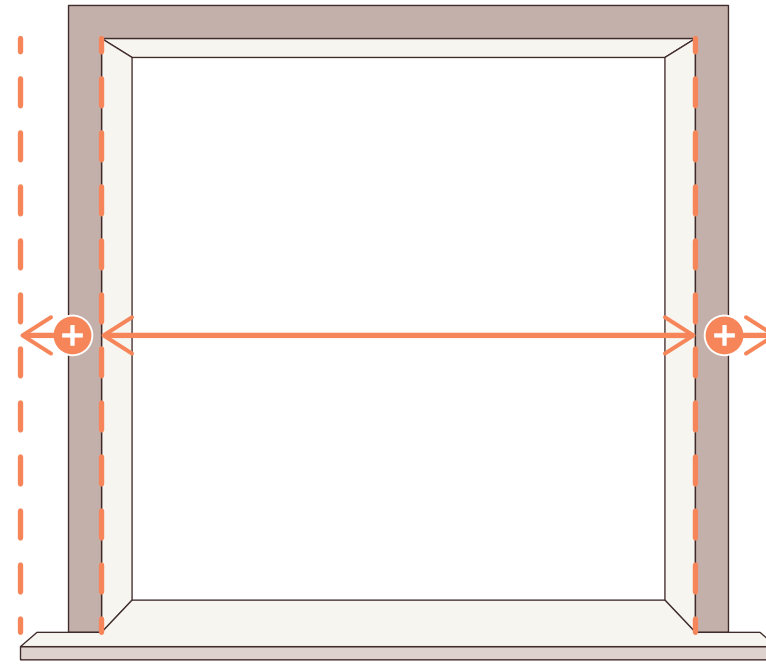

1

Measure the width

Measure the width of the recess and add at least 50mm on each side.

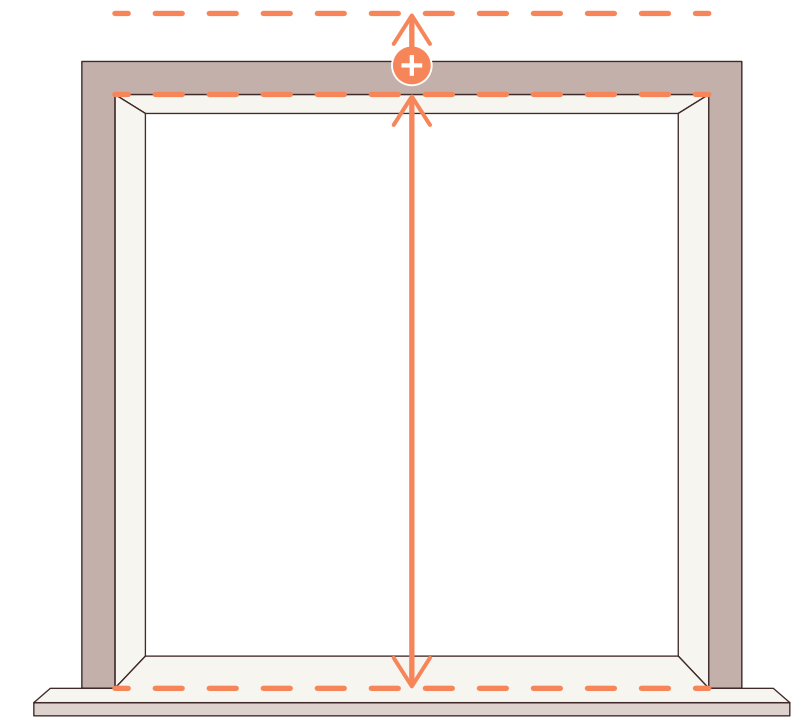


2

Measure the drop

Measure from the top of the recess to the sill. Add around 70mm to this measurement so there's space above the recess for the blind's brackets.


Top Tips *Exact Fitting*

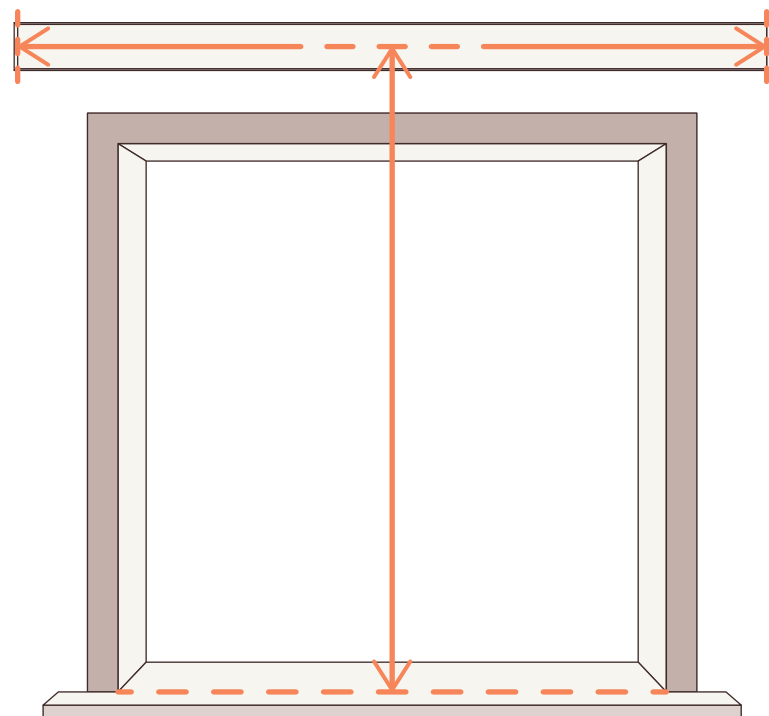

Wooden battens


If you have a curtain rail batten above the window, it's best to fix your blind to this.

Measure the full width of the batten for your width. For the drop, measure from the centre of the batten to the sill.

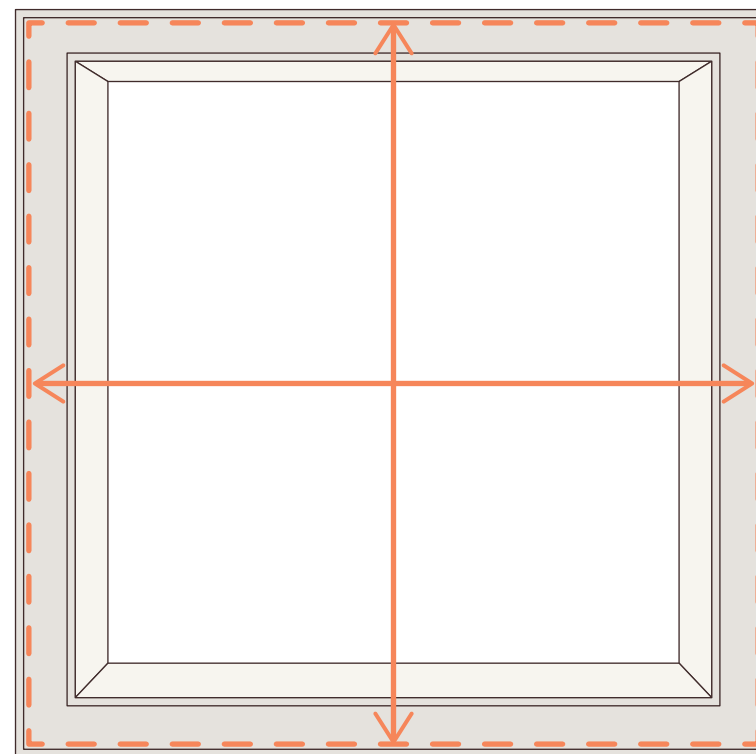

Decorative architraves

If your window is framed by an architrave then we'd recommend fixing the blind to this. There's usually a sizeable flat area around the face of the architrave, simply measure the width and height of that flat area.

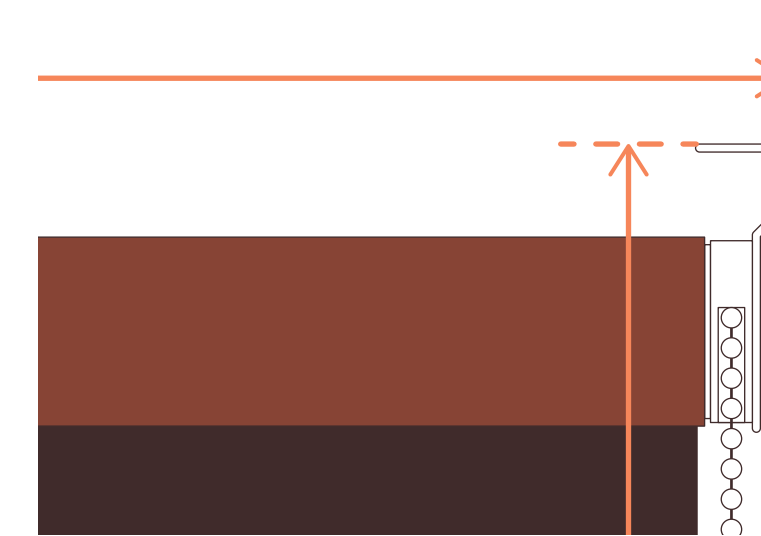

Replacing existing blinds

If you already have a blind fitted and are replacing it with a new one of the same type, you can take the measurements from your existing blind. Just make sure you include any rails, fittings or brackets in your measurement.