

Turn your phone or tablet

Our guides are best viewed in landscape if you're viewing on your phone or tablet.

Our Top Tips for Measuring

Even if you have no DIY or measuring experience, don't worry – measuring is easy! The following pages will guide you through how to measure for your beautiful new blinds, but here are some general tips to keep in mind as you measure:

- ✓ Always use a metal tape measure – cloth or plastic ones can stretch, giving you inaccurate measurements
- ✓ Double check everything! If you're even slightly unsure about a measurement you've taken, measure again until you're certain
- ✓ Measure to the nearest millimetre, or to the nearest fraction if you're measuring in inches



Don't worry! Even if your measurements aren't quite right, our SureSize measuring guarantee has you covered.

Is your window suitable?

Our PerfectFit Blinds are installed using brackets which slide under the rubber seal in your uPVC window or door. The blind's frame will be larger than the glass, overlapping onto the window frame on all sides. Before measuring, check that the window frame can accommodate these blinds.


- ✓ Check that the rubber seal under the frame doesn't extend too far into the glass area
- ✓ Check that any vents or handles on the window frame aren't close enough to the glass to prevent the blind from fitting



1

Measure the rubber seal

Measure how far the rubber seal extends from the edge of the frame into the glass area – *this must be 6mm or less.*

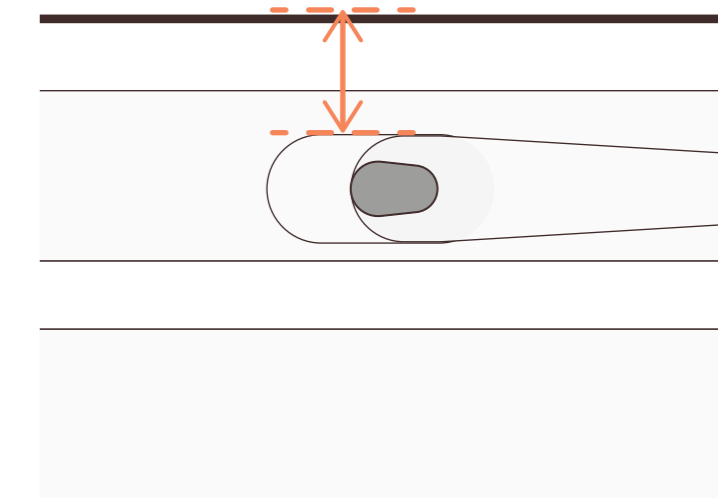

2


Measure from the glass to obstructions

Measure from the edge of the visible glass to the edge of any vents or handle mounts on the frame – *this distance must be at least 25mm.*

Is your window suitable?

Two last things to check and measure – then if everything's OK you're ready to take your final measurements.

- ✓ Check that the brackets can slide into place under the frame
- ✓ Measure the depth of the window frame

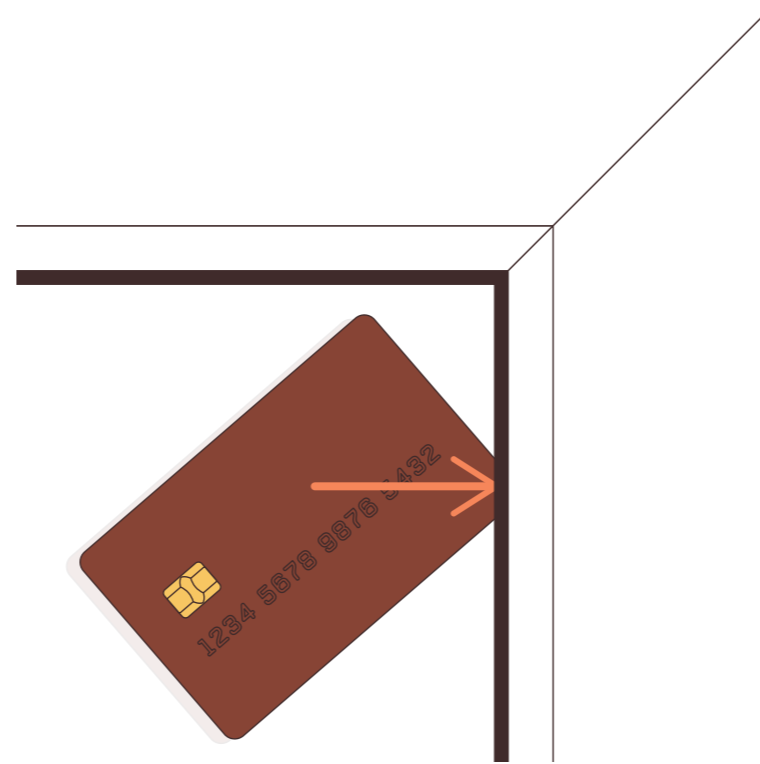

3

Check the brackets will fit

To check that the brackets will be able to slide under the rubber seal, use the corner of a standard store or bank card and test to see if you can slide it under the seal.



4


Measure the depth of the frame

You'll need to let us know the depth of your window frame when you order – an easy way to measure this is to place your card over the corner of the frame, then measure the distance from the glass to the edge of the card.

Why Measure the glass?

Our PerfectFit blinds are designed to cover the glass area of your window or door, so all we need is the measurements of the glass to ensure your blind fits perfectly.

- ✓ Measure the glass in several places and use the smallest measurement
- ✓ Measure each pane individually, you'd be surprised how much they can vary in size even if they all look the same
- ✗ Do not include any of the rubber seal in your measurement, if it's visible
- ✗ Do not make any deductions or allowances in your measurements

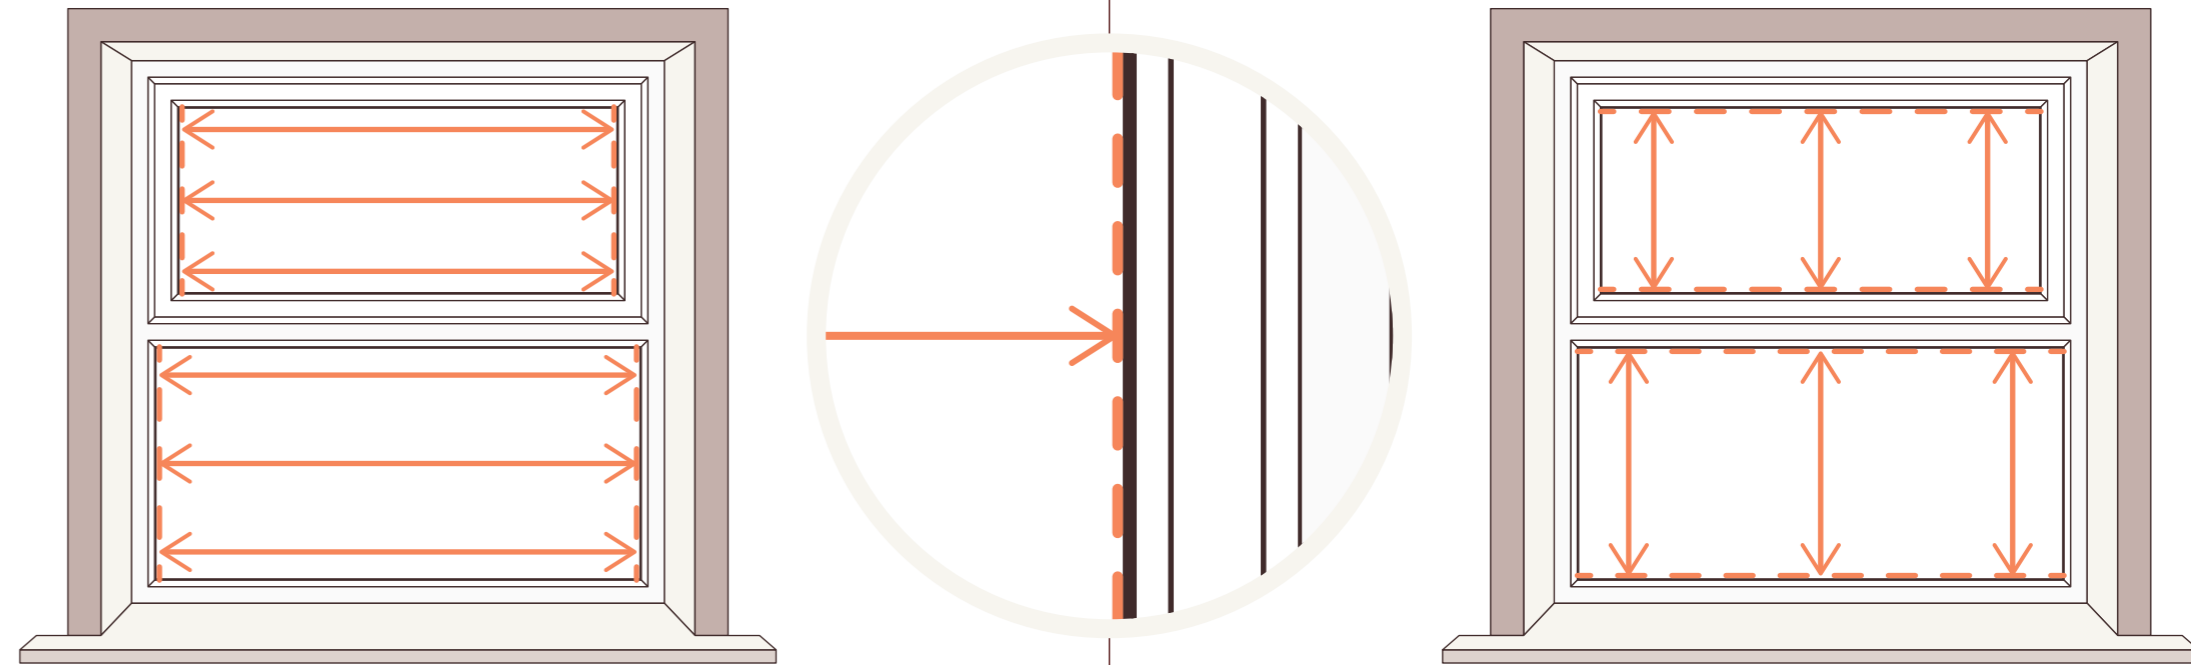

1 Measure the width

Measure the width of just the visible glass, not including any rubber seal that might extend into the glass area. Measure at the top, in the middle and at the bottom, and only note the smallest measurement.

2 Measure the drop

Measure the drop in the same way. Measure on the left, in the middle and on the right, noting down the smallest measurement.