

Designed for DIY...


Our Vertical Blinds are designed to be installed by you, without specialist fitters, even if you don't have much DIY experience.

Please read each page of this guide carefully during installation, following along one step at a time.

Upgrades & Variations...

If you did chose our Stick2Go no drill upgrade, just click or tap this link to find your installation guide:


[Stick2Go Vertical Blinds >>](#)

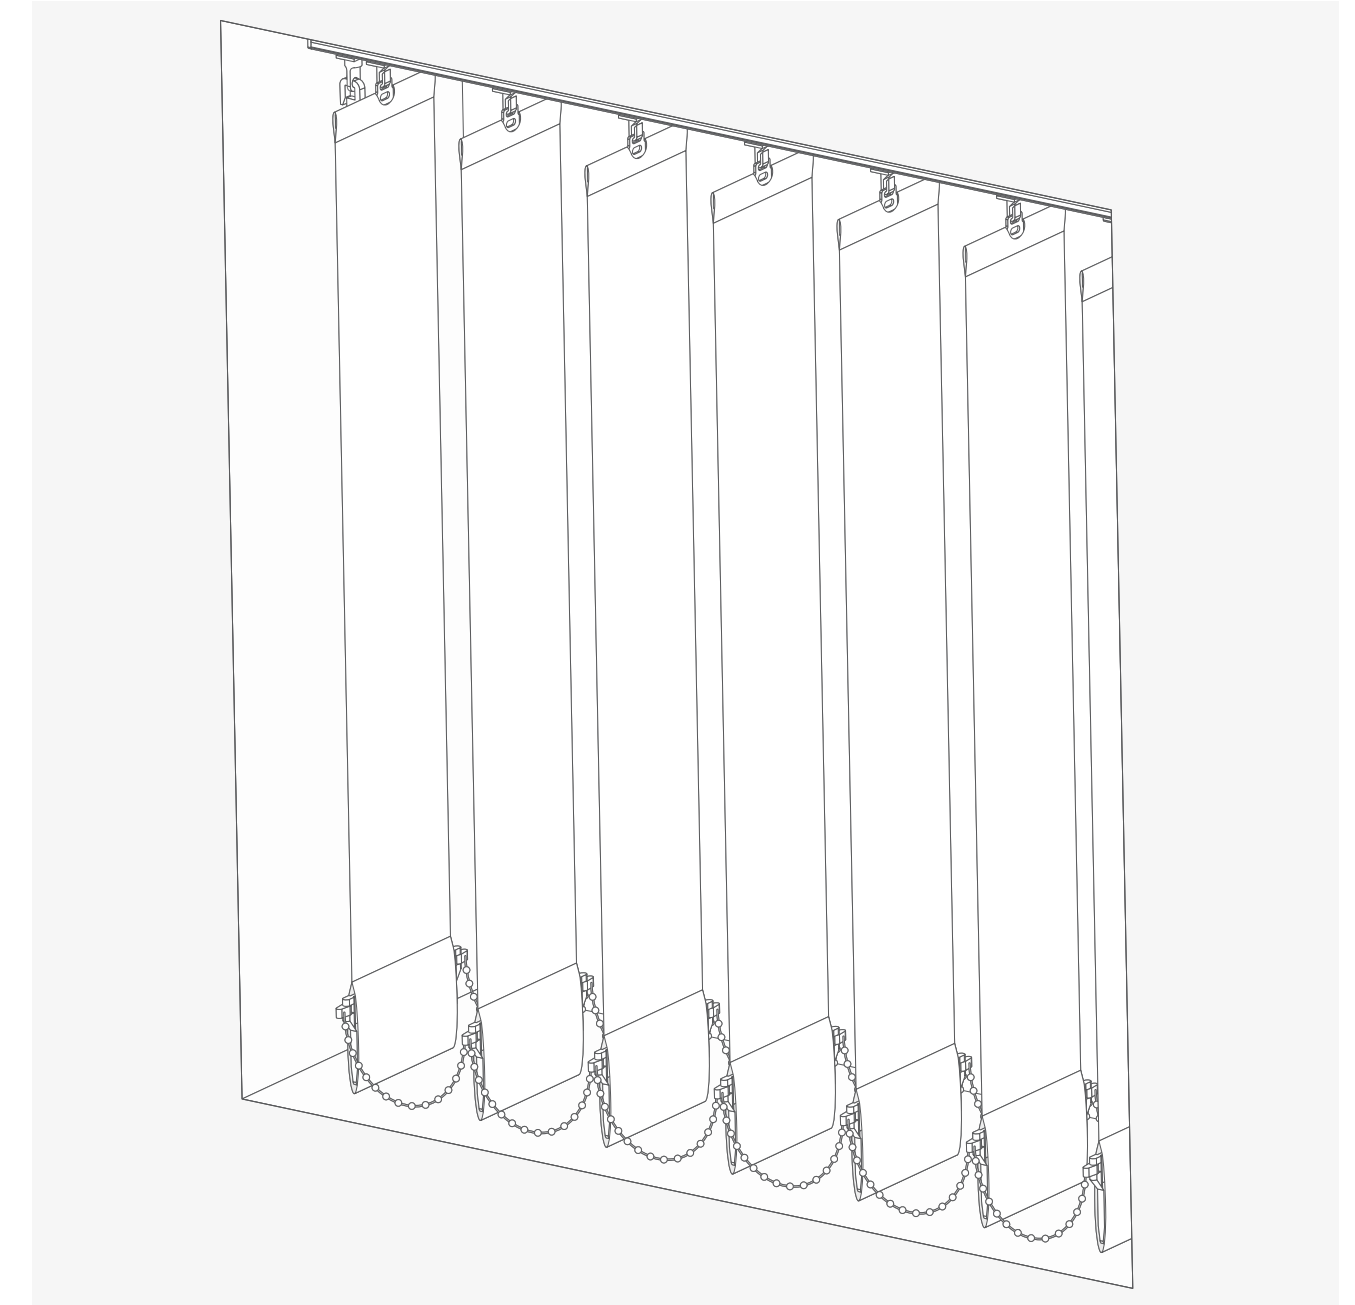


Tools required for this install:

- Handheld drill
- 4mm masonry drill bit
- Phillips screwdriver / Phillips driver bit
- Mallet / hammer
- Pen / pencil


Parts contained in your order...

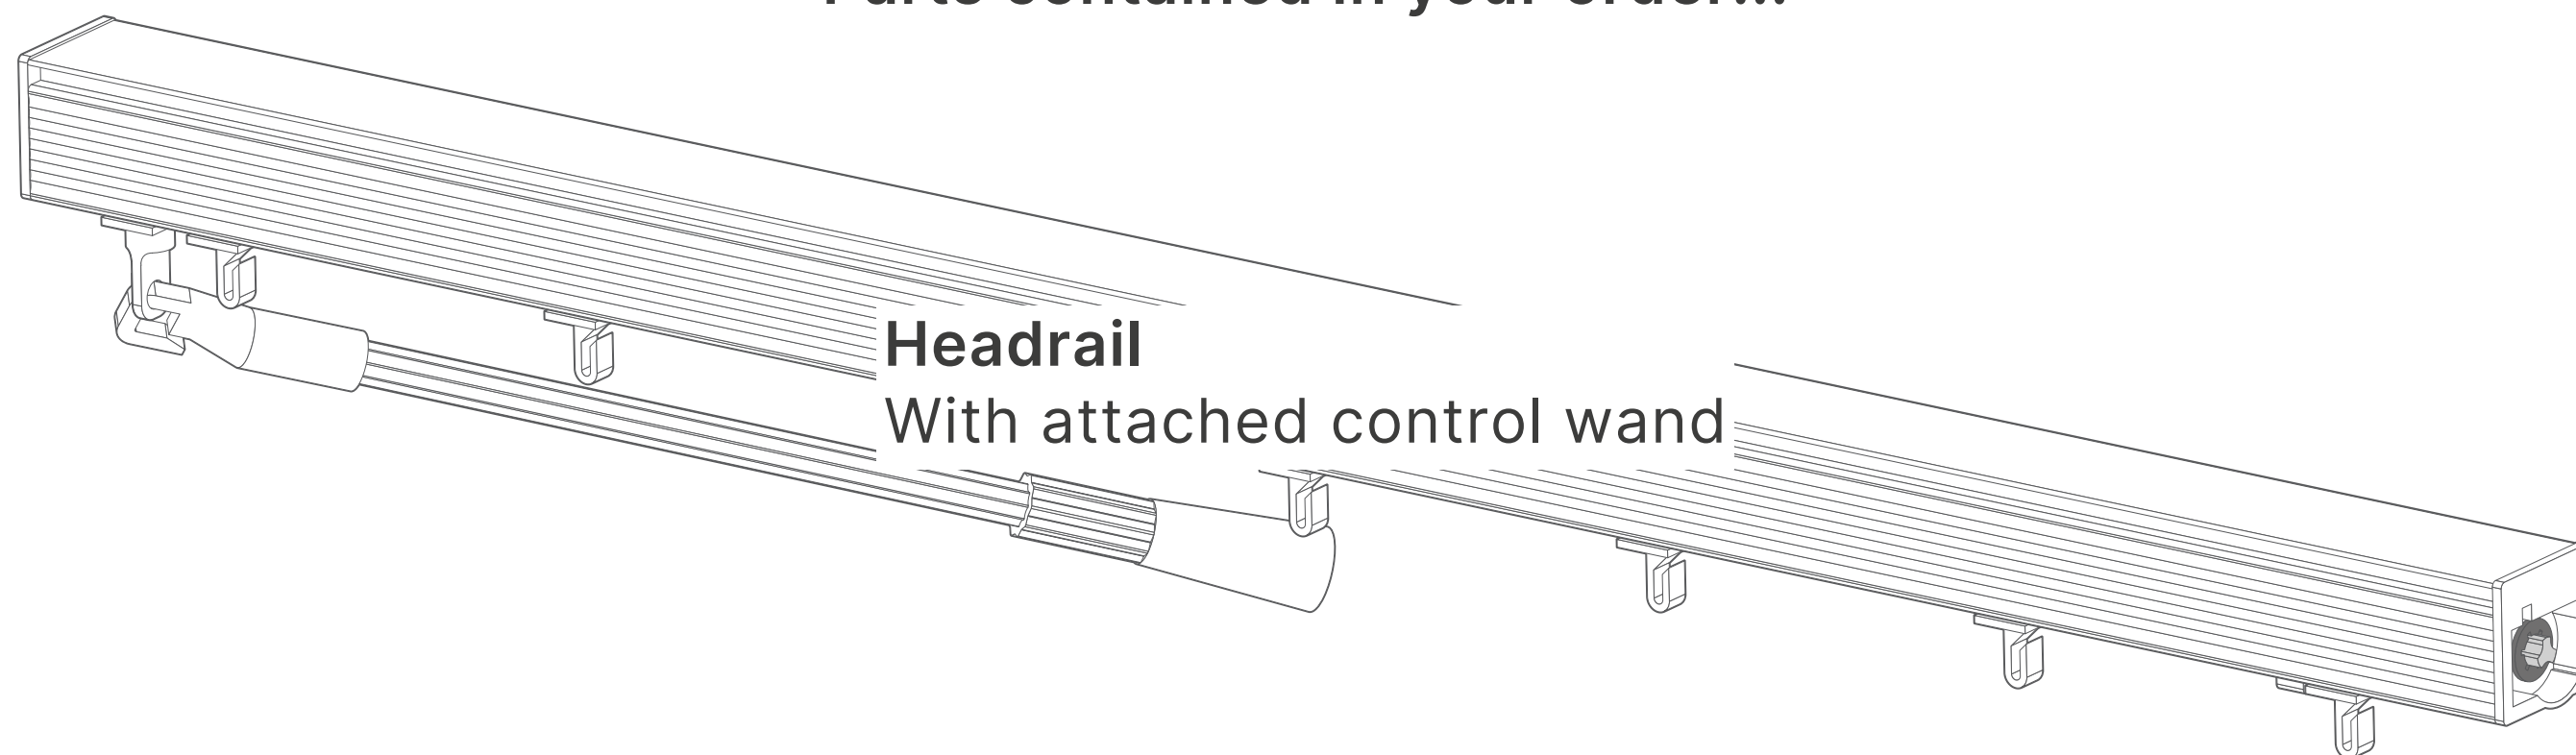


Headrail
With attached control wand

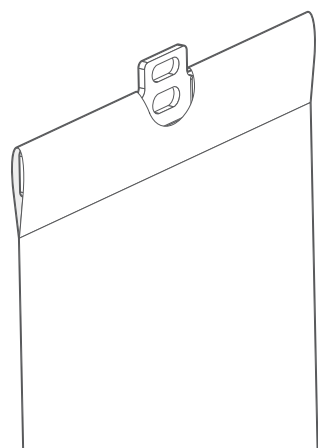

Fabric Louvres (Coiled)
Multiple, based on blind width

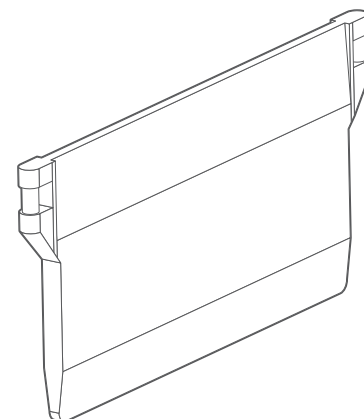


Louvre Weights
x1 per louvre

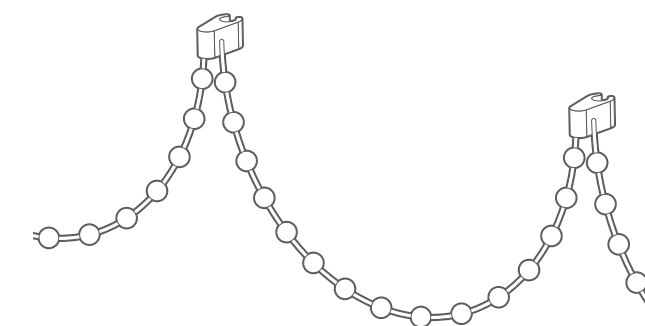


Stabilising Chain (Coiled)
Not provided for blinds with chainless weights

Fittings contained in your order...

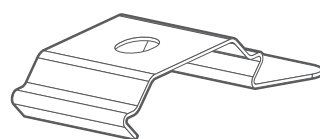

Or

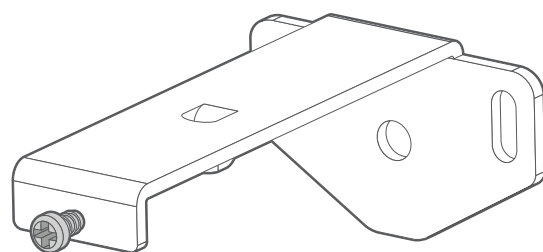


Mounting Brackets (Top-Fix)

Multiple per blind, based on width

Mounting Brackets (Face-Fix)

Multiple per blind, based on width


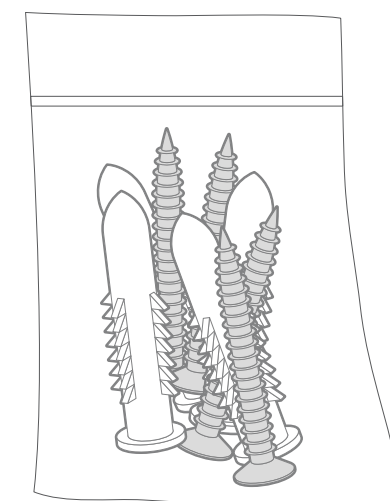


Screws & wall plugs

x1 per mounting bracket (top-fix)

x2 per mounting bracket (face-fix)

Parts & tools required for this section:

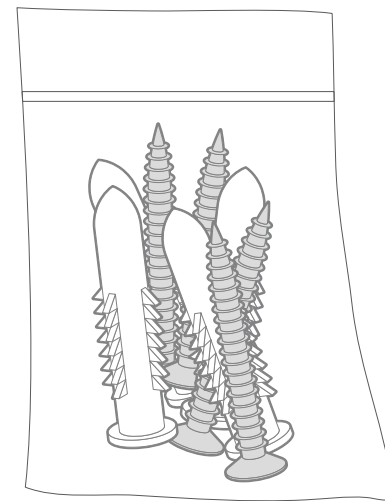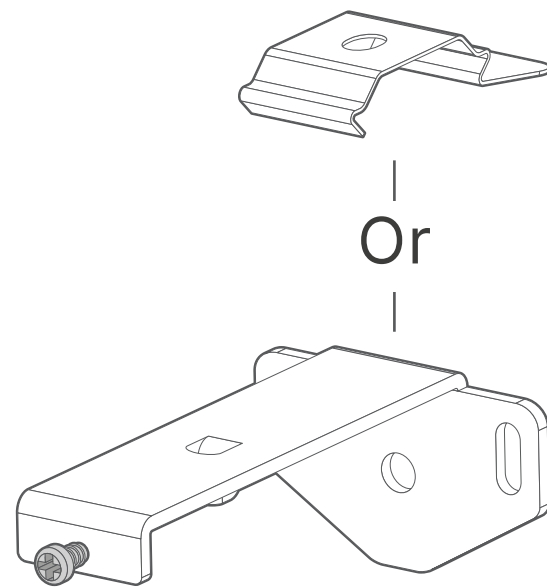


Parts

- Mounting brackets
- Screws & wall plugs

Tools

- Handheld drill
- 4mm masonry drill bit
- Phillips screwdriver / Phillips driver bit
- Mallet / hammer
- Pen/pencil


First, choose the method you'll be using to install your brackets:

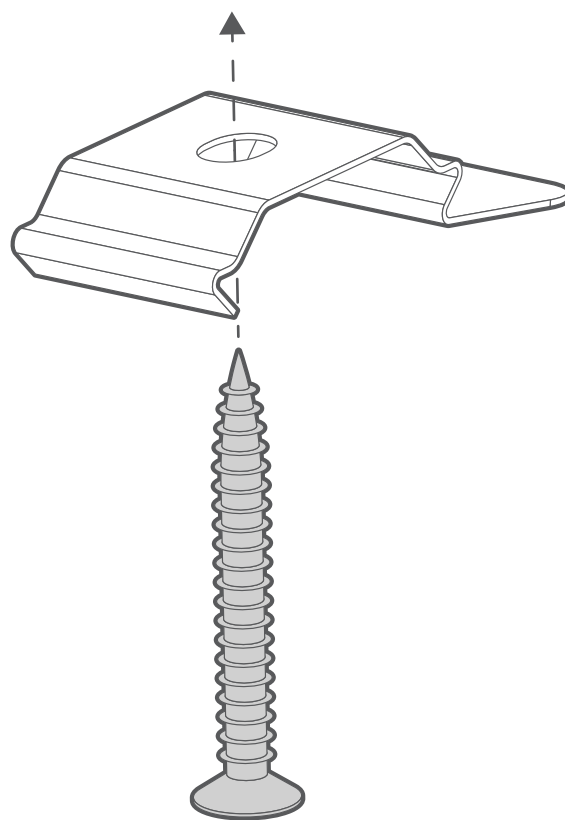

Top-fixing

Fitting inside the recess

The brackets are screwed into the top of the recess.


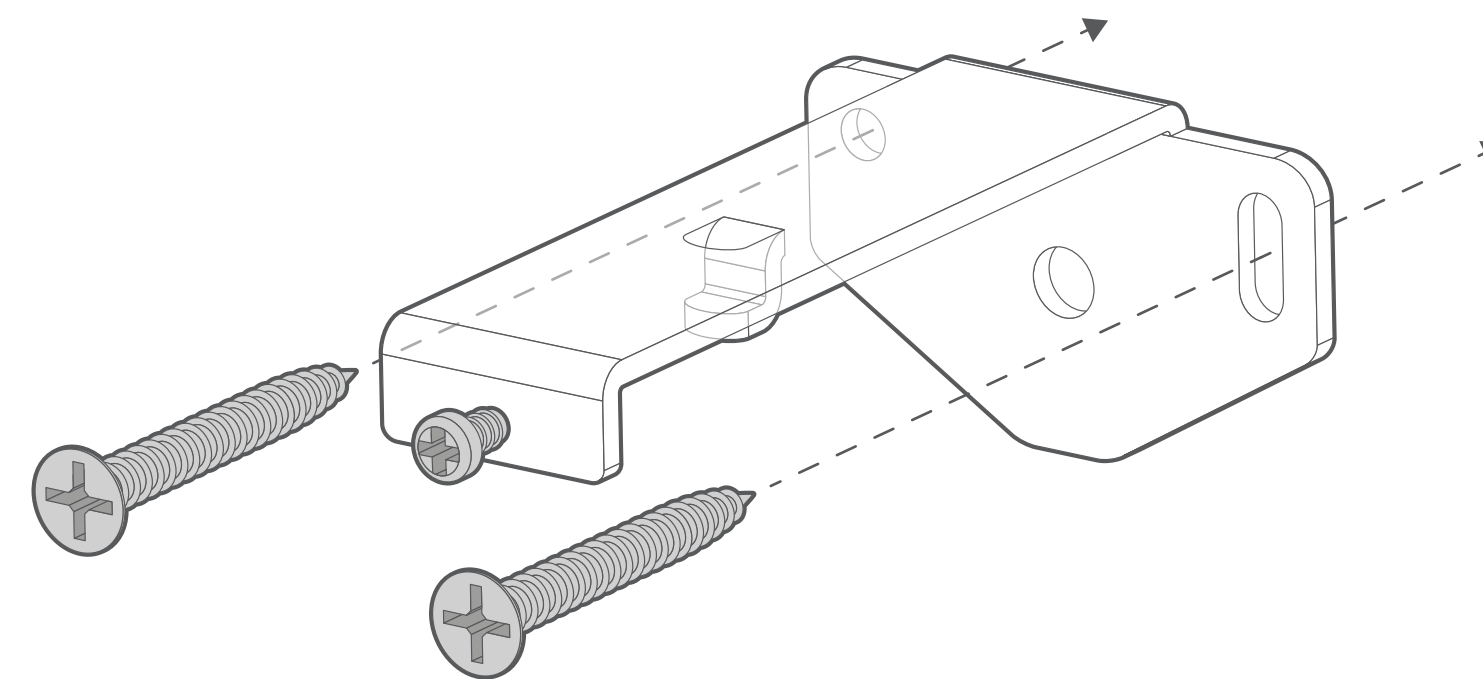


Face-fixing

Fitting outside the recess

The brackets are screwed to the wall above the recess.

Top-fixing the brackets (for face-fixing, skip to page 6):

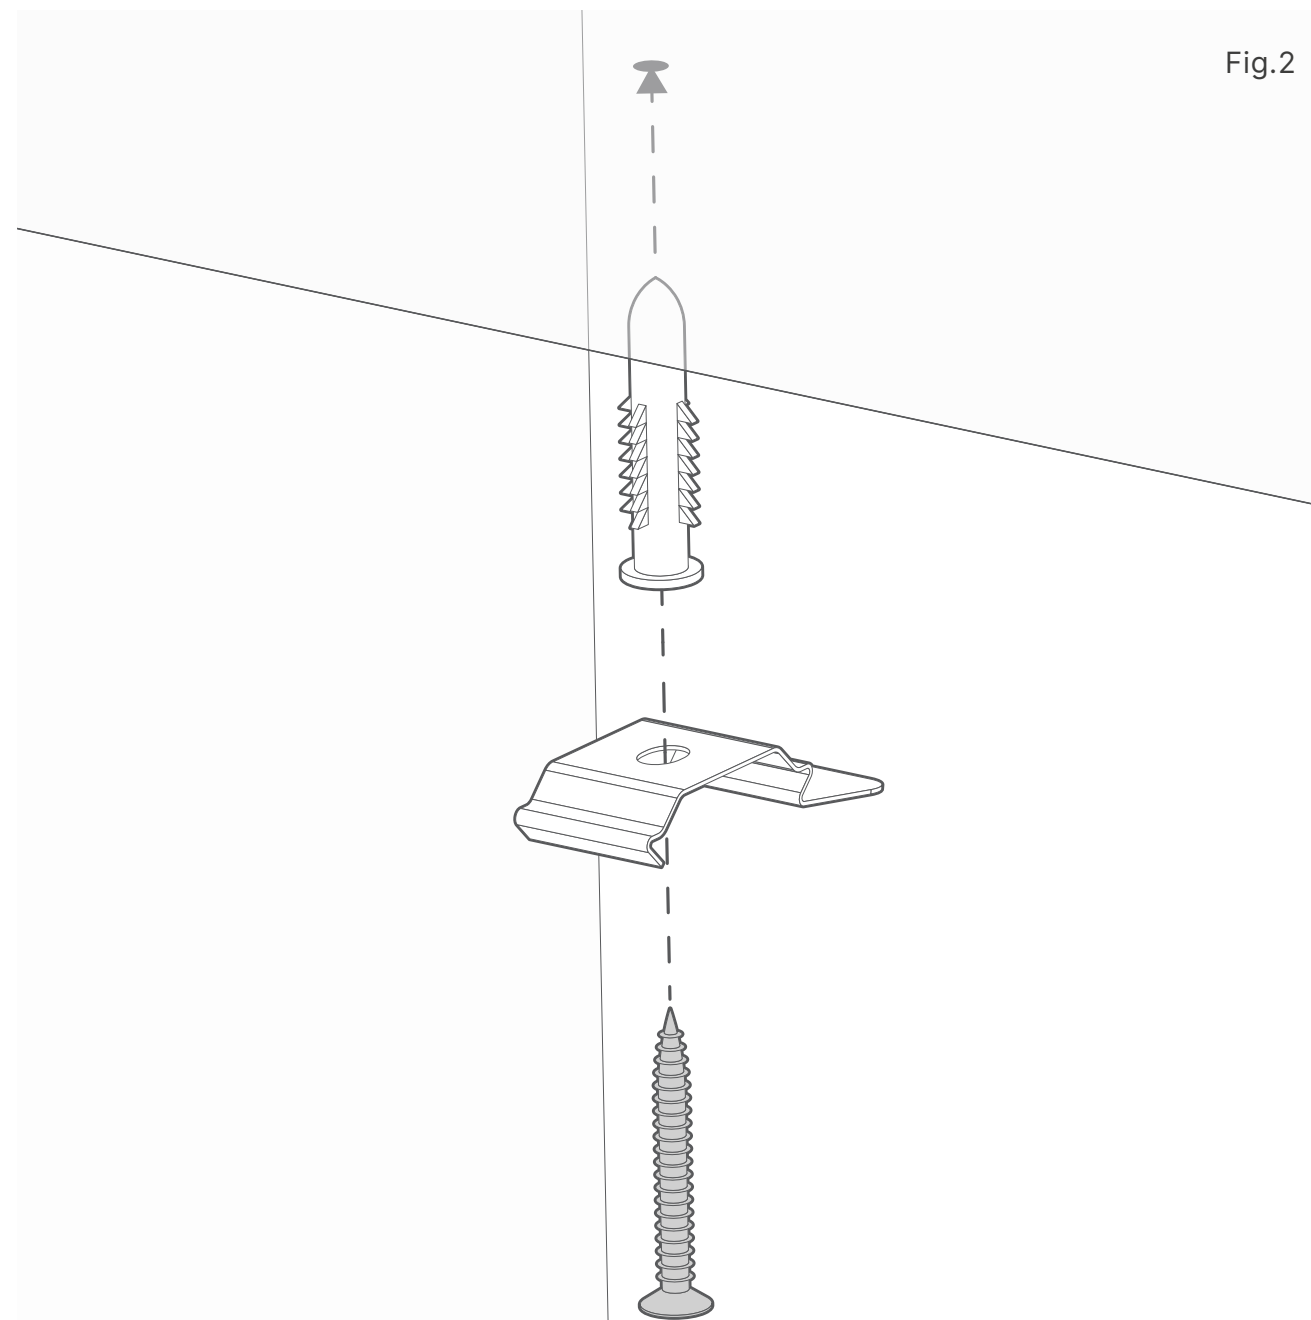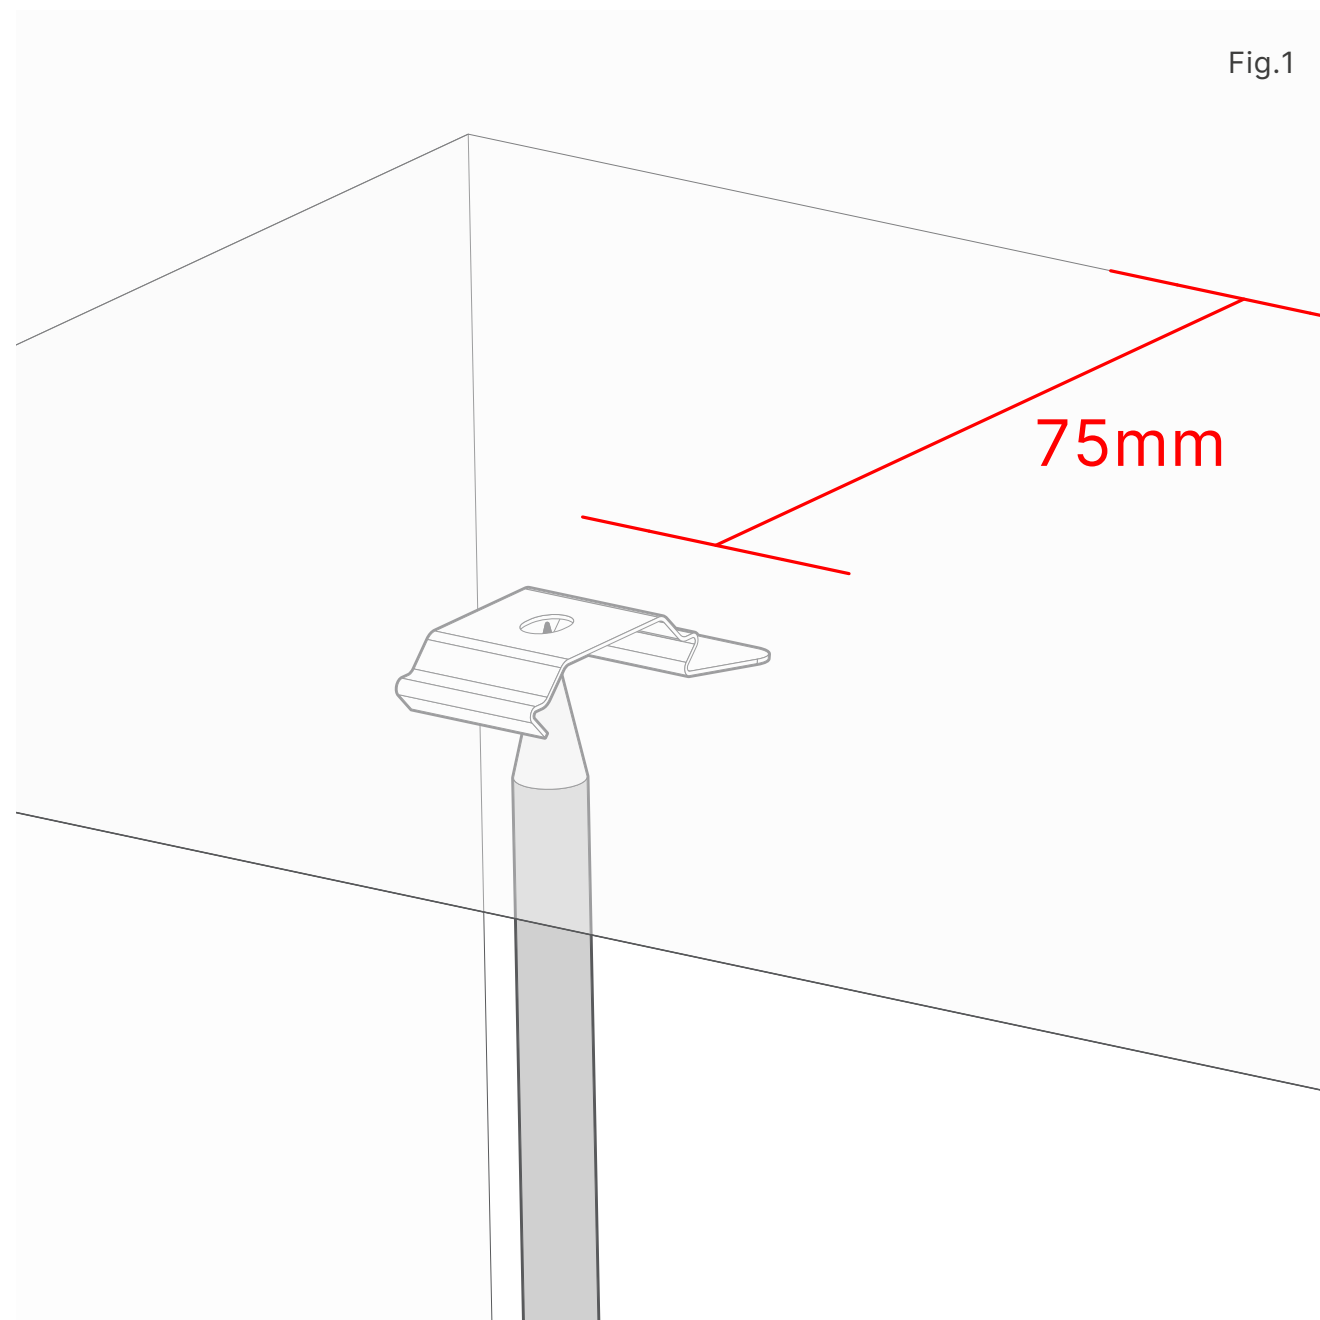

Hold the brackets in position up against the top of the recess and mark the locations of the screw hole on each bracket with a pen or pencil (Fig.1).

Note that, to give the blind room to function properly, the brackets should be located at least 75mm from the back of the recess, or any obstructions that might catch the back of the blind.

Drill a hole at each mark, then use the screws and wall plugs provided to secure the brackets in place (Fig.2).

Face-fixing the brackets:

Fig.3


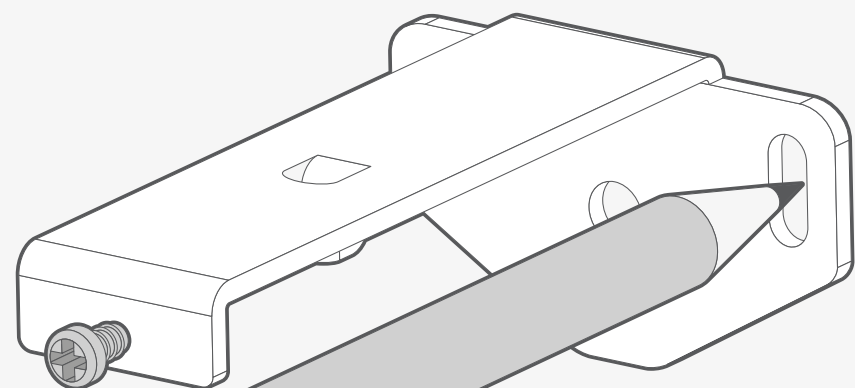


Fig.4

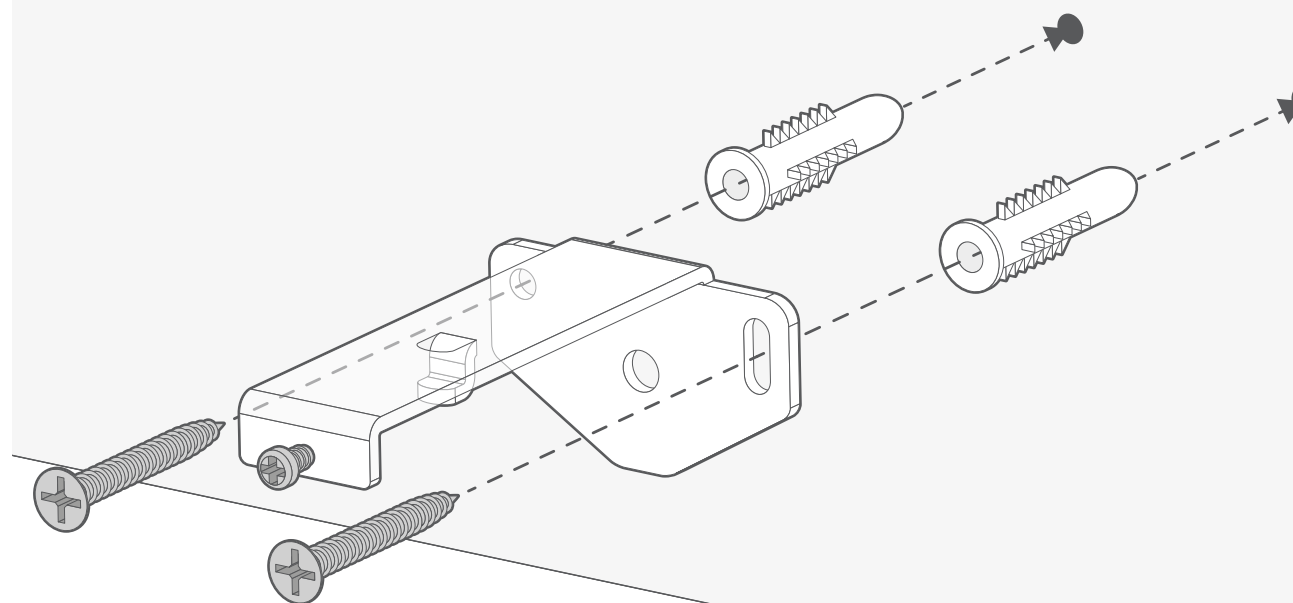

Hold the brackets in position up against the wall and mark the locations of the screw holes on each bracket with a pen or pencil (Fig.3). The bracket locations should match the top corners of where you took your measurements originally.


Drill a hole at each mark, then use the screws and wall plugs provided to secure the brackets in place (Fig.4).

Note: when positioning the brackets, take a moment to make sure that they're level, and that they're an equal distance each side from the edge of the recess.


SECTION 3 | INSTALLING THE BLIND'S HEADRAIL

Page 9 / 16


Section 3

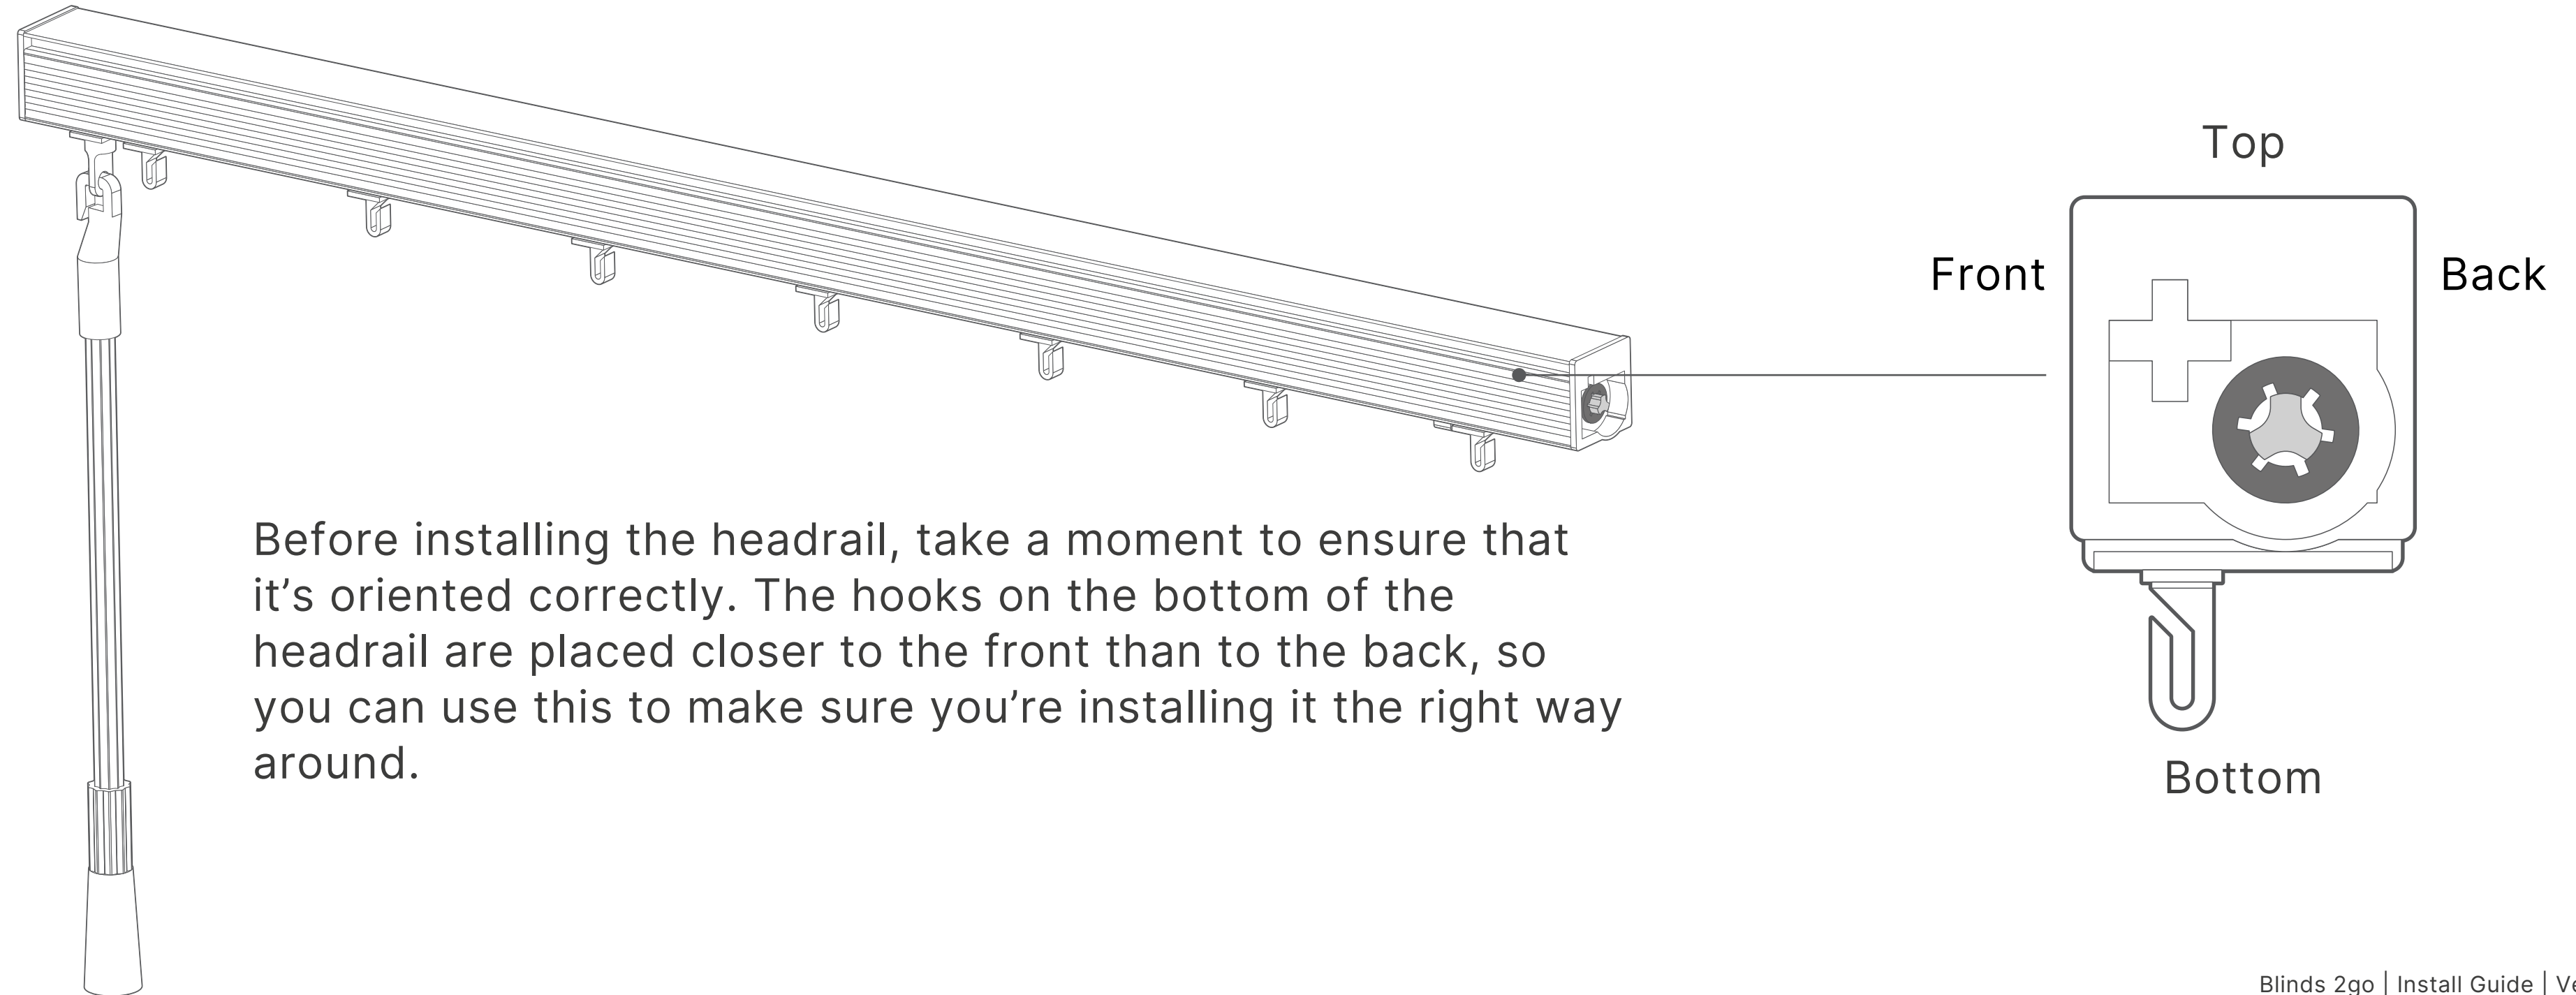

Installing into top-fixed the brackets (for face-fixed brackets, skip to page 11):

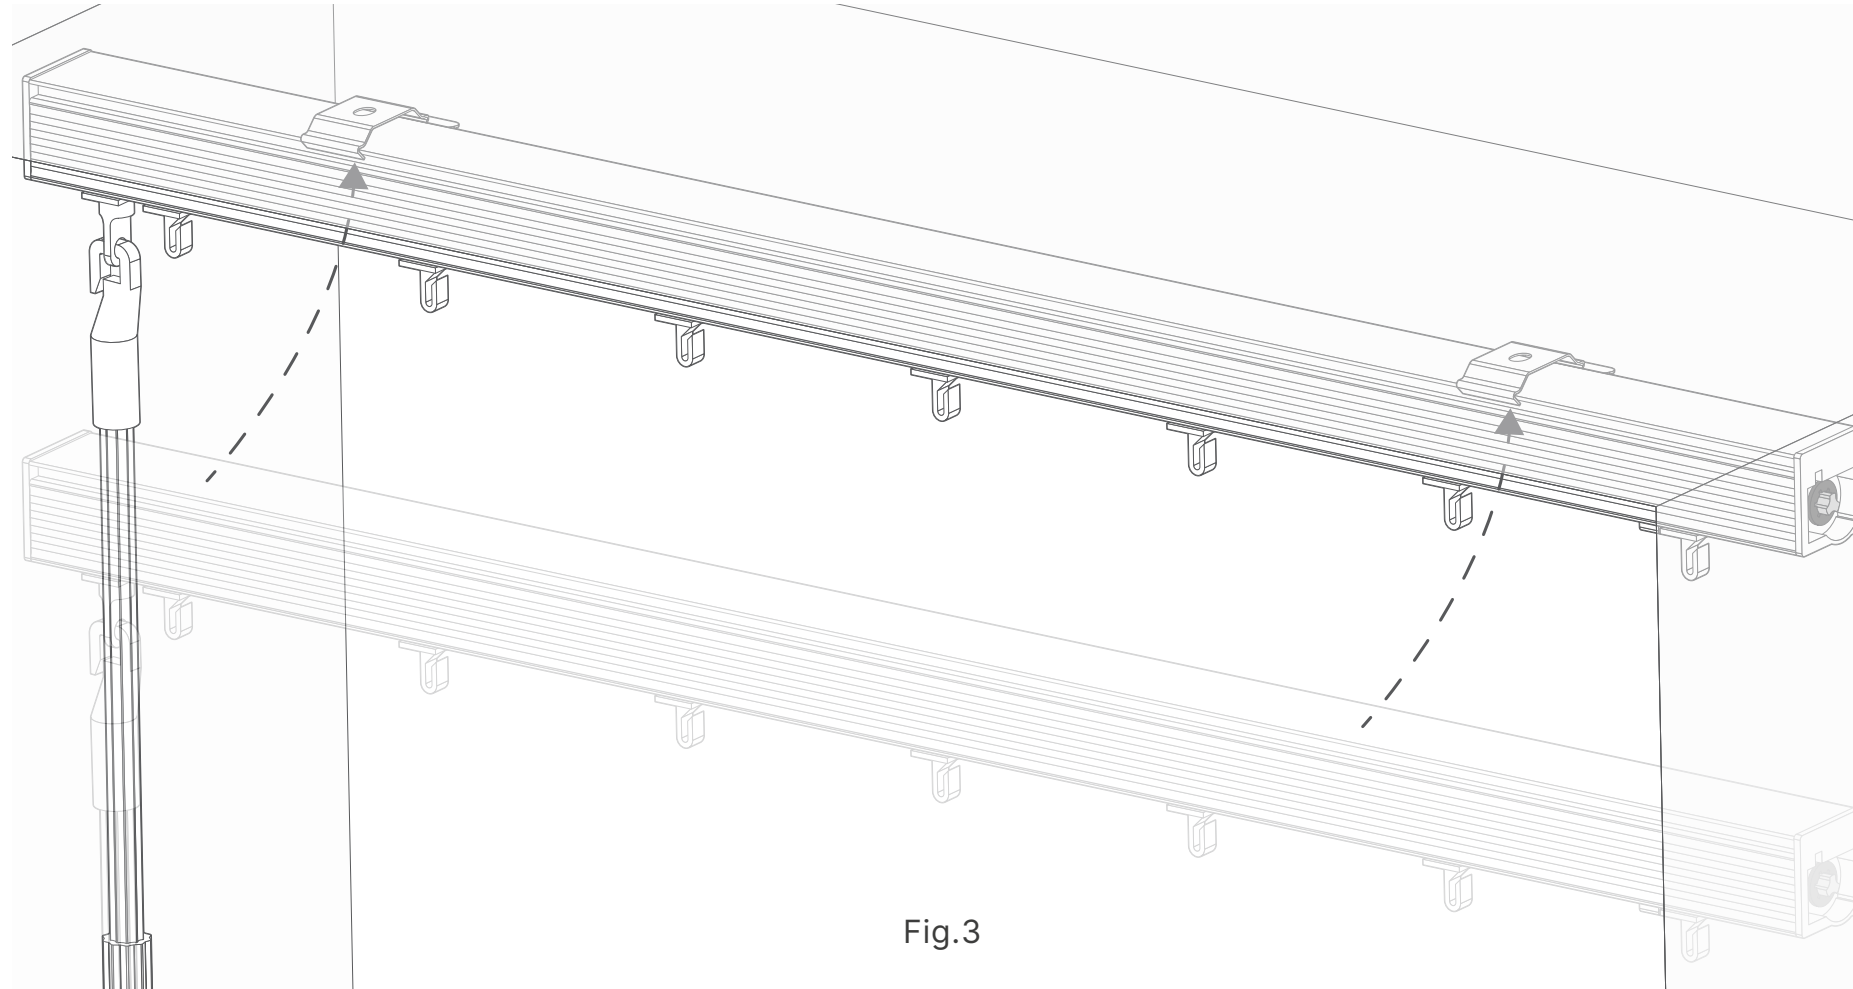

Hook the lip at the front of the blind's headrail into the front hook of the bracket, then push up against the brackets until the rail snaps into place (Fig.3 / Fig.4).

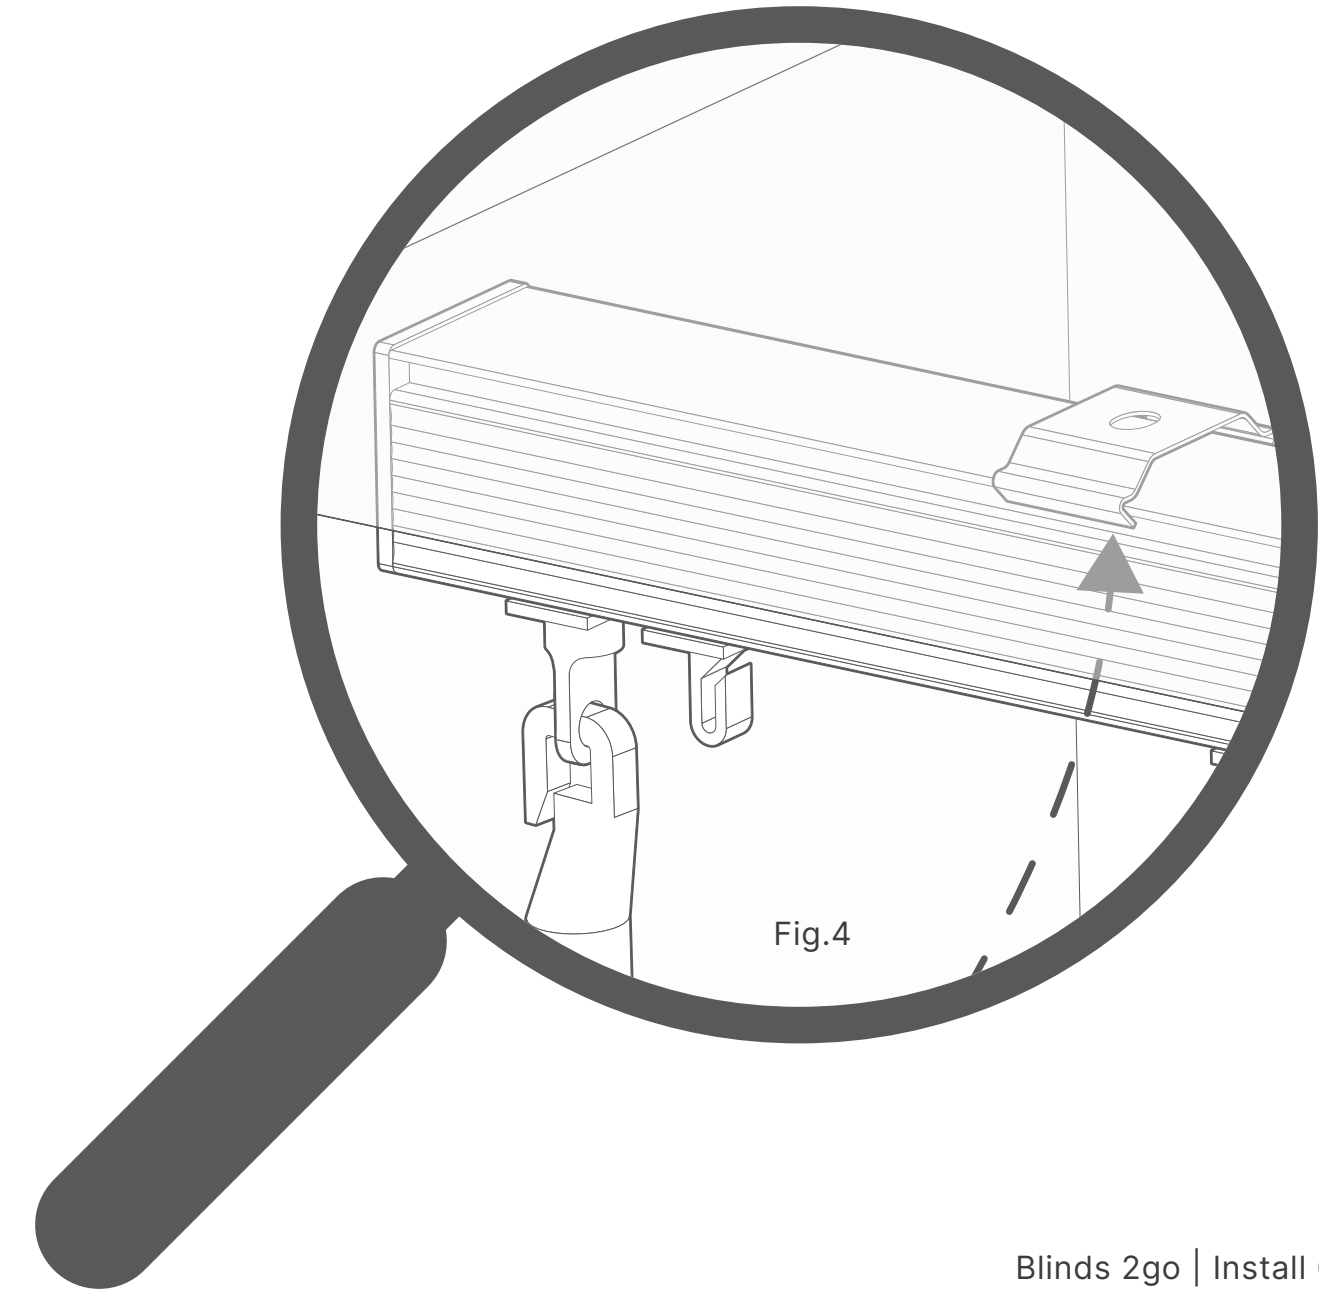

Installing into face-fixed the brackets:

Fig.5

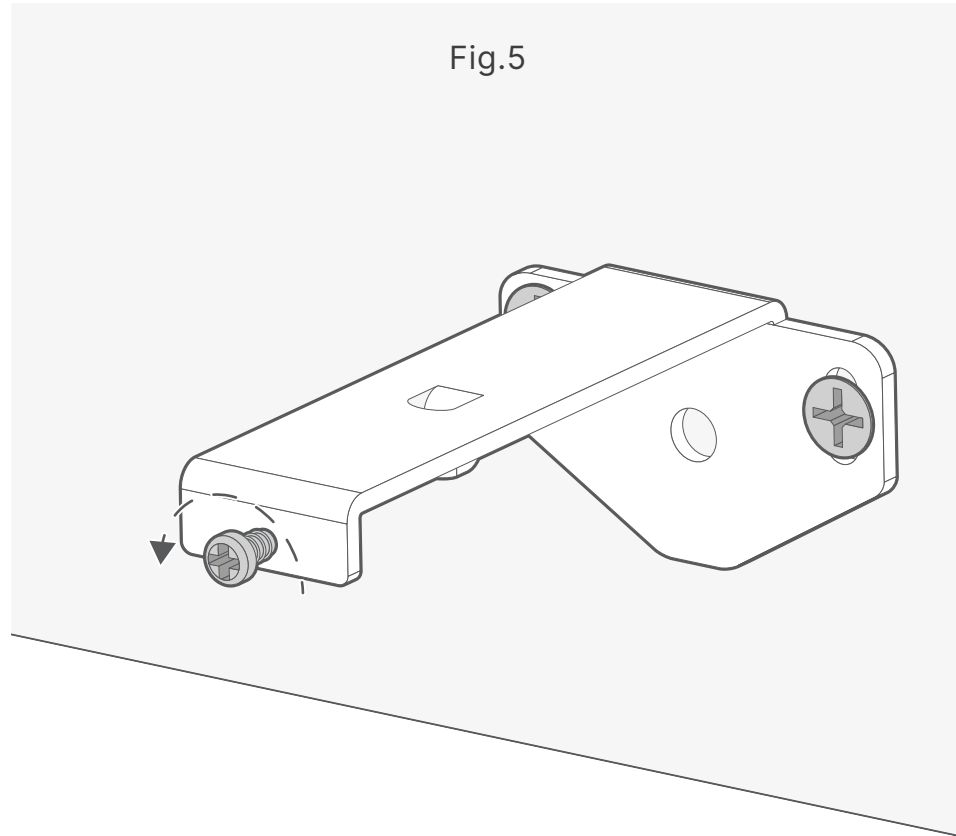


Fig.6



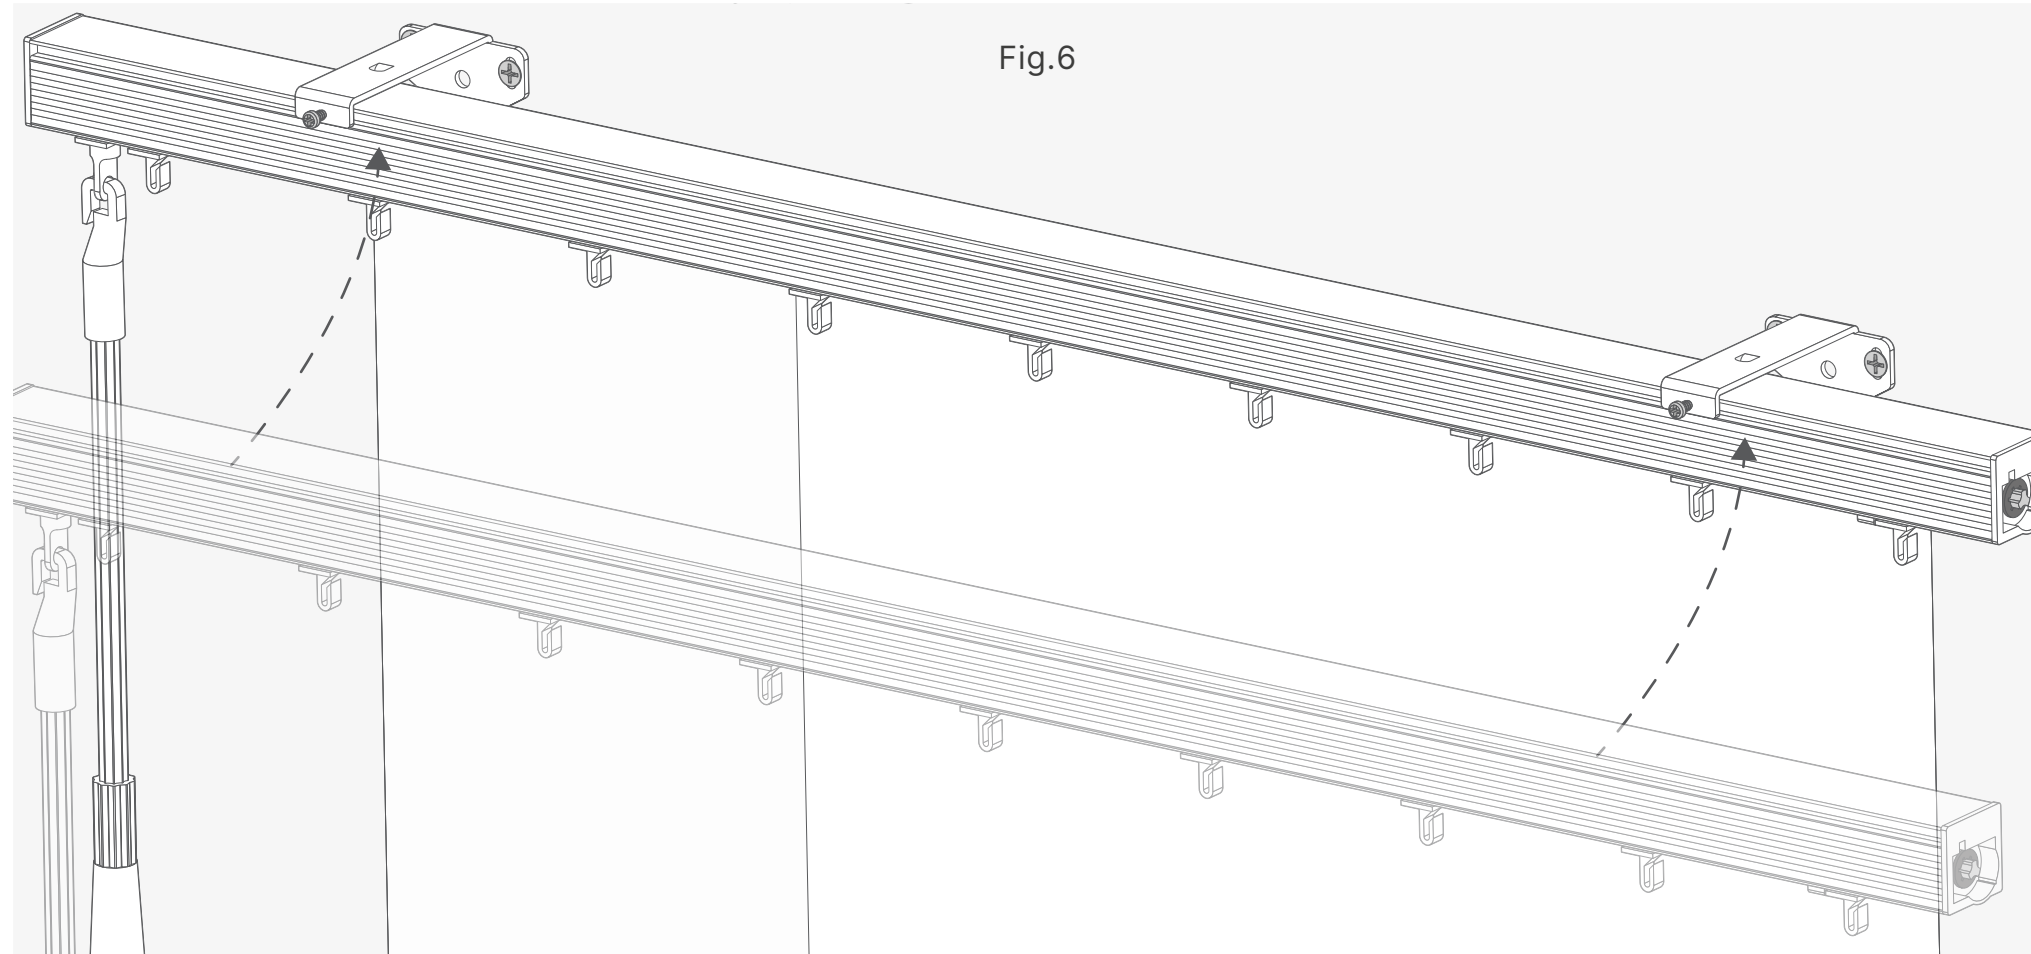



Fig.7

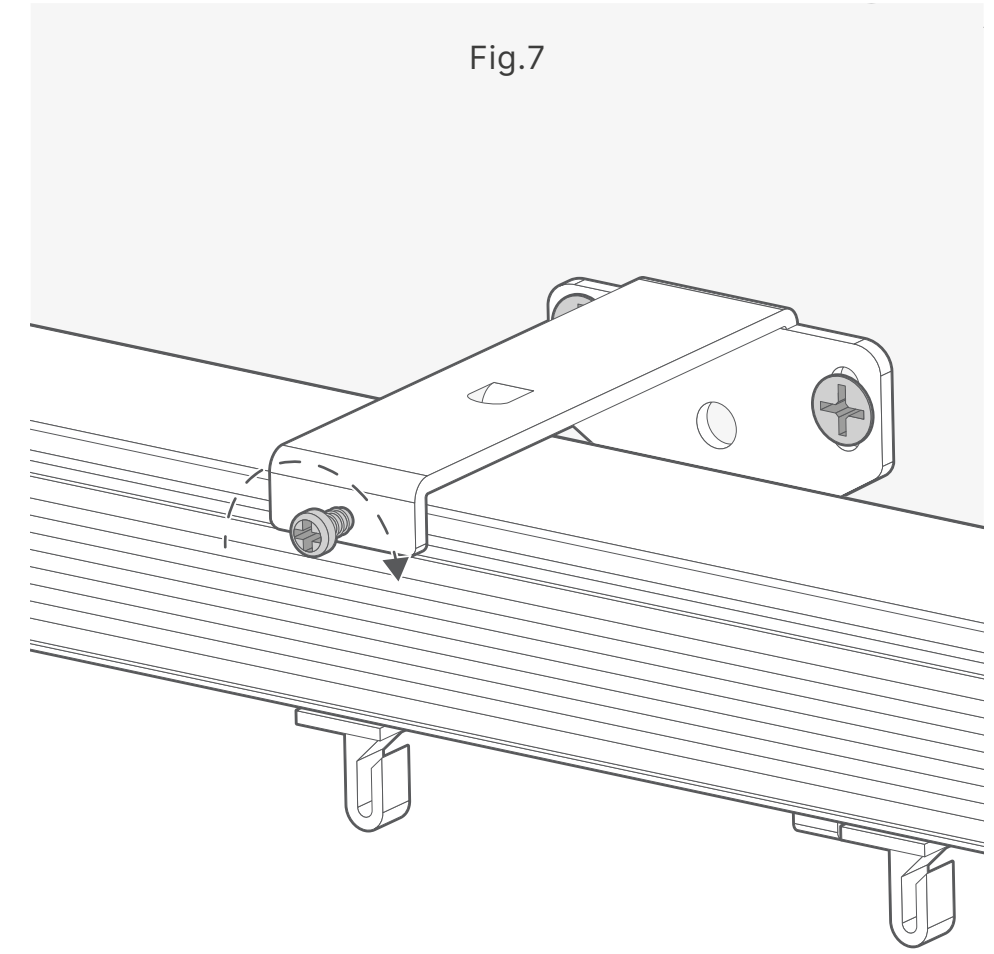

Loosen the screw in the front of each of the brackets, but don't remove it (Fig.5). Raise the headrail into the brackets (Fig.6), then hold it steady whilst you tighten the screws in the front of the brackets (Fig.7).

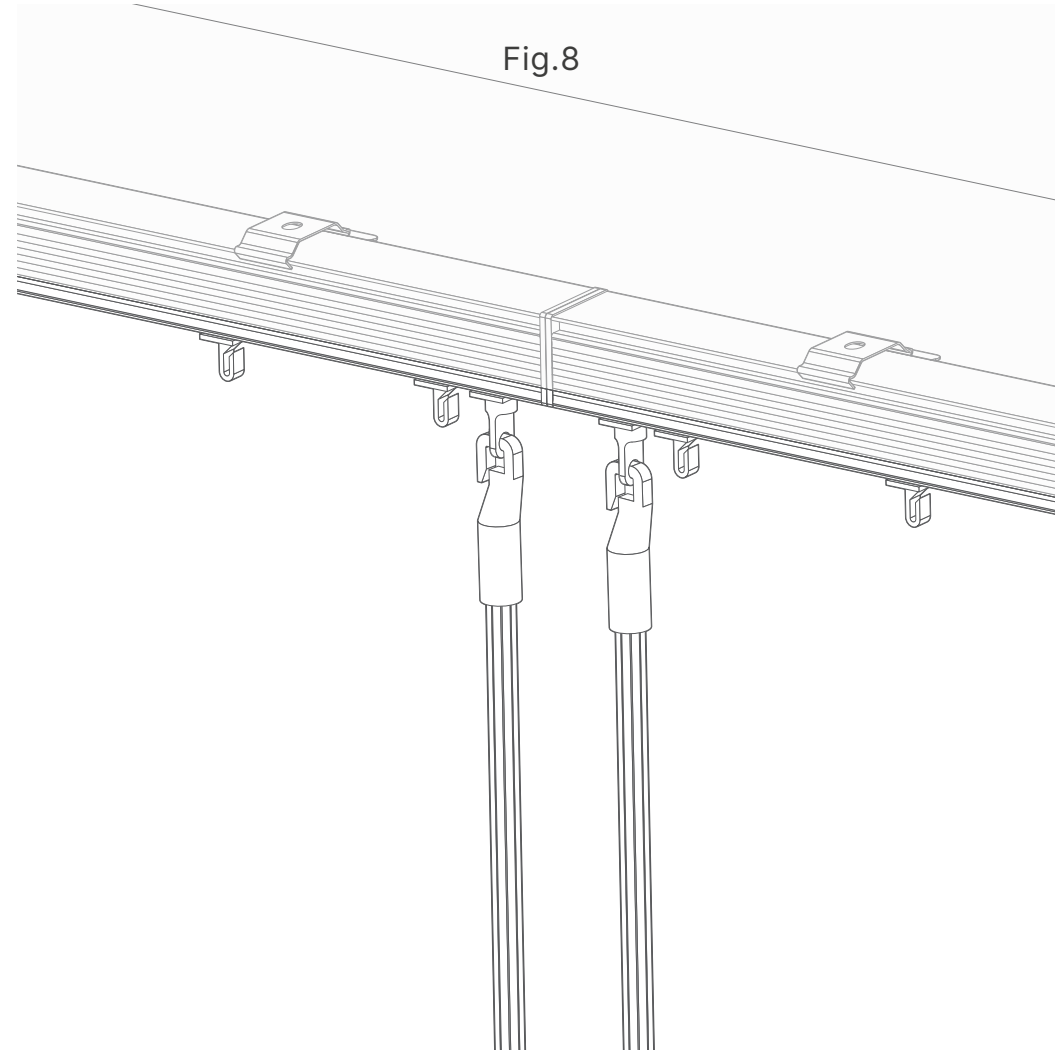

Wider blinds supplied with 2 headrails are fitted in exactly the same way - note that in this case the control wands will sit beside each other in the centre of the window (Fig.8).

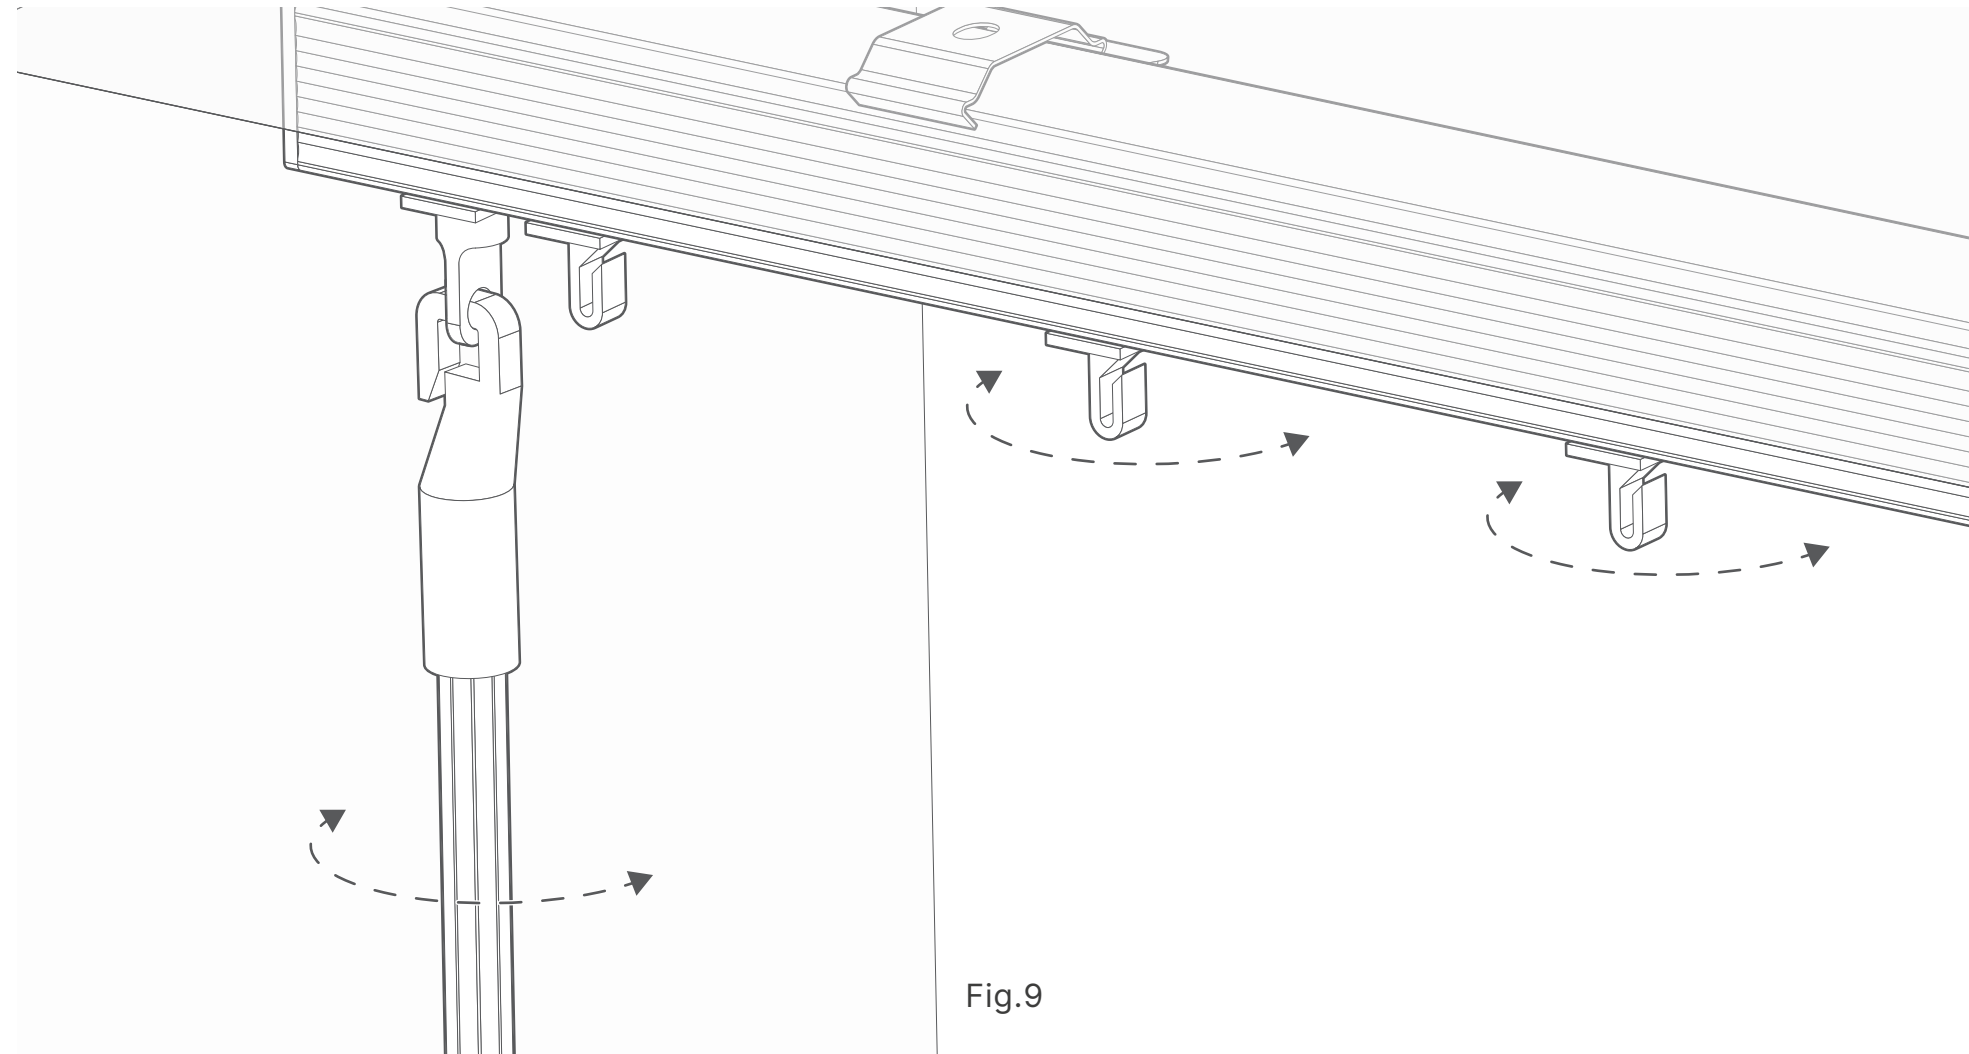

Before attaching the louvres, take a moment to make sure the hooks in the headrail are all aligned. Twist the wand fully in one direction, then fully in the other, checking that all the hooks are turning smoothly as you do so (Fig.9). Then turn the hooks so that they're all facing to the side.

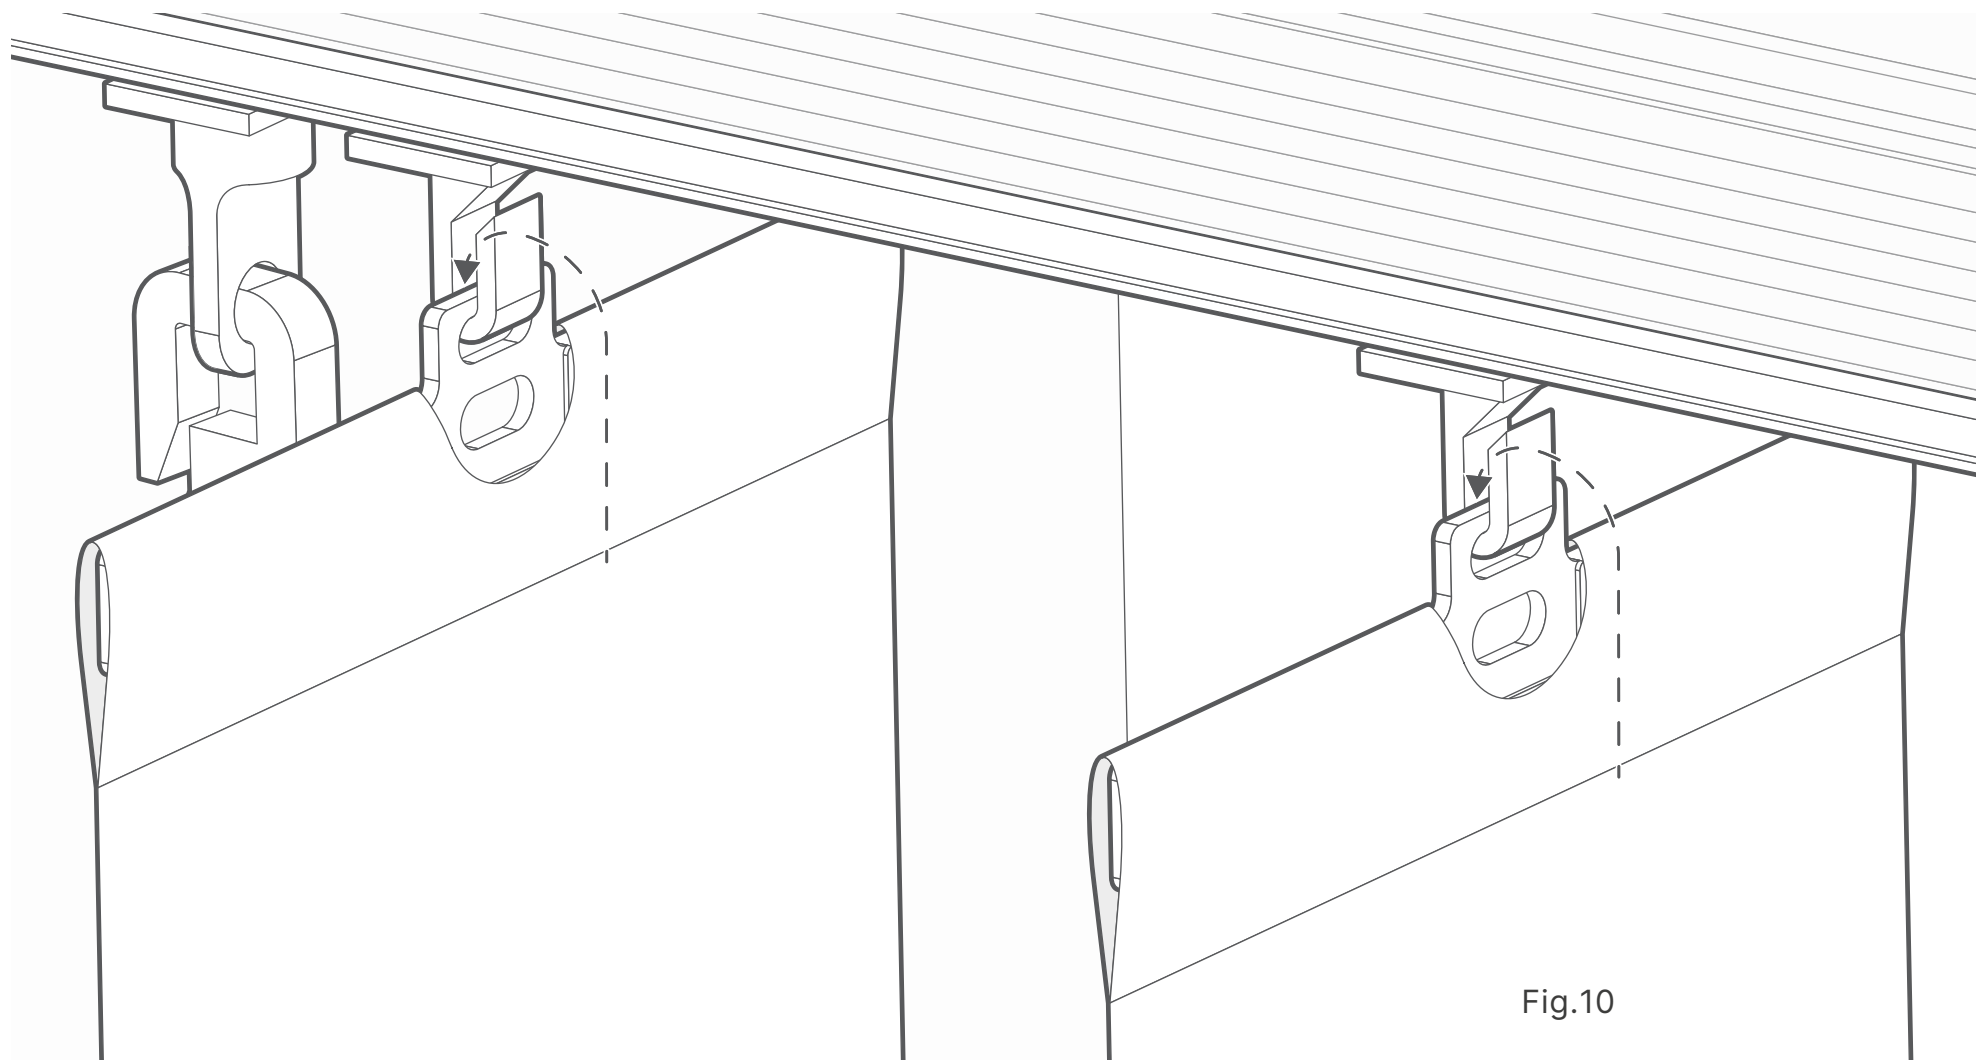


Fig.10

Hook the louvres onto the hooks into the headrail one by one, ensuring that they're all facing the same direction (Fig.10).



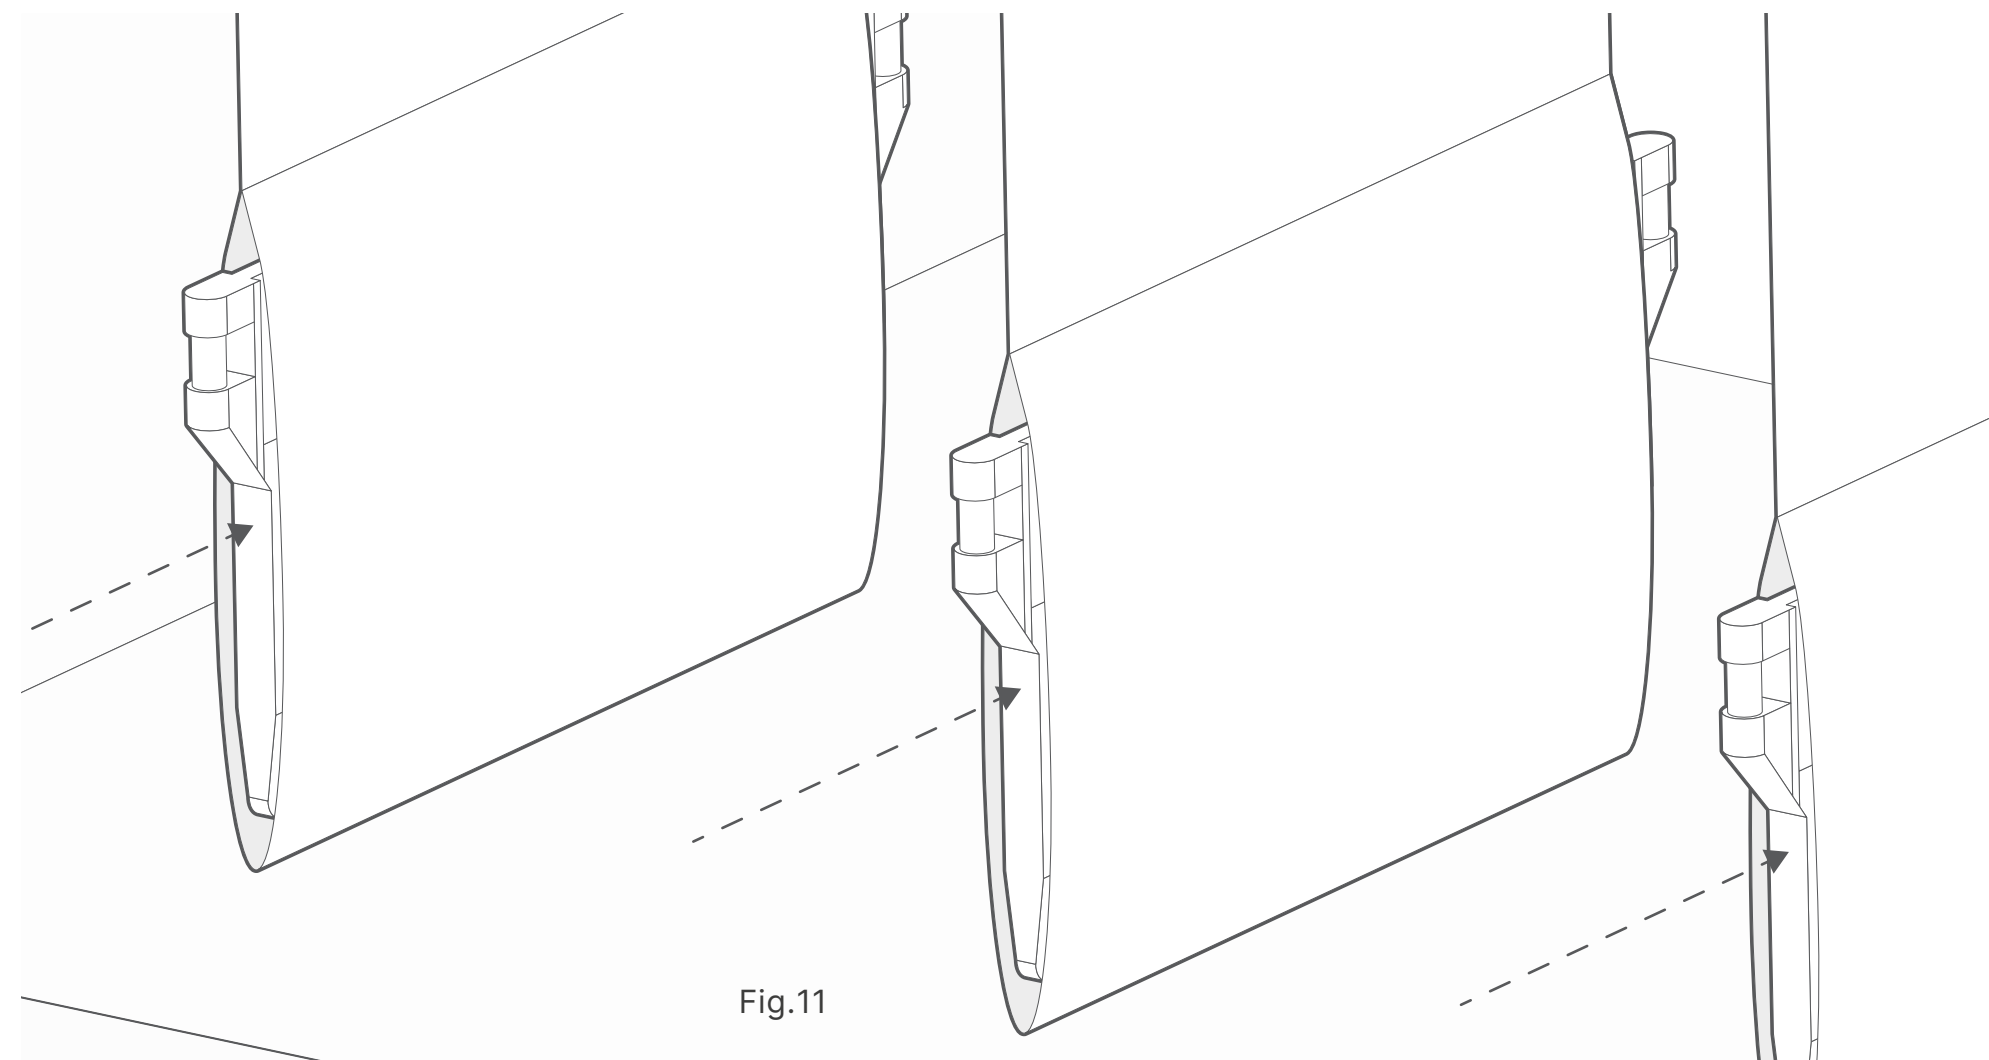


Fig.11


Slot the weights into the bottom pocket of each louvre (Fig.11).

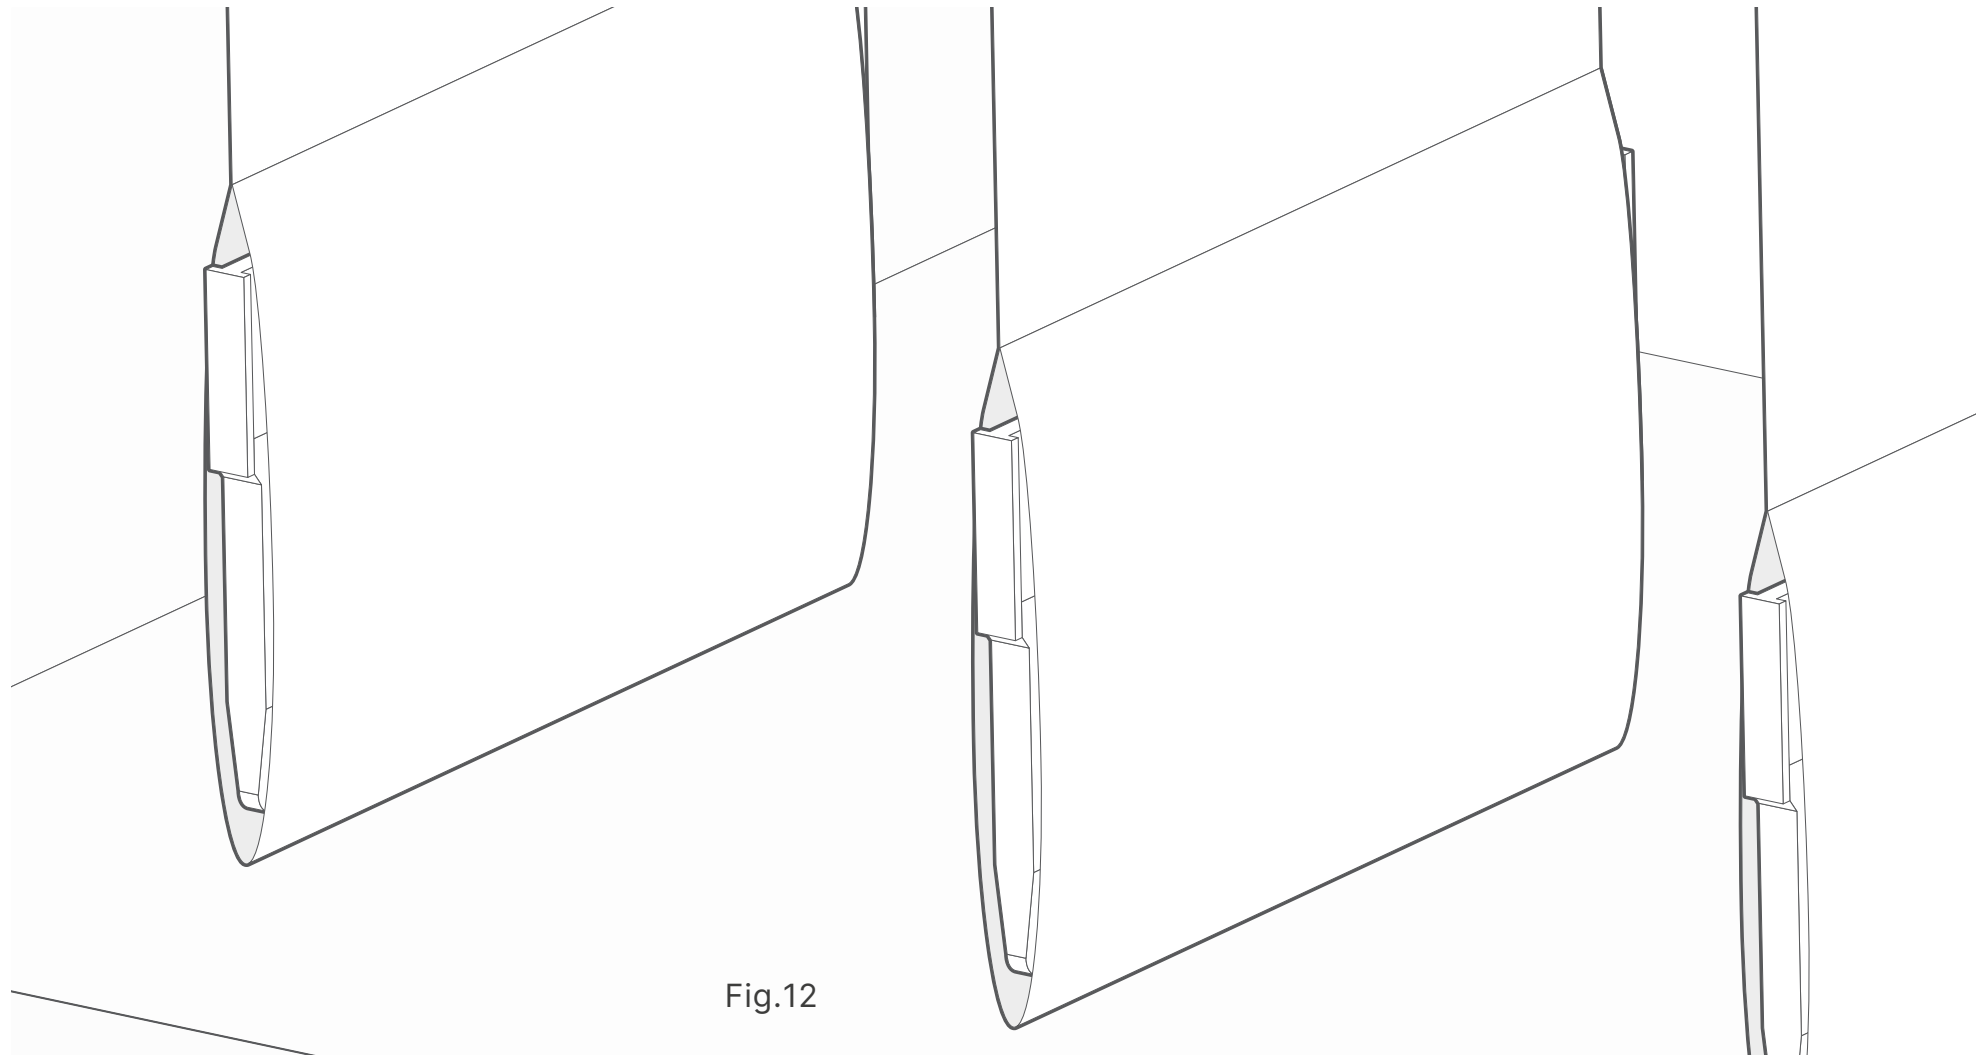

Note that if you have chainless weights then once the weights are inserted, your installation is complete (Fig.12). If not, then the last thing to do is to clip on the stabilising chain.

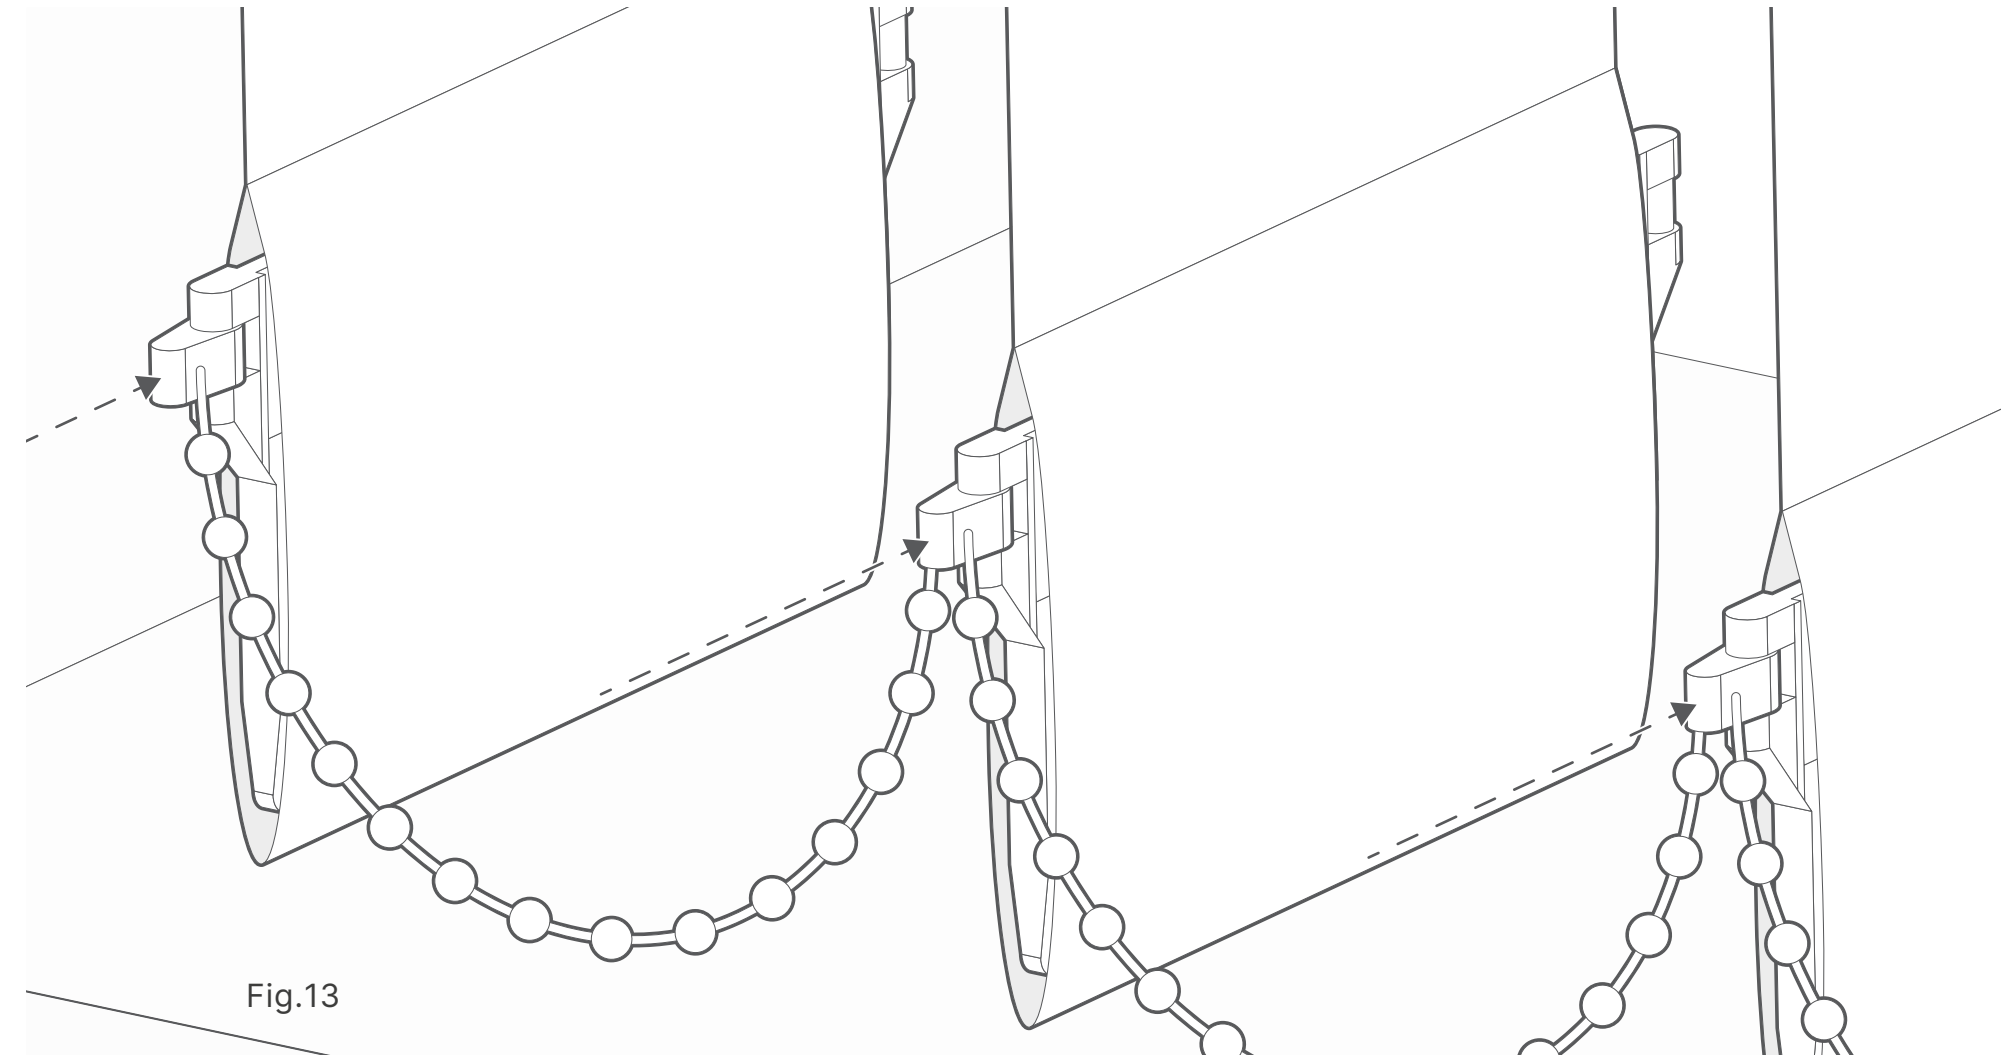

Starting at one end, clip the stabilising chain onto the front of the weights (Fig.13). Do not cut or trim the chain until you have it clipped onto the front of every louvre.

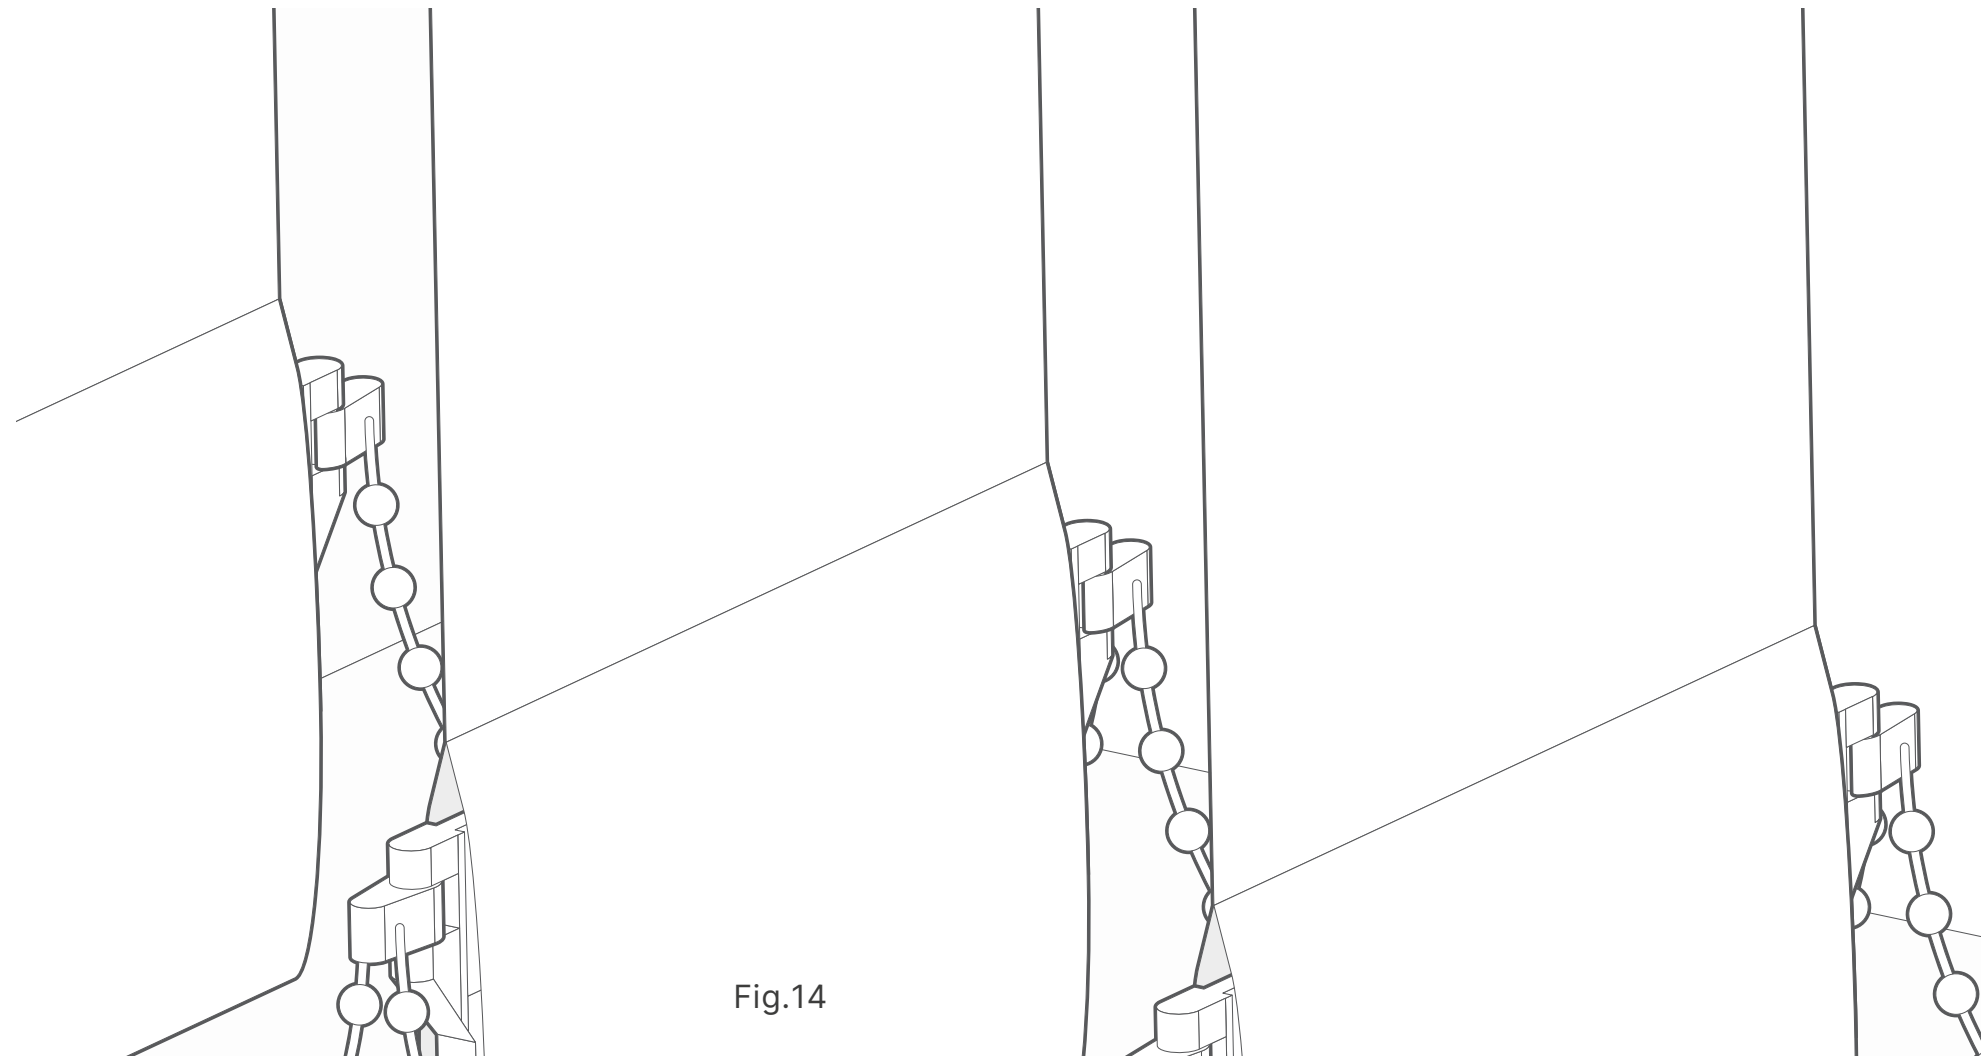

And that's it! Your beautiful new Vertical Blind is fully installed and ready to enjoy...

Once you've covered the front of the louvres, use a pair of scissors to cut off the remaining stabilising chain and clip it onto the back of the weights (Fig.14).